

# DW7QSXSA-1



Product Family	Dishwashers
Commercial width	60 cm
Commercial height	85 cm
Installation	Free-standing
N° baskets	3, FlexiDuo
EAN code	8017709273118



## Programs



N. of programmes	10+1	Intense	Yes
Washing temperatures	38, 45, 50, 65, 70 °C	Self clean	Yes
Soak	Yes	Hygiene 99,9%	Yes
Rapid 27'		1/2 load	
Express 27'	Yes	Delicate	Yes
Glass	Yes	ECO Quick	
ECO	Yes	Delicate and Quick	
Green express	Yes	Normal Quick	
Normal		Strong and fast	
Mix	Yes	Express 60'	Yes
Ultraclean			

## Options



Dry Assist+ option	Yes	Options for tabs	
Delay timer option	Up to 24 hours	FlexiTabs	
Extra dry option		Quick Time option	
1/2 load FlexiZone option	Yes	Special programs option	Yes

## Baskets



<b>Basket colour</b>	Grey	<b>Largest loadable dish in upper basket</b>	19,0 cm
<b>Basket components colour</b>	Grey	<b>Lower Basket</b>	With 2 foldable racks
<b>Handle</b>	In plastic on upper and lower basket	<b>Lower basket with anti-drip inserts</b>	Yes
<b>Upper Basket</b>	With 1 foldable rack	<b>Largest loadable dish in lower basket</b>	30,0 cm
<b>Height adjustment of the upper basket</b>	On three levels (5 cm)	<b>Colour Inner Components</b>	Blue anti drop inserts, Blue handles, Blue Orbital


## Technical Features



<b>Width (mm)</b>	598 mm	<b>Water softener</b>	With electronic setting
<b>Depth (mm)</b>	600 mm	<b>Flood protection system</b>	Total Acquastop
<b>Display type</b>	LED display (3 digit)	<b>Water supply</b>	Single; cold/hot water max. 60°C - energysave with hot water up to 35%
<b>Product Height (mm)</b>	848 mm	<b>Max water hardness</b>	100°FH;58°dH
<b>Controls</b>	Electronic	<b>Drying system</b>	Natural condenser drying
<b>Display</b>	Delayed start, Programme time indicator, Time to end indication	<b>Tube material</b>	Stainless steel
<b>Programme graphics</b>	Symbols	<b>Filter</b>	Stainless steel
<b>On/off indicator</b>	Yes	<b>Concealed heating element</b>	Yes
<b>Salt light indicator</b>	Light	<b>Hinges</b>	Self balancing with fixed hinges
<b>Rinse aid indicator</b>	Light	<b>Adjustable feet</b>	Just for levelling
<b>Progress indicator</b>	Yes	<b>Back cover</b>	Yes, with covered counterweight
<b>End of cycle indicator</b>	On display, with acoustic signal	<b>Depth of dishwasher with open door (mm)</b>	1168
<b>Washing system</b>	Orbital	<b>Removable top</b>	Yes, with optional KIT
<b>Third spray arm</b>	Single		

## Electrical Connection

<b>Plug</b>	(M) Sud Africa	<b>Frequency (Hz)</b>	50 Hz
<b>Connected power</b>	1800 W	<b>Type of connection</b>	Single-phase
<b>Current</b>	10 A	<b>Power supply cable length</b>	140 cm
<b>Voltage</b>	220-240 V		

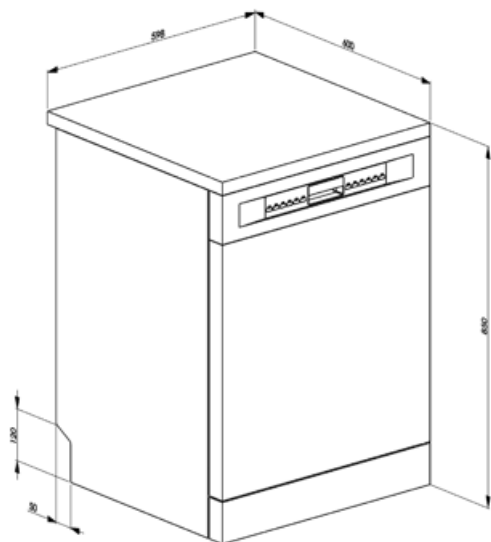


---

## Not included accessories

---

### KITGH

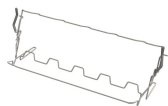


Kit glass holder. It has to be fitted on the first basket but only if there are foldable racks

### KITPLV2







 
















Kit extension for dishwasher and washing machine: lenght mt. 2

### KITINC



## Symbols glossary

			To improve the drying of dishes without leaving stains.
	Delay Timer: Option to postpone the start of the desired programme by up to 24 hours in order to programme the dishwasher to run at the desired time.		Fingerprint proof stainless steel: Fingerprint proof stainless steel keeps stainless steel looking as good as new.
	FlexiDuo: The FlexiDuo 3rd cutlery basket allows you to arrange cutlery or small cups, ladles, or bulky utensils however you like: it consists of two separate and moveable modules.		FlexiZone: The ½ load flexizone allows you to wash a reduced load saving energy, water and time and there are no restrictions on where the items are placed.
	Noise Level: Excellent insulation and special devices keep noise to a minimum.		Orbital wash system distributes water evenly throughout the 60cm dishwasher cavity, directing water with precision to ensure an excellent wash.
	Delicate: Delicate washing program is designed for delicate dishes which are not heavily soiled.		Eco: Eco, this economic wash programme uses a low amount of water and energy in order to provide the most environmentally friendly cleaning option.
	Mix: The Mix programme is suitable for mixed crockery and everyday pots and pans, without any particular incrustation.		Soak programme: The soak programme provides a rinse to prevent dirt from drying.
	Express 27': The Express 27' programme is a quick wash cycle, at low temperatures, for lightly soiled dishes.		Ultraclean: The Ultraclean option performs a final rinse at a high temperature of 70°C eliminating virtually all bacteria.
	14 place settings: Number of place settings.		Total Acquastop: In addition to the partial Acquastop protection present in all Smeg dishwashers, some models have an electronic device fitted to the water intake hose, which monitors water levels in the machine, detects leaks in the hose and switches off the water supply immediately when necessary.
	System WaterSave ensures the best washing results with minimal water consumption depending on the model of dishwasher.		GREEN EXPRESS Washing programme with low water and energy consumption.
	Dishwasher cleaning cycle. The cycle should be started with the machine empty, without dishes. It is recommended to run the program every 2-3 months, using special dishwasher detergents.		Allows you to enable additional programs when selected together with any wash cycle. After having selected the required wash cycle, press the button (
	The Dry Assist + option, in addition to saving energy, ensures perfect drying of the dishes by opening the door automatically at the end of the washing cycle.		HYGIENE 99.9% High-temperature washing programme. The 75° rinse guarantees the removal of 99.9% of germs and bacteria.