

# DW7QSXSA-1



Product Family	Dishwashers
Commercial width	60 cm
Commercial height	85 cm
Installation	Free-standing
N° baskets	3, FlexiDuo
EAN code	8017709273118

 


## Programs / Functions



N. of programmes	10+1	Mix	Yes
Washing temperatures	38, 45, 50, 65, 70 °C	Intense	Yes
Soak	Yes	Self clean	Yes
Express 27'	Yes	Hygiene 99,9%	Yes
Glass	Yes	Delicate	Yes
ECO	Yes	Express 60'	Yes
Green express	Yes		

## Options



Dry Assist+ option	Yes	1/2 load FlexiZone option	Yes
Delay timer option	Up to 24 hours	Special programs option	Yes

## Baskets



Basket colour	Grey	Largest loadable dish in upper basket	19,0 cm
Basket components colour	Grey	Lower Basket	With 2 foldable racks
Handle	In plastic on upper and lower basket	Lower basket with anti-drip inserts	Yes
Upper Basket	With 1 foldable rack	Largest loadable dish in lower basket	30,0 cm

Height adjustment of the upper basket	On three levels (5 cm)	Colour Inner Components	Blue anti drop inserts, Blue handles, Blue Orbital
---------------------------------------	------------------------	-------------------------	--


## Technical Features



Width (mm)	598 mm	Water softener	With electronic setting
Depth (mm)	600 mm	Flood protection system	Total Acquastop
Display type	LED display (3 digit)	Water supply	Single; cold/hot water max. 60°C - energysave with hot water up to 35%
Product Height (mm)	848 mm	Max water hardness	100°FH;58°dH
Controls	Electronic	Drying system	Natural condenser drying
Display	Delayed start, Programme time indicator, Time to end indication	Tub material	Stainless steel
Programme graphics	Symbols	Filter	Stainless steel
On/off indicator	Yes	Concealed heating element	Yes
Salt light indicator	Light	Hinges	Self balancing with fixed hinges
Rinse aid indicator	Light	Adjustable feet	Just for levelling
Progress indicator	Yes	Back cover	Yes, with covered counterweight
End of cycle indicator	On display, with acoustic signal	Depth of dishwasher with open door (mm)	1168
Washing system	Orbital	Removable top	Yes, with optional KIT
Third spray arm	Single		

## Electrical Connection

Plug	(M) Sud Africa	Frequency (Hz)	50 Hz
Connected power	1800 W	Type of connection	Single-phase
Current	10 A	Power supply cable length	140 cm
Voltage	220-240 V		

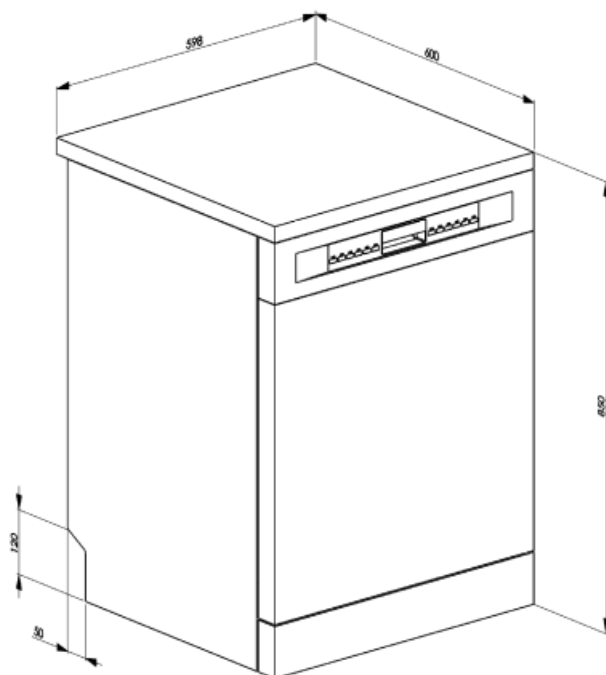

---

 
## Not included accessories

---



### KITPLV2




 

















Kit extension for dishwasher and washing machine: lenght mt. 2



### KITGH

Kit glass holder. It has to be fitted on the first basket but only if there are foldable racks

## Symbols glossary (TT)

	To improve the drying of dishes without leaving stains.		Delay Timer: Option to postpone the start of the desired programme by up to 24 hours in order to programme the dishwasher to run at the desired time.
	A++: Energy efficiency class A++ helps to save up to 20% energy compared to class A. Maximum performance with minimum consumption is guaranteed.		The Dry Assist + option, in addition to saving energy, ensures perfect drying of the dishes by opening the door automatically at the end of the washing cycle.
	FlexiDuo: The FlexiDuo 3rd cutlery basket allows you to arrange cutlery or small cups, ladles, or bulky utensils however you like: it consists of two separate and moveable modules.		FlexiZone: The ½ load flexizone allows you to wash a reduced load saving energy, water and time and there are no restrictions on where the items are placed.
	GREEN EXPRESS Washing programme with low water and energy consumption.		Noise Level: Excellent insulation and special devices keep noise to a minimum.
	Orbital wash system distributes water evenly throughout the 60cm dishwasher cavity, directing water with precision to ensure an excellent wash.		Delicate: Delicate washing program is designed for delicate dishes which are not heavily soiled.
	Eco: Eco, this economic wash programme uses a low amount of water and energy in order to provide the most environmentally friendly cleaning option.		Mix: The Mix programme is suitable for mixed crockery and everyday pots and pans, without any particular incrustation.
	Soak programme: The soak programme provides a rinse to prevent dirt from drying.		Express 27': The Express 27' programme is a quick wash cycle, at low temperatures, for lightly soiled dishes.
	Ultraclean: The Ultraclean option performs a final rinse at a high temperature of 70°C eliminating virtually all bacteria.		14 place settings: Number of place settings.
	Total Acquastop: In addition to the partial Acquastop protection present in all Smeg dishwashers, some models have an electronic device fitted to the water intake hose, which monitors water levels in the machine, detects leaks in the hose and switches off the water supply immediately when necessary.		System WaterSave ensures the best washing results with minimal water consumption depending on the model of dishwasher.
	Dishwasher cleaning cycle. The cycle should be started with the machine empty, without dishes. It is recommended to run the program every 2-3 months, using special dishwasher detergents.		Allows you to enable additional programs when selected together with any wash cycle. After having selected the required wash cycle, press the button (
	HYGIENE 99.9% High-temperature washing programme. The 75° rinse guarantees the removal of 99.9% of germs and bacteria.		