

DW8610



| | |
|--------------------------|---------------------------|
| Product Family | Dishwashers |
| Commercial height | STANDARD HEIGHT |
| Installation | Fully-integrated built-in |
| N° baskets | 3, Flexi |
| Motor | Inverter |
| EAN code | 8017709354794 |



Programs



| | | | |
|-----------------------------|-----------------------|------------------------|-----|
| N. of programmes | 10 | Normal | Yes |
| Washing temperatures | 30, 40, 50, 65, 75 °F | Rinse | Yes |
| Auto sensor 45-65 | Yes | Eco express | Yes |
| Intense | Yes | Express 60' | Yes |
| Self clean | Yes | Pots & Pans | Yes |
| Delicate | Yes | | |

Options



| | | | |
|----------------------------------|----------------|-----------------------------------|-----|
| Dry Assist+ option | Yes | Intensive wash zone option | Yes |
| Delay timer option | Up to 24 hours | | |
| 1/2 load FlexiZone option | Yes | Special programs option | Yes |

Baskets



| | | | |
|--|--------------------------|--|------------------|
| Basket colour | Grey | Lower Basket | With fixed racks |
| Upper Basket | With central fixed racks | Lower basket with anti-drip inserts | Yes |
| Height adjustment of the upper basket | On three levels (5 cm) | Colour Inner Components | Sage Leaf |
| Largest loadable dish in upper basket | 19,0 inches | Cutlery basket | Yes |


Technical Features



| | | | |
|--------------------------------|---|--|---|
| Width (mm) | 23 9/16 " | Max water hardness | 100°FH;58°dH |
| Depth (mm) | 21 5/8 " | Drying system | Natural condenser drying, with Dry Assist + automatic door opening system at the end of the cycle |
| Display type | LED display (3 digit) | Tub material | Stainless steel |
| Product Height (mm) | 33 3/4 " | Filter | Stainless steel |
| Display | Delayed start, Programme time indicator | Hinges | Self balancing, Sliding, FLEXIFIT |
| Programme graphics | Written in EN | Min. and max. frontal panel weight | 2 - 11 lbs |
| On/off indicator | Yes | Min. and max plinth height | 50 - 215 mm |
| Rinse aid indicator | Light | Adjustable feet | 7cm, from 860 to 930 mm |
| End of cycle indicator | Acoustic signal | Airborne acoustical noise emissions dBA | 42 dBA |
| Auto switch-off | Yes | Additional gaskets | Yes |
| Washing system | Orbital | Back cover | Yes |
| Third spray arm | Single | Depth of dishwasher with open door (mm) | 1186 mm |
| Turbidity sensor | Yes | Top cover | Metallic sheet |
| Aquatest | | Energy Star | Yes |
| Flood protection system | Single Acquastop | | |

Electrical Connection

| | | | |
|------------------------|--------|----------------------------------|----------------|
| Connected power | 1100 W | Type of connection | Single-phase |
| Current | 13 A | Power supply cable length | 140 " |
| Voltage | 115 V | Plug | (B) NEMA 5-15P |
| Frequency (Hz) | 60 Hz | | |

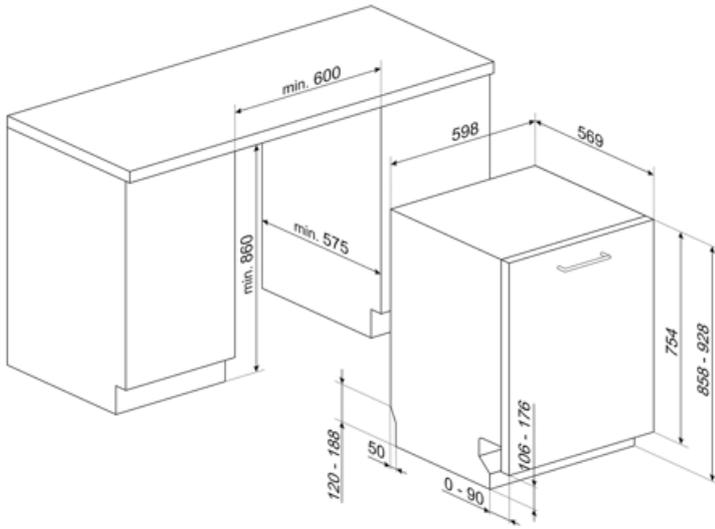

Compatible Accessories

KITFLEXI



KITPL60B

Toekick Kit in White colour with adjustable height and deepness. Can be installed over all the fully integrated and underbench models with variable fulcrum or flexifit hinges.



KITPL60X

Toekick Kit in Stainless Steel with adjustable height and deepness. Can be fitted over all the fully integrated and underbench models with variable fulcrum or flexifit hinges.



KITJBDW



KITPL60N

Toekick Kit in Black colour with adjustable height and deepness. Can be installed over all the fully integrated and underbench models with variable fulcrum or flexifit hinges.



KITPLV2

Kit extension for dishwasher and washing machine: lenght mt. 2



Symbols glossary

| | |
|---|---|
|  <p>Acquastop: Some Smeg dishwashers are equipped with a simple Acquastop: float sensor in the bottom which is necessary to prevent an accidental leakage of water inside the appliance.</p> |  <p>The Aquatest sensor is an electronic sensor that measures the degree of water transparency at the end of the initial soaking phase. Based on the values measured, the sensor sets the most suitable programme, thus obtaining the best washing results with the minimum amount of water.</p> |
|  <p>To improve the drying of dishes without leaving stains.</p> |  <p>Delay Timer: Option to postpone the start of the desired programme by up to 24 hours in order to programme the dishwasher to run at the desired time.</p> |
|  <p>The FlexiFit hinges allow the kitchen panel to slide over the dishwasher door, allowing a minimum kitchen plinth height of 5 cm.</p> |  <p>FlexiZone: The ½ load flexizone allows you to wash a reduced load saving energy, water and time and there are no restrictions on where the items are placed.</p> |
|  <p>Smeg's evolution towards more intelligent and eco-friendly models has led to the choice of Inverter technology, which significantly reduces consumption.</p> |  <p>Noise Level: Excellent insulation and special devices keep noise to a minimum.</p> |
|  <p>Orbital wash system distributes water evenly throughout the 60cm dishwasher cavity, directing water with precision to ensure an excellent wash.</p> |  <p>Auto 45°- 65°: The auto programme regulates the length of a cycle depending on the need for a pre-wash and the number of rinses required.</p> |
|  <p>Delicate: Delicate washing program is designed for delicate dishes which are not heavily soiled.</p> |  <p>PRG_RINSE_72dpi</p> |
|  <p>Ultraclean: The Ultraclean option performs a final rinse at a high temperature of 70°C eliminating virtually all bacteria.</p> |  <p>15 place settings: Number of place settings.</p> |
|  <p>System WaterSave ensures the best washing results with minimal water consumption depending on the model of dishwasher.</p> |  <p>Dishwasher cleaning cycle. The cycle should be started with the machine empty, without dishes. It is recommended to run the program every 2-3 months, using special dishwasher detergents.</p> |
|  <p>SILENT: Wash cycle suitable for normally soiled dishes, even with dried-on residues. Ensures maximum noise reduction and is therefore ideal if you wish to run it during the night.</p> |  <p>Allows you to enable additional programs when selected together with any wash cycle.</p> |
|  <p>The Dry Assist + option, in addition to saving energy, ensures perfect drying of the dishes by opening the door automatically at the end of the washing cycle.</p> | |