


# DW8620

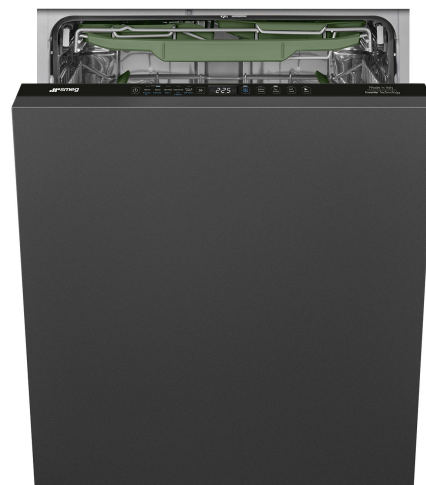

Product Family  
Commercial height  
Installation  
N° baskets  
Motor  
EAN code

Dishwashers  
STANDARD HEIGHT  
Fully-integrated built-in  
3, FlexiDuo  
Inverter  
8017709354855



## Programs



N. of programmes	10	Delicate	Yes
Washing temperatures	38, 45, 50, 55, 65, 70, 75 °F	Normal	Yes
Express 27'	Yes	Rinse	Yes
Auto sensor 45-65	Yes	Eco express	Yes
Intense	Yes	Pots & Pans	Yes
Self clean	Yes		

## Options



Dry Assist+ option	Yes	1/2 load FlexiZone option	Yes
Delay timer option	Up to 24 hours	Special programs option	Yes

## Baskets



Basket colour	Grey	Lower Basket	With 2 foldable racks
Upper Basket	With 1 foldable rack	Lower basket accessories	MultiLoad
Height adjustment of the upper basket	On three levels (5 cm)	Lower basket with anti-drip inserts	Yes
Sliding Guides Extra Glide	Yes	Colour Inner Components	Sage Leaf
Largest loadable dish in upper basket	19,0 inches	Cutlery basket	Yes


## Technical Features



<b>Width (mm)</b>	23 9/16 "	<b>Max water hardness</b>	100°FH;58°dH
<b>Depth (mm)</b>	21 5/8 "	<b>Drying system</b>	Natural condenser drying, with Dry Assist + automatic door opening system at the end of the cycle
<b>Display type</b>	LED display (3 digit)	<b>Tube material</b>	Stainless steel
<b>Product Height (mm)</b>	33 3/4 "	<b>Filter</b>	Stainless steel
<b>Display</b>	Delayed start, Programme time indicator	<b>Concealed heating element</b>	Yes
<b>Programme graphics</b>	Written in EN	<b>Hinges</b>	Self balancing, Sliding, FLEXIFIT
<b>On/off indicator</b>	Yes	<b>Min. and max. frontal panel weight</b>	2 - 11 lbs
<b>Salt light indicator</b>	Light	<b>Min. and max plinth height</b>	50 - 215 mm
<b>Rinse aid indicator</b>	Light	<b>Adjustable feet</b>	7cm, from 860 to 930 mm
<b>End of cycle indicator</b>	ActiveLight	<b>Airborne acoustical noise emissions dBA</b>	40 dBA
<b>Auto switch-off</b>	Yes	<b>Additional gaskets</b>	Yes
<b>Washing system</b>	Orbital	<b>Back cover</b>	Yes
<b>Third spray arm</b>	Single	<b>Depth of dishwasher with open door (mm)</b>	1186 mm
<b>Water softener</b>	With electronic setting	<b>Top cover</b>	Metallic sheet
<b>Turbidity sensor Aquatest</b>	Yes	<b>Energy Star</b>	Yes
<b>Flood protection system</b>	Single Acquastop		

## Electrical Connection

<b>Connected power</b>	1100 W	<b>Type of connection</b>	Single-phase
<b>Current</b>	13 A	<b>Power supply cable length</b>	140 "
<b>Voltage</b>	115 V	<b>Plug</b>	(B) NEMA 5-15P
<b>Frequency (Hz)</b>	60 Hz		

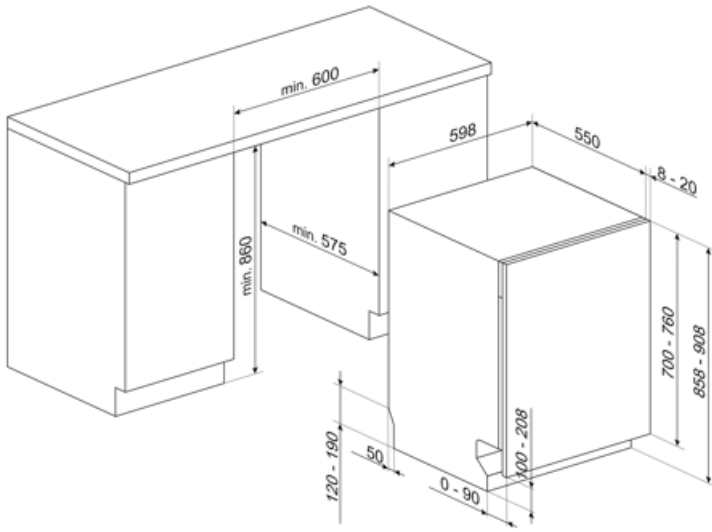

---

## Compatible Accessories

---

### KITFLEXI



### KITPL60B

Toekick Kit in White colour with adjustable height and deepness. Can be installed over all the fully integrated and underbench models with variable fulcrum or flexifit hinges.



### KITPL60X

Toekick Kit in Stainless Steel with adjustable height and deepness. Can be fitted over all the fully integrated and underbench models with variable fulcrum or flexifit hinges.



### KITJBDW



### KITPL60N

Toekick Kit in Black colour with adjustable height and deepness. Can be installed over all the fully integrated and underbench models with variable fulcrum or flexifit hinges.

























### KITPLV2

Kit extension for dishwasher and washing machine: lenght mt. 2



## Symbols glossary

	<p><b>Acquastop:</b> Some Smeg dishwashers are equipped with a simple Acquastop: float sensor in the bottom which is necessary to prevent an accidental leakage of water inside the appliance.</p>		<p><b>Activelight</b> is an led light which projects a red spot onto the floor beneath the dishwasher when the appliance is in use.</p>
	<p>The <b>Aquatest</b> sensor is an electronic sensor that measures the degree of water transparency at the end of the initial soaking phase. Used on the values measured, the sensor sets the most suitable programme, thus obtaining the best washing results with the minimum amount of water.</p>		<p>To improve the drying of dishes without leaving stains.</p>
	<p><b>Delay Timer:</b> Option to postpone the start of the desired programme by up to 24 hours in order to programme the dishwasher to run at the desired time.</p>		<p><b>FlexiDuo:</b> The FlexiDuo 3rd cutlery basket allows you to arrange cutlery or small cups, ladles, or bulky utensils however you like: it consists of two separate and moveable modules.</p>
	<p>The <b>FlexiFit</b> hinges allow the kitchen panel to slide over the dishwasher door, allowing a minimum kitchen plinth height of 5 cm.</p>		<p><b>FlexiZone:</b> The ½ load flexizone allows you to wash a reduced load saving energy, water and time and there are no restrictions on where the items are placed.</p>
	<p>The <b>ExtraGlide</b> guides system makes the second basket run even smoother and softer. It facilitates movement even when fully loaded, and thanks to the increased excursion, facilitates the insertion of dishes into the basket.</p>		<p>Smeg's evolution towards more intelligent and eco-friendly models has led to the choice of Inverter technology, which significantly reduces consumption.</p>
	<p><b>Noise Level:</b> Excellent insulation and special devices keep noise to a minimum.</p>		<p><b>Orbital wash system</b> distributes water evenly throughout the 60cm dishwasher cavity, directing water with precision to ensure an excellent wash.</p>
	<p><b>Auto 45°- 65°:</b> The auto programme regulates the length of a cycle depending on the need for a pre-wash and the number of rinses required.</p>		<p><b>Delicate:</b> Delicate washing program is designed for delicate dishes which are not heavily soiled.</p>
	<p><b>PRG_RINSE_72dpi</b></p>		<p><b>Express 27':</b> The Express 27' programme is a quick wash cycle, at low temperatures, for lightly soiled dishes.</p>
	<p><b>Ultraclean:</b> The Ultraclean option performs a final rinse at a high temperature of 70°C eliminating virtually all bacteria.</p>		<p><b>15 place settings:</b> Number of place settings.</p>
	<p><b>System WaterSave</b> ensures the best washing results with minimal water consumption depending on the model of dishwasher.</p>		<p><b>Dishwasher cleaning cycle.</b> The cycle should be started with the machine empty, without dishes. It is recommended to run the program every 2-3 months, using special dishwasher detergents.</p>
	<p><b>SILENT:</b> Wash cycle suitable for normally soiled dishes, even with dried-on residues. Ensures maximum noise reduction and is therefore ideal if you wish to run it during the night.</p>		<p>Allows you to enable additional programs when selected together with any wash cycle.</p>



---

The Dry Assist + option, in addition to saving energy, ensures perfect drying of the dishes by opening the door automatically at the end of the washing cycle.