

DW8620







Product Family Dishwashers Commercial height 86 cm

Fully-integrated built-in Installation

N° baskets 3, FlexiDuo Motor Inverter

EAN code 8017709354855



Programs













N. of programmes 10 Washing temperatures 38, 45, 50, 55, 65, 70, 75 °F Express 27' Auto sensor 45-65 Yes Intense Yes Self clean Yes

Delicate Yes Normal Yes Rinse Yes Eco express Yes Pots & Pans Yes

Options











Largest loadable dish in 19,0 inches

Dry Assist+ option Delay timer option Yes

Up to 24 hours

1/2 load FlexiZone

Yes

option

Special programs option Yes

Baskets



Glide



Height adjustment of

Sliding Guides Extra

the upper basket

upper basket

Lower Basket **Basket** colour Grey **Upper Basket** With 1 foldable rack Lower basket

Yes

On three levels (5 cm)

accessories

With 2 foldable racks

Lower basket with anti- Yes

drip inserts

Colour Inner

Sage Leaf

MultiLoad

Components

Cutlery basket Yes

2025-11-24 **SMEG SPA**



Technical Features











Width (mm) 23 9/16 " 21 5/8 " Depth (mm)

Display type LED display (3 digit)

Product Height (mm) 33 3/4 "

Display Delayed start, Programme

time indicator

Programme graphics Written in EN On/off indicator Yes Salt light indicator Light Rinse aid indicator Light End of cycle indicator ActiveLight Washing system Orbital Third spray arm Single

Water softener With electronic setting

Yes

Turbidity sensor

Aquatest

Max water hardness

Drying system

Flood protection system Single Acquastop 100°fH:58°dH

> Natural condenser drying, with Dry Assist + automatic

door opening system at the end of the cycle

Tub material Stainless steel Filter Stainless steel

Concealed heating

element

Hinges Self balancing, Sliding,

FLEXIFIT 2 - 11 lbs

50 - 215 mm

Yes

Min. and max. frontal

panel weight

Min. and max plinth

height

Adjustable feet 7cm, from 860 to 930 mm

Additional aaskets Yes **Back cover** Yes Depth of dishwasher 1186 mm

with open door (mm)

Top cover

Metallic sheet

Electrical Connection

Connected power 1100 W Current 13 A Voltage 115 V Frequency (Hz) 60 Hz

Type of connection Power supply cable

length


Plug

Single-phase

140 "

(B) NEMA 5-15P



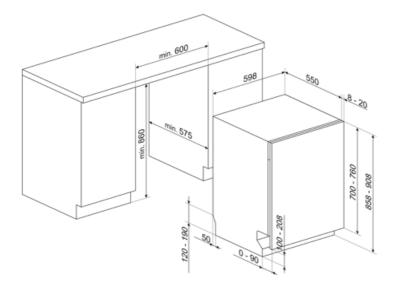



Compatible Accessories



KIT86CX-1

Door kit, stainless steel, Canali handle, fully integrated dishwasher h.86 cm Compatible with models with Flexifit and fixed fulcrum hinges.



KIT86SPRAN



KIT86PORTAN-1



KIT86SPRMW



KIT86SPRX



KITFLEXI



KITJBDW



KITPL60B

Toekick Kit in White colour with adjustable height and deepness. Can be installed over all the fully integrated and underbench models with variable fulcrum or flexifit hinges.





KITPL60N

Toekick Kit in Black colour with adjustable height and deepness. Can be installed over all the fully integrated and underbench models with variable fulcrum or flexifit hinges.



Toekick Kit in Stainless Steel with adjustable height and deepness. Can be fitted over all the fully integrated and underbench models with variable fulcrum or flexifit hinges.





Kit extension for dishwasher and washing machine: lenght mt. 2



Symbols glossary



Acquastop: Some Smeg dishwashers are equipped with a simple Acquastop: float sensor in the bottom which is necesary to prevent an accidental leakage of water inside the appliance.



Activelight is an led light which projects a red spot onto the floor beneath the dishwasher when the appliance is in use.



The Aquatest sensor is an electronic sensor that measures the degree of water transparency at the end of the initial soaking phase. ased on the values measured, the sensor sets the most suitable programme, thus obtaining the best washing results with the minimum amount of water.



To improve the drying of dishes without leaving stains.



86 cm high



Delay Timer: Option to postpone the start of the desired programme by up to 24 hours in order to programme the dishwasher to run at the desired time.



FlexiDuo: The FlexiDuo 3rd cutlery basket allows you to arrange cutlery or small cups, ladles, or bulky utensils however you like: it consists of two separate and moveable modules.



The FlexiFit hinges allow the kitchen panel to slide over the dishwasher door, allowing a minimum kitchen plinth height of 5 cm.



FlexiZone: The ½ load flexizone allows you to wash a reduced load saving energy, water and time and there are no restrictions on where the items are placed.



The ExtraGlide guides system makes the second basket run even smoother and softer. It facilitates movement even when fully loaded, and thanks to the increased excursion, facilitates the insertion of dishes into the basket.



Smeg's evolution towards more intelligent and eco-friendly models has led to the choice of Inverter technology, which significantly reduces consumption.



Noise Level: Excellent insulation and special devices keep noise to a minimum.



Orbital wash system distributes water evenly throughout the 60cm dishwasher cavity, directing water with precision to ensure an excellent wash.



Auto 45°- 65°: The auto programme regulates the length of a cycle depending on the need for a pre-wash and the number of rinses required.



Delicate: Delicate washing program is designed for delicate dishes which are not heavily soiled.



PRG_RINSE_72dpi



Express 27': The Express 27' programme is a quick wash cycle, at low temperatures, for lightly soiled dishes.



Ultraclean: The Ultraclean option performs a final rinse at a high temperature of 70°c eliminating virtually all bacteria.



15 place settings: Number of place settings.



System WaterSave ensures the best washing results with minimal water consumption depending on the model of dishwasher.



Dishwasher cleaning cycle. The cycle should be started with the machine empty, without dishes. It is recommended to run the program every 2-3 months, using special dishwasher detergents.



SILENT: Wash cycle suitable for normally soiled dishes, even with dried-on residues. Ensures maximum noise reduction and is therefore ideal if you wish to run it during the night.





Allows you to enable additional programs when selected together with any wash cycle. After having selected the required wash cycle, press the button (



The Dry Assist + option, in addition to saving energy, ensures perfect drying of the dishes by opening the door automatically at the end of the washing cycle.