

DW8620


Product Family

Commercial height	86 cm
Installation	Fully-integrated built-in
Nº baskets	3, FlexiDuo
Motor	Inverter
EAN code	8017709354855



Programs



N. of programmes	10	Delicate	Yes
Washing temperatures	38, 45, 50, 55, 65, 70, 75 °F	Normal	Yes
Express 27'	Yes	Rinse	Yes
Auto sensor 45-65	Yes	Eco express	Yes
Intense	Yes	Pots & Pans	Yes
Self clean	Yes		

Options



Dry Assist+ option	Yes	1/2 load FlexiZone option	Yes
Delay timer option	Up to 24 hours	Special programs option	Yes

Baskets



Basket colour	Grey	Lower Basket	With 2 foldable racks
Upper Basket	With 1 foldable rack	Lower basket accessories	MultiLoad
Height adjustment of the upper basket	On three levels (5 cm)	Lower basket with anti-drip inserts	Yes
Sliding Guides Extra	Yes	Colour Inner Components	Sage Leaf
Glide		Cutlery basket	Yes
Largest loadable dish in upper basket	19,0 inches		


Technical Features



Width (mm)	23 9/16 "	Flood protection system	Single Acquastop
Depth (mm)	21 5/8 "	Max water hardness	100°fH;58°dH
Display type	LED display (3 digit)	Drying system	Natural condenser drying, with Dry Assist + automatic door opening system at the end of the cycle
Product Height (mm)	33 3/4 "	Tub material	Stainless steel
Display	Delayed start, Programme time indicator	Filter	Stainless steel
Programme graphics	Written in EN	Concealed heating element	Yes
On/off indicator	Yes	Hinges	Self balancing, Sliding, FLEXIFIT
Salt light indicator	Light	Min. and max. frontal panel weight	2 - 11 lbs
Rinse aid indicator	Light	Min. and max plinth height	50 - 215 mm
End of cycle indicator	ActiveLight	Adjustable feet	7cm, from 860 to 930 mm
Auto switch-off	Yes	Additional gaskets	Yes
Washing system	Orbital	Back cover	Yes
Third spray arm	Single	Depth of dishwasher with open door (mm)	1186 mm
Water softener	With electronic setting	Top cover	Metallic sheet
Turbidity sensor	Yes		
Aquatest			

Electrical Connection

Connected power	1100 W	Type of connection	Single-phase
Current	13 A	Power supply cable length	140 "
Voltage	115 V	Plug	(B) NEMA 5-15P
Frequency (Hz)	60 Hz		

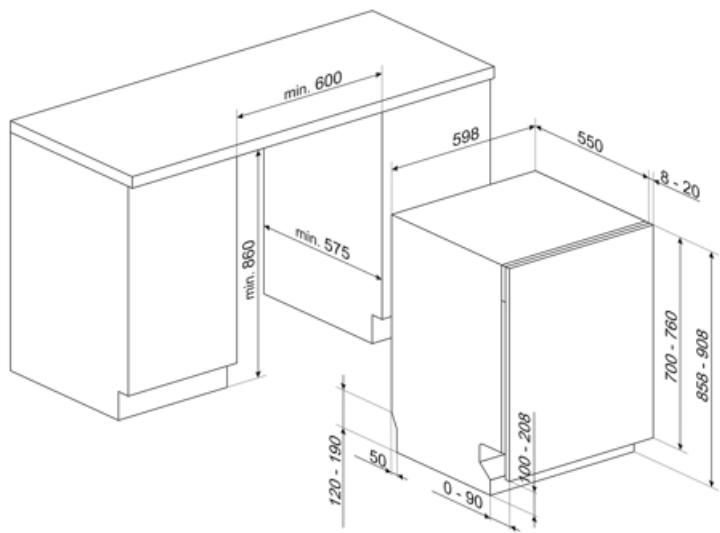

Compatible Accessories

**KIT86PORTAN-1****KIT86SPRMW****KIT86SPRAN****KIT86SPRX****KITFLEXI****KITJBDW****KITPL60B**

Toekick Kit in White colour with adjustable height and deepness. Can be installed over all the fully integrated and underbench models with variable fulcrum or flexifit hinges.

**KITPL60X**

Toekick Kit in Stainless Steel with adjustable height and deepness. Can be fitted over all the fully integrated and underbench models with variable fulcrum or flexifit hinges.

**KITPL60N**

Toekick Kit in Black colour with adjustable height and deepness. Can be installed over all the fully integrated and underbench models with variable fulcrum or flexifit hinges.

**KITPLV2**

Kit extension for dishwasher and washing machine: lenght mt. 2

Symbols glossary



Acquastop: Some Smeg dishwashers are equipped with a simple Acquastop: float sensor in the bottom which is necessary to prevent an accidental leakage of water inside the appliance.



The Aquatest sensor is an electronic sensor that measures the degree of water transparency at the end of the initial soaking phase. Based on the values measured, the sensor sets the most suitable programme, thus obtaining the best washing results with the minimum amount of water.



86 cm high



FlexiDuo: The FlexiDuo 3rd cutlery basket allows you to arrange cutlery or small cups, ladles, or bulky utensils however you like: it consists of two separate and moveable modules.



FlexiZone: The $\frac{1}{2}$ load flexizone allows you to wash a reduced load saving energy, water and time and there are no restrictions on where the items are placed.



Smeg's evolution towards more intelligent and eco-friendly models has led to the choice of Inverter technology, which significantly reduces consumption.



Orbital wash system distributes water evenly throughout the 60cm dishwasher cavity, directing water with precision to ensure an excellent wash.



Delicate: Delicate washing program is designed for delicate dishes which are not heavily soiled.



Express 27': The Express 27' programme is a quick wash cycle, at low temperatures, for lightly soiled dishes.



15 place settings: Number of place settings.



Dishwasher cleaning cycle: The cycle should be started with the machine empty, without dishes. It is recommended to run the program every 2-3 months, using special dishwasher detergents.



Activelight: is an led light which projects a red spot onto the floor beneath the dishwasher when the appliance is in use.



To improve the drying of dishes without leaving stains.



Delay Timer: Option to postpone the start of the desired programme by up to 24 hours in order to programme the dishwasher to run at the desired time.



FlexiFit: The FlexiFit hinges allow the kitchen panel to slide over the dishwasher door, allowing a minimum kitchen plinth height of 5 cm.



ExtraGlide: guides system makes the second basket run even smoother and softer. It facilitates movement even when fully loaded, and thanks to the increased excursion, facilitates the insertion of dishes into the basket.



Noise Level: Excellent insulation and special devices keep noise to a minimum.



Auto 45°- 65°: The auto programme regulates the length of a cycle depending on the need for a pre-wash and the number of rinses required.



PRG_RINSE_72dpi:



Ultraclean: The Ultraclean option performs a final rinse at a high temperature of 70°C eliminating virtually all bacteria.



System WaterSave: ensures the best washing results with minimal water consumption depending on the model of dishwasher.



SILENT: Wash cycle suitable for normally soiled dishes, even with dried-on residues. Ensures maximum noise reduction and is therefore ideal if you wish to run it during the night.



Allows you to enable additional programs when selected together with any wash cycle. After having selected the required wash cycle, press the button (



The Dry Assist + option, in addition to saving energy, ensures perfect drying of the dishes by opening the door automatically at the end of the washing cycle.