

DW8630







Product Family Dishwashers
Commercial width 60 cm
Commercial height 86 cm

Installation Fully-integrated built-in

N° baskets 3, FlexiDuo Motor Inverter

EAN code 8017709355258



Programs











A



N. of programmes 12+2
Washing temperatures 38, 45, 50, 55, 65, 70, 75 °F
Express 27' Yes
Normal Yes
Self clean Yes
Sterilise Yes
Delicate Yes

Auto Yes
F Rinse Yes
Crystal & China Yes
Eco express Yes
Pots & Pans Yes
Trays Yes

Options











Dry Assist option
Delay timer option
1/2 load FlexiZone

Yes

Intensive wash zone option

Up to 24 hours Yes

Special programs option Yes Clean&Shine option Yes

Baskets

option





Basket colour

Upper Basket Height adjustment of the upper basket Grey

With 3 foldable racks On three levels (5 cm) Lower basket accessories

MultiLoad, ProFlex Holder, WinePro

Lower basket with anti- Yes

drip inserts

Largest loadable dish in 35,0 inches

lower basket



Sliding Guides Extra

Glide

Largest loadable dish in 19,0 inches

upper basket

Lower Basket With 4 foldable racks

Yes

Colour Inner Components

Cutlery basket Yes

Technical Features











Width (mm) 23 9/16 " 21 5/8 " Depth (mm)

Display type LED display (3 digit)

33 3/4 " Product Height (mm)

Display Delayed start, Programme

Written in EN Programme graphics

Salt light indicator Light Rinse aid indicator Light End of cycle indicator ActiveLight Washing system Third spray arm

Water softener

Turbidity sensor

Aquatest

Flood protection system Total Acquastop

time indicator, Time to end indication, Consumptions

Planetarium Sinale

With electronic setting

Yes

Max water hardness

Drying system

100°fH;58°dH

Sage Leaf

Natural condenser drying, with Dry Assist automatic

door opening system at the

end of the cycle

Internal light With White led Tub material Stainless steel Filter Stainless steel

Concealed heating

element Hinges

Self balancing, Sliding,

FLEXIFIT 2 - 10 lbs

Yes

Min. and max. frontal

panel weight

Min. and max plinth

height

Adjustable feet

Additional gaskets

Back cover Depth of dishwasher

with open door (mm)

50 - 215 mm

7cm, from 860 to 930 mm

Yes Yes 1186

Top cover Metallic sheet

Performance / Energy Label



Number of place

settings

Noise level

16

38 dB(A) re 1 pW

Water consumption per

cycle (I/cycle)

Annual energy consumption

235 kWh/year

Electrical Connection

Plug

Connected power

Current

Voltage

(B) NEMA 5-15P

1100 W 13 A

115 V

Frequency (Hz) Type of connection

Power supply cable


length

60 Hz

Single-phase

140 "



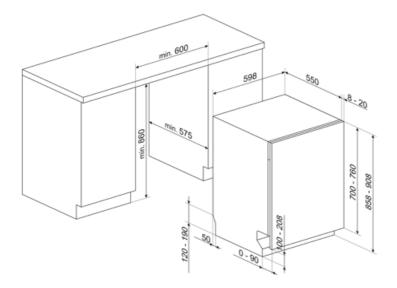



Compatible Accessories



KIT86CX-1

Door kit, stainless steel, Canali handle, fully integrated dishwasher h.86 cm Compatible with models with Flexifit and fixed fulcrum hinges.



KIT86PORTWH-1



KIT86PORTAN-1



KIT86PORTX-1



KIT86SPRAN



KIT86SPRMW



KIT86SPRX



KITFLEXI



KITJBDW



KITPL60B

Toekick Kit in White colour with adjustable height and deepness. Can be installed over all the fully integrated and underbench models with variable fulcrum or flexifit hinges.



KITPL60N

Toekick Kit in Black colour with adjustable height and deepness. Can be installed over all the fully integrated and underbench models with variable fulcrum or flexifit hinges.



KITPL60X

Toekick Kit in Stainless Steel with adjustable height and deepness. Can be fitted over all the fully integrated and underbench models with variable fulcrum or flexifit hinges.





Kit extension for dishwasher and washing machine: lenght mt. 2



Symbols glossary



Activelight is an led light which projects a red spot onto the floor beneath the dishwasher when the appliance is in use.



The Aquatest sensor is an electronic sensor that measures the degree of water transparency at the end of the initial soaking phase. ased on the values measured, the sensor sets the most suitable programme, thus obtaining the best washing results with the minimum amount of water.



To improve the drying of dishes without leaving stains.



86 cm high



Delay Timer: Option to postpone the start of the desired programme by up to 24 hours in order to programme the dishwasher to run at the desired time.



The Dry Assist option ensures optimal drying of the dishes by automatically opening the door at the end of the wash cycle. Reducing the rinse temperat



FlexiDuo: The FlexiDuo 3rd cutlery basket allows you to arrange cutlery or small cups, ladles, or bulky utensils however you like: it consists of two separate and moveable modules.



The FlexiFit hinges allow the kitchen panel to slide over the dishwasher door, allowing a minimum kitchen plinth height of 5 cm.



FlexiZone: The ½ load flexizone allows you to wash a reduced load saving energy, water and time and there are no restrictions on where the items are placed.



The ExtraGlide guides system makes the second basket run even smoother and softer. It facilitates movement even when fully loaded, and thanks to the increased excursion, facilitates the insertion of dishes into the basket.



Smeg's evolution towards more intelligent and eco-friendly models has led to the choice of Inverter technology, which significantly reduces consumption.



The Planetarium washing system, with high rotations per minute, guarantees complete coverage of the tank, thanks to the simultaneous rotation of base and sprayers, and excellent washing results.



Delicate: Delicate washing program is designed for delicate dishes which are not heavily soiled.



Delicate: Delicate washing program is designed for delicate dishes which are not heavily soiled.



PRG_RINSE_72dpi



Express 27': The Express 27' programme is a quick wash cycle, at low temperatures, for lightly soiled dishes.



Total Acquastop: In addition to the partial Acquastop protection present in all Smeg dishwashers, some models have an electronic device fitted to the water intake hose, which monitors water levels in the machine, detects leaks in the hose and switches off the water supply immediately when necessary.



System WaterSave ensures the best washing results with minimal water consumption depending on the model of dishwasher.



Dishwasher cleaning cycle. The cycle should be started with the machine empty, without dishes. It is recommended to run the program every 2-3 months, using special dishwasher detergents.



SILENT: Wash cycle suitable for normally soiled dishes, even with dried-on residues. Ensures maximum noise reduction and is therefore ideal if you wish to run it during the night.





Allows you to enable additional programs when selected together with any wash cycle. After having selected the required wash cycle, press the button (



STERYL 75°: Intensive wash cycle ideal for plates, pots, pans, cutting boards, feeding bottles.



Clean&Shine option: For perfect cleaning results, this option adds an extra rinse to the wash cycle, which also gives the dishes a higher gloss.



Baking tray programme: for intensive cleaning of the oven trays. Place the trays in the lower basket of the dishwasher.