 


# DW8630

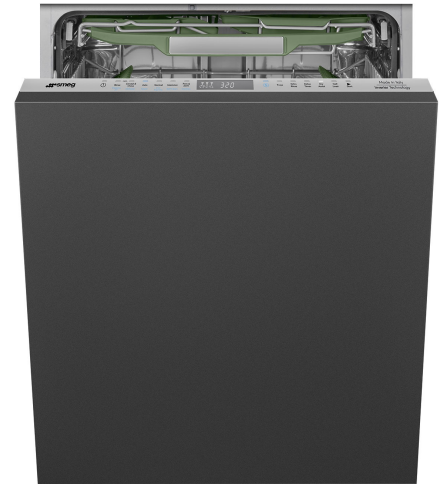

<b>Product Family</b>	Dishwashers
<b>Commercial height</b>	86 cm
<b>Installation</b>	Fully-integrated built-in
<b>N° baskets</b>	3, FlexiDuo
<b>Motor</b>	Inverter
<b>EAN code</b>	8017709355258



## Programs



<b>N. of programmes</b>	12+2	<b>Auto</b>	Yes
<b>Washing temperatures</b>	38, 45, 50, 55, 65, 70, 75 °F	<b>Rinse</b>	Yes
<b>Express 27'</b>	Yes	<b>Crystal &amp; China</b>	Yes
<b>Normal</b>	Yes	<b>Eco express</b>	Yes
<b>Self clean</b>	Yes	<b>Pots &amp; Pans</b>	Yes
<b>Sterilise</b>	Yes	<b>Trays</b>	Yes
<b>Delicate</b>	Yes		

## Options




<b>Dry Assist option</b>	Yes	<b>Intensive wash zone option</b>	
<b>Delay timer option</b>	Up to 24 hours	<b>Special programs option</b>	Yes
<b>1/2 load FlexiZone option</b>	Yes	<b>Clean&amp;Shine option</b>	Yes

## Baskets



<b>Basket colour</b>	Grey	<b>Lower basket accessories</b>	MultiLoad, ProFlex Holder, WinePro
<b>Upper Basket</b>	With 3 foldable racks	<b>Lower basket with anti-drip inserts</b>	Yes
<b>Height adjustment of the upper basket</b>	On three levels (5 cm)	<b>Largest loadable dish in lower basket</b>	35,0 inches



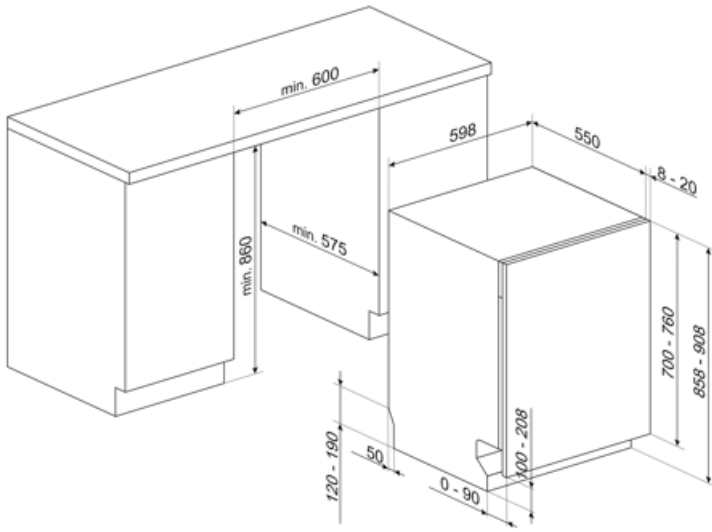

## Compatible Accessories



**KIT86PORTAN-1**



**KIT86SPRAN**



**KIT86SPRX**



**KITJBDW**



**KITPL60N**

Toe kick Kit in Black colour with adjustable height and deepness. Can be installed over all the fully integrated and underbench models with variable fulcrum or flexifit hinges.



**KITPLV2**

Kit extension for dishwasher and washing machine: lenght mt. 2



 
**KIT86PORTRD**



**KIT86SPRMW**



**KITFLEXI**



**KITPL60B**





 




 












Toe kick Kit in White colour with adjustable height and deepness. Can be installed over all the fully integrated and underbench models with variable fulcrum or flexifit hinges.



**KITPL60X**

Toe kick Kit in Stainless Steel with adjustable height and deepness. Can be fitted over all the fully integrated and underbench models with variable fulcrum or flexifit hinges.

## Symbols glossary

	<p>Activelight is an led light which projects a red spot onto the floor beneath the dishwasher when the appliance is in use.</p>		<p>The Aquatest sensor is an electronic sensor that measures the degree of water transparency at the end of the initial soaking phase. Based on the values measured, the sensor sets the most suitable programme, thus obtaining the best washing results with the minimum amount of water.</p>
	<p>To improve the drying of dishes without leaving stains.</p>		<p>Clean&amp;Shine option: For perfect cleaning results, this option adds an extra rinse to the wash cycle, which also gives the dishes a higher gloss.</p>
	<p>86 cm high</p>		<p>Delay Timer: Option to postpone the start of the desired programme by up to 24 hours in order to programme the dishwasher to run at the desired time.</p>
	<p>The Dry Assist option ensures optimal drying of the dishes by automatically opening the door at the end of the wash cycle. Reducing the rinse temperature.</p>		<p>FlexiDuo: The FlexiDuo 3rd cutlery basket allows you to arrange cutlery or small cups, ladles, or bulky utensils however you like: it consists of two separate and moveable modules.</p>
	<p>The FlexiFit hinges allow the kitchen panel to slide over the dishwasher door, allowing a minimum kitchen plinth height of 5 cm.</p>		<p>FlexiZone: The ½ load flexizone allows you to wash a reduced load saving energy, water and time and there are no restrictions on where the items are placed.</p>
	<p>The ExtraGlide guides system makes the second basket run even smoother and softer. It facilitates movement even when fully loaded, and thanks to the increased excursion, facilitates the insertion of dishes into the basket.</p>		<p>Smeg's evolution towards more intelligent and eco-friendly models has led to the choice of Inverter technology, which significantly reduces consumption.</p>
	<p>The Planetarium washing system, with high rotations per minute, guarantees complete coverage of the tank, thanks to the simultaneous rotation of base and sprayers, and excellent washing results.</p>		<p>Delicate: Delicate washing program is designed for delicate dishes which are not heavily soiled.</p>
	<p>Delicate: Delicate washing program is designed for delicate dishes which are not heavily soiled.</p>		<p>PRG_RINSE_72dpi</p>
	<p>Dishwasher cleaning cycle. The cycle should be started with the machine empty, without dishes. It is recommended to run the program every 2-3 months, using special dishwasher detergents.</p>		<p>SILENT: Wash cycle suitable for normally soiled dishes, even with dried-on residues. Ensures maximum noise reduction and is therefore ideal if you wish to run it during the night.</p>
	<p>Allows you to enable additional programs when selected together with any wash cycle.</p>		<p>Express 27': The Express 27' programme is a quick wash cycle, at low temperatures, for lightly soiled dishes.</p>
	<p>STERYL 75°: Intensive wash cycle ideal for plates, pots, pans, cutting boards, feeding bottles.</p>		<p>Baking tray programme: for intensive cleaning of the oven trays. Place the trays in the lower basket of the dishwasher.</p>



Total Acquastop: In addition to the partial Acquastop protection present in all Smeg dishwashers, some models have an electronic device fitted to the water intake hose, which monitors water levels in the machine, detects leaks in the hose and switches off the water supply immediately when necessary.



System WaterSave ensures the best washing results with minimal water consumption depending on the model of dishwasher.