


# DW8630

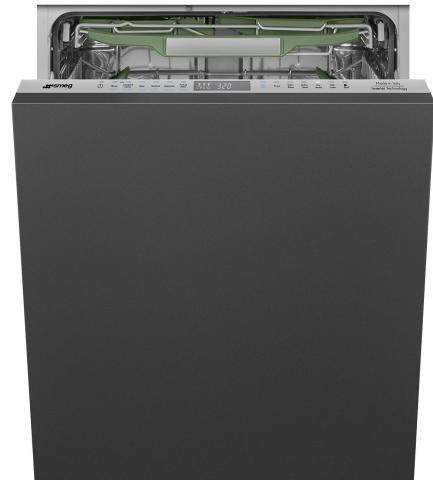

## Product Family

Commercial height	86 cm
Installation	Fully-integrated built-in
Nº baskets	3, FlexiDuo
Motor	Inverter
EAN code	8017709355258

 


## Programs



N. of programmes	12+2	Auto	Yes
Washing temperatures	38, 45, 50, 55, 65, 70, 75 °F	Rinse	Yes
Express 27'	Yes	Crystal & China	Yes
Normal	Yes	Eco express	Yes
Self clean	Yes	Pots & Pans	Yes
Sterilise	Yes	Trays	Yes
Delicate	Yes		

## Options



Dry Assist option	Yes	Intensive wash zone option	
Delay timer option	Up to 24 hours	Special programs option	Yes
1/2 load FlexiZone option	Yes	Clean&Shine option	Yes

## Baskets



Basket colour	Grey	Lower basket accessories	MultiLoad, ProFlex Holder, WinePro
Upper Basket	With 3 foldable racks	Lower basket with anti-drip inserts	Yes
Height adjustment of the upper basket	On three levels (5 cm)	Largest loadable dish in lower basket	35,0 inches

<b>Sliding Guides Extra Glide</b>	Yes	<b>Colour Inner Components</b>	Sage Leaf
<b>Largest loadable dish in upper basket</b>	19,0 inches	<b>Cutlery basket</b>	Yes
<b>Lower Basket</b>	With 4 foldable racks		


## Technical Features



<b>Width (mm)</b>	23 9/16 "	<b>Max water hardness</b>	100°fH;58°dH
<b>Depth (mm)</b>	21 5/8 "	<b>Drying system</b>	Natural condenser drying, with Dry Assist automatic door opening system at the end of the cycle
<b>Display type</b>	LED display (3 digit)	<b>Internal light</b>	With White led
<b>Product Height (mm)</b>	33 3/4 "	<b>Tub material</b>	Stainless steel
<b>Display</b>	Delayed start, Programme time indicator, Time to end indication, Consumptions	<b>Filter</b>	Stainless steel
<b>Programme graphics</b>	Written in EN	<b>Concealed heating element</b>	Yes
<b>Salt light indicator</b>	Light	<b>Hinges</b>	Self balancing, Sliding, FLEXIFIT
<b>Rinse aid indicator</b>	Light	<b>Min. and max. frontal panel weight</b>	2 - 10 lbs
<b>End of cycle indicator</b>	ActiveLight	<b>Min. and max plinth height</b>	50 - 215 mm
<b>Auto switch-off</b>	Yes	<b>Adjustable feet</b>	7cm, from 860 to 930 mm
<b>Washing system</b>	Planetarium	<b>Additional gaskets</b>	Yes
<b>Third spray arm</b>	Single	<b>Back cover</b>	Yes
<b>Water softener</b>	With electronic setting	<b>Depth of dishwasher with open door (mm)</b>	1186 mm
<b>Turbidity sensor</b>	Yes	<b>Top cover</b>	Metallic sheet
<b>Aquatest</b>			
<b>Flood protection system</b>	Total Acquastop		

## Electrical Connection

<b>Connected power</b>	1100 W	<b>Type of connection</b>	Single-phase
<b>Current</b>	13 A	<b>Power supply cable length</b>	140 "
<b>Voltage</b>	115 V	<b>Plug</b>	(B) NEMA 5-15P
<b>Frequency (Hz)</b>	60 Hz		

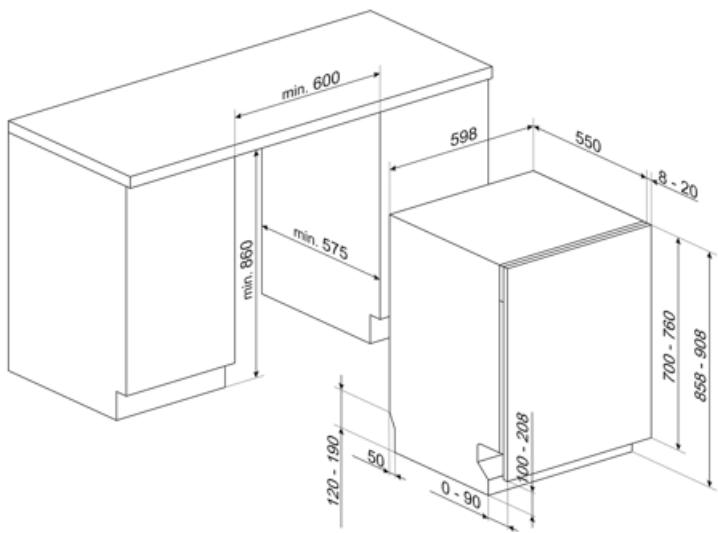

## Compatible Accessories

**KIT86PORTAN-1****KIT86SPRMW****KIT86SPRAN****KIT86SPRX****KITFLEXI****KITJBDW****KITPL60B**

Toekick Kit in White colour with adjustable height and deepness. Can be installed over all the fully integrated and underbench models with variable fulcrum or flexifit hinges.

**KITPL60X**

Toekick Kit in Stainless Steel with adjustable height and deepness. Can be fitted over all the fully integrated and underbench models with variable fulcrum or flexifit hinges.

**KITPL60N**

Toekick Kit in Black colour with adjustable height and deepness. Can be installed over all the fully integrated and underbench models with variable fulcrum or flexifit hinges.

**KITPLV2**

Kit extension for dishwasher and washing machine: lenght mt. 2

## Symbols glossary



Activelight is an led light which projects a red spot onto the floor beneath the dishwasher when the appliance is in use.



The Aquatest sensor is an electronic sensor that measures the degree of water transparency at the end of the initial soaking phase. Based on the values measured, the sensor sets the most suitable programme, thus obtaining the best washing results with the minimum amount of water.



To improve the drying of dishes without leaving stains.



Clean&Shine option: For perfect cleaning results, this option adds an extra rinse to the wash cycle, which also gives the dishes a higher gloss.



86 cm high



Delay Timer: Option to postpone the start of the desired programme by up to 24 hours in order to programme the dishwasher to run at the desired time.



The Dry Assist option ensures optimal drying of the dishes by automatically opening the door at the end of the wash cycle. Reducing the rinse temperat



FlexiDuo: The FlexiDuo 3rd cutlery basket allows you to arrange cutlery or small cups, ladles, or bulky utensils however you like: it consists of two separate and moveable modules.



The FlexiFit hinges allow the kitchen panel to slide over the dishwasher door, allowing a minimum kitchen plinth height of 5 cm.



FlexiZone: The ½ load flexizone allows you to wash a reduced load saving energy, water and time and there are no restrictions on where the items are placed.



The ExtraGlide guides system makes the second basket run even smoother and softer. It facilitates movement even when fully loaded, and thanks to the increased excursion, facilitates the insertion of dishes into the basket.



Smeg's evolution towards more intelligent and eco-friendly models has led to the choice of Inverter technology, which significantly reduces consumption.



The Planetarium washing system, with high rotations per minute, guarantees complete coverage of the tank, thanks to the simultaneous rotation of base and sprayers, and excellent washing results.



Delicate: Delicate washing program is designed for delicate dishes which are not heavily soiled.



Delicate: Delicate washing program is designed for delicate dishes which are not heavily soiled.



PRG\_RINSE\_72dpi



Dishwasher cleaning cycle. The cycle should be started with the machine empty, without dishes. It is recommended to run the program every 2-3 months, using special dishwasher detergents.



SILENT: Wash cycle suitable for normally soiled dishes, even with dried-on residues. Ensures maximum noise reduction and is therefore ideal if you wish to run it during the night.



Allows you to enable additional programs when selected together with any wash cycle. After having selected the required wash cycle, press the button (



Express 27': The Express 27' programme is a quick wash cycle, at low temperatures, for lightly soiled dishes.



STERYL 75°: Intensive wash cycle ideal for plates, pots, pans, cutting boards, feeding bottles.



Baking tray programme: for intensive cleaning of the oven trays. Place the trays in the lower basket of the dishwasher.



**Total AcquaStop:** In addition to the partial AcquaStop protection present in all Smeg dishwashers, some models have an electronic device fitted to the water intake hose, which monitors water levels in the machine, detects leaks in the hose and switches off the water supply immediately when necessary.



System WaterSave ensures the best washing results with minimal water consumption depending on the model of dishwasher.