

DWA6314B

Product Family	Dishwashers
Width	60 cm
Commercial height	85 cm
Installation	Free-standing
N° baskets	3, Flexi
Motor	Single phase
EAN code	8017709217587



Programmes



No. of programmes	5+5 quick programmes	ECO Quick	Yes
Washing temperatures	38, 45, 50, 65, 70 °C	Delicate and Quick	Yes
Soak	Yes	Daily Quick	Yes
Rapid 27'	Yes	Strong and fast	Yes
ECO	Yes	Intensive 65°	Yes
Ultraclean	Yes	Normal ECO	Yes

Options



Delay timer option	3-6-9-12 hours, with automatic soak	Options for tabs FlexiTabs	Yes
1/2 load FlexiZone option (varied distribution)	Yes	Quick Time option	Yes

Baskets



Basket colour	Grey	Largest loadable dish in upper basket	23,5 cm
Basket components colour	Grey	Lower Basket	With 4 foldable racks
		Lower basket with anti-drip inserts	Yes

Handle	In plastic with stainless steel insert on upper and lower basket	Largest loadable dish in lower basket	30,0 cm
		Cutlery basket	13 place settings sliding
Upper Basket	With central fixed racks		
Height adjustment of the upper basket	On three levels		


Technical Features




Width (mm)	598 mm	Water supply	Single; cold/hot water max. 60°C - energysave with hot water up to 35%
Depth (mm)	600 mm	Max water hardness	100°FH;58°dH
Product Height (mm)	848 mm	Drying system	Natural condenser drying
Controls	Electronic	Child safety system (door lock)	Yes
Display	Delayed start	Tank material	Stainless steel
Programme graphics	Symbols	Filter	Stainless steel
On/off indicator	Yes	Concealed heating element	Yes
Rinse aid indicator	Light	Hinges	Self balancing with fixed hinges
Progress indicator	Yes	Adjustable feet	Just for levelling
End of cycle indicator	Led on display, with acoustic signal	Insulation level	Medium
Washing system	Orbital	Back cover	Yes, with covered counterweight
Third spray arm	Single	Depth of dishwasher with open door (mm)	1168
Flood protection system	Total Acquastop	Removable top	Yes, with optional KIT

Electrical Connection

Plug	(I) Australia	Frequency (Hz)	50 Hz
Connected power	1800 W	Type of connection	Single-phase
Current	10 A	Power supply cable length	140 cm
Voltage	220-240 V		

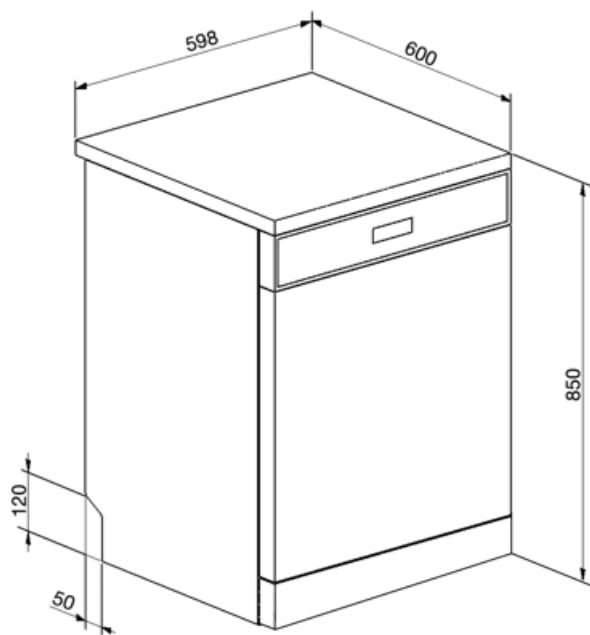


Not included accessories

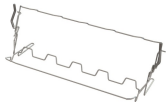

KITGH

 Kit glass holder. It has to be fitted on the first basket but only if there are foldable racks



KITINC


















a steel bar fitted on the top will block the dishwasher at the top.



KITPLV2

Kit extension for dishwasher and washing machine: length mt. 2

Symbols glossary

 <p>Anti-drip: Some models of dishwashers are equipped with special polymer nozzles anti-drip, that improve the process of drying.</p>	 <p>Child lock: some models are fitted with a device to lock the programme/cycle so it cannot be accidentally changed.</p>
 <p>Delay Timer: The delay timer can postpone the start of the program by up to 24 hours.</p>	 <p>Flexitabs: Flexitabs adjusts the wash cycle to give the best possible results regardless of the type of detergent used.</p>
 <p>FlexiZone: The ½ load flexizone allows you to wash a reduced load saving energy, water and time and there are no restrictions on where the items are placed.</p>	 <p>Noise Level: Excellent insulation and special devices keep noise to a minimum.</p>
 <p>Orbital wash system distributes water evenly throughout the 60cm dishwasher cavity, directing water with precision to ensure an excellent wash.</p>	 <p>Daily Quick: The daily program is suitable for quick daily washing of dishes.</p>
 <p>Delicate Quick: Program Delicate Quick is suitable for quick washing of delicate dishes.</p>	 <p>Eco: Eco, this economic wash programme uses a low amount of water and energy in order to provide the most environmentally friendly cleaning option.</p>
 <p>Eco: Eco, this economic wash programme uses a low amount of water and energy in order to provide the most environmentally friendly cleaning option.</p>	 <p>Soak programme: The soak programme provides a rinse to prevent dirt from drying.</p>
 <p>Strong&Fast: This special programme takes less than 1 hour to eliminate the most stubborn dirt and dried on residues.</p>	 <p>REF_PRG_NORMAL_ECO_72dpi</p>
 <p>The symbols show the number of plate settings of the dishwasher.</p>	 <p>Total Acquastop: In addition to the partial Acquastop protection present in all Smeg dishwashers, some models have an electronic device fitted to the water intake hose, which monitors water levels in the machine, detects leaks in the hose and switches off the water supply immediately when necessary.</p>
 <p>System WaterSave ensures the best washing results with minimal water consumption depending on the model of dishwasher.</p>	