

DWAFI6315-4



Product Family	Dishwashers
Commercial width	60 cm
Commercial height	82 cm
Installation	Fully-integrated built-in
Kitchen panel	Not supplied
N° baskets	3, Flexi
Motor	Inverter
EAN code	8017709366537



Programs



N. of programmes	8	ECO	Yes
Washing temperatures	45, 50, 65, 70, 75 °C	Auto sensor 45-65	Yes
Soak	Yes	Mix	Yes
Crystal	Yes	Self clean	Yes
Express 50°	Yes	Intense 60°	Yes

Options



Delay timer option	Up to 24 hours	Crystal option	Yes
Extreme option	Yes		

Baskets

Basket colour	Grey	Largest loadable dish in upper basket	19,0 cm
Basket components colour	Grey	Lower Basket	With 4 foldable racks
Handle	In plastic with stainless steel insert on upper and lower basket	Largest loadable dish in lower basket	31.0 cm
Upper Basket	With 2 foldable racks	Colour Inner Components	Grey
Height adjustment of the upper basket	On two levels (4 cm)		


Technical Features



Width (mm)	596 mm	Max water hardness	90°FH; 50°dH
Depth (mm)	550 mm	Drying system	Natural condenser drying, with Dry Assist + automatic door opening system at the end of the cycle
Product Height (mm)	818 mm	Steam protection	In plastic
Controls	Electronic touch control	Tube material	Stainless steel
Display	Delayed start, Programme time indicator, Time to end indication	Filter	Stainless steel
Programme graphics	Symbols	Concealed heating element	Yes
On/off indicator	Yes	Hinges	Self balancing, Sliding, FLEXIFIT
Rinse aid indicator	Light	Min. and max. frontal panel weight	2 - 10 kg
End of cycle indicator	ActiveLight	Min. and max plinth height	0 - 220 mm
Auto switch-off	Yes	Adjustable feet	8 cm, da 818 a 898 mm
Washing system	Standard	Airborne acoustical noise emissions dBA	44 dBA
Third spray arm	Single	Back cover	
Turbidity sensor Aquatest	Yes	Depth of dishwasher with open door (mm)	1230 mm
Flood protection system	Total Acquastop	Back feet adjustable from front	Yes
Water supply	Single; cold/hot water max. 60°C - energysave with hot water up to 35%	Top cover	

Electrical Connection

Connected power	1800 W	Type of connection	Single-phase
Current	10 A	Power supply cable length	140 cm
Voltage	220-240 V	Plug	(I) Australia
Frequency (Hz)	50 Hz		

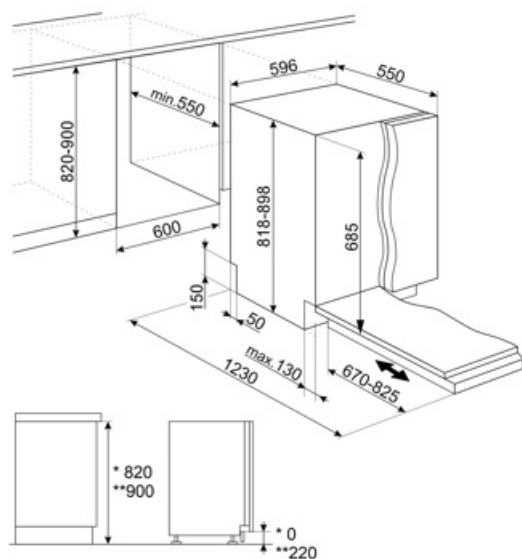

Compatible Accessories



KIT82CN



KIT82SPRAN



KIT82SPRX



KIT82CX



KIT82SPRMW

Symbols glossary

	Activelight is an led light which projects a red spot onto the floor beneath the dishwasher when the appliance is in use.		Aquatest measures the clarity of the water during an auto program, and automatically ensures the minimum consumption of water and energy.
	COMM_HEIGHT_82_72dpi		Delay Timer: The delay timer can postpone the start of the program by up to 24 hours.
	Models with new Flexi Fit hinges are able to be installed in kitchens with a plinth of just 5cms. With this new hinge design, the panel has a sliding movement from the bottom to the top, avoiding any possible interference of the panel with the plinth.		Inverter technology: The evolution of Smeg's driers towards more intelligent and environmentally sustainable models has led to the choice of using Inverter technology with heat pumps, which reduces significantly energy consumption.
	Noise Level: Excellent insulation and special devices keep noise to a minimum.		Noise Level: Excellent insulation and special devices keep noise to a minimum.
	Auto 45°- 65°: The auto programme regulates the length of a cycle depending on the need for a pre-wash and the number of rinses required.		Crystals: The Crystals programme is dedicated to delicate dishes such as glasses and china.
	Eco: Eco, this economic wash programme uses a low amount of water and energy in order to provide the most environmentally friendly cleaning option.		Normal programme: The normal programme is suitable for normal degrees of dirt for everyday use.
	Soak programme: The soak programme provides a rinse to prevent dirt from drying.		The symbols show the number of plate settings of the dishwasher.
	Total Acquastop: In addition to the partial Acquastop protection present in all Smeg dishwashers, some models have an electronic device fitted to the water intake hose, which monitors water levels in the machine, detects leaks in the hose and switches off the water supply immediately when necessary.		Touch controls: Easy to use touch controls allow the appliance to be programmed at the touch of a button.
	System WaterSave ensures the best washing results with minimal water consumption depending on the model of dishwasher.		...
	Dishwasher cleaning cycle. The cycle should be started with the machine empty, without dishes. It is recommended to run the program every 2-3 months, using special dishwasher detergents.		This option provides special care for a delicate load. It prevents rapid changes in the wash temperature of the selected programme and reduces it to 4
	Programme suitable for washing and drying heavily soiled items with encrusted residues.		Option which improves the washing results of the selected programme. It increases the wash temperature and duration.