

LSP234CX



Product Family Dishwashers

Commercial width60 cmCommercial height82 cm

Installation Under counter built-in

N° baskets

EAN code 8017709305147



Programme / Functions























N. of programmes 10+1
Washing temperatures 38, 45, 50, 55, 65, 70, 75 °C
Soak Yes

Soak Yes
Express 27' Yes
Crystal Yes
Full express - 60 Yes

minutes

ECO Yes

Auto sensor 45-65

Mix Yes
Quiet (-2 dB) Yes
Intense Yes
Self clean Yes
Hygiene 99,9% Yes

Options









Dry Assist+ option
Delay timer option

Yes Up to 24 hours 1/2 load FlexiZone

Yes

Yes

option

Special programs option Yes

Baskets





Basket colour

Basket components colour

Handle

Grey

Grey

lower basket

In plastic on upper and

Largest loadable dish in 25,0 cm

upper basket

Lower Basket With 4 foldable racks

Lower basket with anti- Yes

drip inserts



Upper Basket

Glass holder

Height adjustment of the upper basket

Sliding Guides Extra

Glide

With 3 foldable racks

Yes

On three levels (5 cm)

Yes

Largest loadable dish in 30,0 cm

lower basket

Colour Inner

Components **Cutlery basket** Blue

Yes

Technical Features









Width (mm) Depth (mm) Display type

Product Height (mm) Controls

Display

Programme graphics On/off indicator Salt light indicator Rinse aid indicator **Progress indicator**

End of cycle indicator

Third spray arm Water softener

Washing system **Turbidity sensor** Aquatest

598 mm

570 mm LED (external) 818 mm

Flectronic

Delayed start, Programme time indicator, Time to end indication

Symbols Yes Light Light Yes

On display, with acoustic

signal Planetarium Single

With electronic setting

Yes

Flood protection system Total Acquastop

Water supply

Single; cold/hot water max. 60°C - energysave with hot

water up to 35%

Max water hardness

Drying system

100°fH;58°dH Natural condenser drying,

with Dry Assist + automatic door opening system at the

Self balancing with variable

end of the cycle

Steam protection In plastic Tub material Stainless steel Stainless steel Filter

Concealed heating element

Hinges

Min. and max plinth

height

Adjustable feet Additional gaskets 100 - 170 mm

7cm, from 820 to 890 mm Yes, with stainless steel

plate Yes Back cover Depth of dishwasher 1146 with open door (mm)

Yes

hinges

Back feet adjustable

from front Top cover

Yes

In plastic

Performance / Energy Label NEW 2019









Energy Efficiency Class C **73 KWh Energy consumption** [per 100 cycles, based on the eco programme]

Rated capacity (ps) 13 Water consumption [per 8,5 litres

cycle]

Programme duration Airborne acoustical noise emissions

Airborne acoustical noise emission class

Energy efficiency Index

(EEI)

4:40 h:min

43 dB(A) re 1 pW

В

43.8

Electrical Connection



Plug (F;E) Schuko Frequency (Hz) 50 Hz Connected power 1800 W Type of connection Single-phase Power supply cable Current 140 cm 10 A length Voltage 220-240 V 600 598 820 min. 818 ÷ 888 50 - 0-90



Not included accessories

KITPL60N



Toekick Kit in Black colour with adjustable height and deepness. Can be installed over all the fully integrated and underbench models with variable fulcrum or flexifit hinges.



KITPL60X

Toekick Kit in Stainless Steel with adjustable height and deepness. Can be fitted over all the fully integrated and underbench models with variable fulcrum or flexifit hinges.



KITPL60B

Toekick Kit in White colour with adjustable height and deepness. Can be installed over all the fully integrated and underbench models with variable fulcrum or flexifit hinges.



KITPLV2

Kit extension for dishwasher and washing machine: lenght mt. 2





Kit glass holder. It has to be fitted on the first basket but only if there are foldable racks



Symbols glossary (TT)



The Aquatest sensor is an electronic sensor that measures the degree of water transparency at the end of the initial soaking phase. ased on the values measured, the sensor sets the most suitable programme, thus obtaining the best washing results with the minimum amount of water.



To improve the drying of dishes without leaving stains.



82 cm high



Delay Timer: Option to postpone the start of the desired programme by up to 24 hours in order to programme the dishwasher to run at the desired time.



LED display: to show programmes, functions and options selected and the time to the end of the cycle.



FlexiZone: The ½ load flexizone allows you to wash a reduced load saving energy, water and time and there are no restrictions on where the items are placed.



The ExtraGlide guides system makes the second basket run even smoother and softer. It facilitates movement even when fully loaded, and thanks to the increased excursion, facilitates the insertion of dishes into the basket.



Noise Level: Excellent insulation and special devices keep noise to a minimum.



The Planetarium washing system, with high rotations per minute, guarantees complete coverage of the tank, thanks to the simultaneous rotation of base and sprayers, and excellent washing results.



Auto 45°- 65°: The auto programme regulates the length of a cycle depending on the need for a pre-wash and the number of rinses required.



Crystals: The Crystals programme is dedicated to delicate dishes such as glasses and china.



Eco: Eco, this economic wash programme uses a low amount of water and energy in order to provide the most environmentally friendly cleaning option.



Mix: The Mix programme is suitable for mixed crockery and everyday pots and pans, without any particular incrustation.



Soak programme: The soak programme provides a rinse to prevent dirt from drying.



Express 27': The Express 27' programme is a quick wash cycle, at low temperatures, for lightly soiled dishes.



Ultraclean: The Ultraclean option performs a final rinse at a high temperature of 70°c eliminating virtually all bacteria.



 ${\bf 13\ place\ settings:}\ Number\ of\ place\ settings.$



Total Acquastop: In addition to the partial Acquastop protection present in all Smeg dishwashers, some models have an electronic device fitted to the water intake hose, which monitors water levels in the machine, detects leaks in the hose and switches off the water supply immediately when necessary.



System WaterSave ensures the best washing results with minimal water consumption depending on the model of dishwasher.



Quick wash cycle for normally soiled mixed loads such as dishes and pans, even with dried-on residues. Dishes are washed and dried in 60 minutes.





Dishwasher cleaning cycle. The cycle should be started with the machine empty, without dishes. It is recommended to run the program every 2-3 months, using special dishwasher detergents.



Allows you to enable additional programs when selected together with any wash cycle. After having selected the required wash cycle, press the button (



Energy efficiency class C



SILENT: Wash cycle suitable for normally soiled dishes, even with dried-on residues. Ensures maximum noise reduction and is therefore ideal if you wish to run it during the night.



The Dry Assist + option, in addition to saving energy, ensures perfect drying of the dishes by opening the door automatically at the end of the washing cycle.



HYGIENE 99.9% High-temperature washing programme. The 75° rinse guarantees the removal of 99.9% of germs and bacteria.