

LYP861R

Sink material Stainless steel Monoblock sink Type

No. of bowls

Drainer Reversible

EAN code 8017709258962



Aesthetics



Universale Building in type **Aesthetic** Standard **Embossed** Series Omni Logo Colour Stainless steel Tap hole / precut tap

45 cm

Finishing Pre-polished hole

No Taphole

	Bowl type LH	Bowl thickness LH (mm)	Bowl dimensions LH, WxDxA (mm)	Radius corner left bowl	Overflow LH bowl	Strainer position LH bowl	Strainer dimension LH bowl
LH Bowl	Traditional	0.6	330 * 370 * 154	90	Yes, traditional	Side bowl	3.5"

Technical Features



Frame thickness 0,6 mm Tap hole diameter 35 mm Frame depth (mm) Dividing wall width 40 mm

Dimensions of the 154x860x500 mm **Drainer inclination** 2 °

product (mm) Gasket type Sealing paste

840 x 480 mm **Cutout dimension** No. of clips

topmount (mm) Type of clips Standard Height from kitchen top 6 mm


Accessories included

Base unit size



Accessories for installation

Strainer, Siphon with dishwasher outlet connection, Fixing clips, Gasket

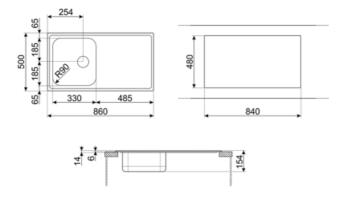



Compatible Accessories

3712



Siphon single bowl sinks (dishwasher connection included)

[11'0705]

KITFD075

Waste disposal 0,75 HP, Motor: 1/2 horsepower, Fits all sinks with 3 1/2" waste outlet



RND1V

Rondò waste kit 1 bowl with standard overflow



KITFD050

Waste disposal 0,5 HP, Motor: 1/2 horsepower, Fits all sinks with 3 1/2" waste outlet



KITFD100

Waste disposal 1 HP, Motor: 1/2 horsepower, Fits all sinks with 3 1/2" waste outlet



STABMIX

Tap stabiliser



Symbols glossary



Cupboard width required for sink installation



Sink depth - depending on the model, the depth can be from 13 to 24.5



Standard installation: Traditional installation in tabletop, suitable for any kitchen sets



Thanks to the double tap hole, most of our sinks are easily reversible, giving you the flexibility to make any type of kitchen composition.



Benefit (TT)

One bowl

A single bowl for greater adaptability, capacity and space optimisation

Drainer

The drawer allows dishes, cutlery and kitchen utensils to be placed directly on the sink after washing: excess water can drain into the sink, allowing for natural drying