

# STU8633



**Product Family**

Dishwashers

**Commercial width**

60 cm

**Commercial height**

86 cm

**Installation**

Fully-integrated built-in

**Nº baskets**

3, FlexiDuo

**EAN code**

8017709303655



## Programs



<b>N. of programmes</b>	10+1	<b>1/2 load</b>	Yes
<b>Washing temperatures</b>	38, 45, 50, 55, 65, 70, 75 °F	<b>Delicate</b>	Yes
<b>Soak</b>	Yes	<b>Auto</b>	Yes
<b>Express 27'</b>	Yes	<b>Crystal &amp; China</b>	Yes
<b>Mix</b>	Yes	<b>Eco express</b>	Yes
<b>Self clean</b>	Yes	<b>Pots &amp; Pans</b>	Yes
<b>Sterilise</b>	Yes		

## Options



<b>Dry Assist option</b>	Yes	<b>Intensive wash zone option</b>
<b>Delay timer option</b>	Up to 24 hours	<b>Special programs option</b> Yes

## Baskets



<b>Basket colour</b>	Grey	<b>Lower Basket</b>	With 4 foldable racks
<b>Upper Basket</b>	With 3 foldable racks	<b>Largest loadable dish in lower basket</b>	35,0 inches
<b>Height adjustment of the upper basket</b>	On three levels (5 cm)	<b>Colour Inner Components</b>	Blue
<b>Sliding Guides Extra Glide</b>	Yes	<b>Cutlery basket</b>	Yes


Largest loadable dish in 18,0 inches  
upper basket

## Technical Features

 ACTIVE LIGHT	 AQUATEST	 ACQUASTOP	 FLEXI FIT
Width (mm)	23 9/16 "		<b>Max water hardness</b>
Depth (mm)	21 5/8 "		100°fH;58°dH
Display type	LED display (3 digit)		Natural condenser drying,
Product Height (mm)	33 3/4 "		with Dry Assist automatic
Display	Delayed start, Programme time indicator, Time to end indication		door opening system at the end of the cycle
Programme graphics	Symbols	<b>Internal light</b>	With White led
Salt light indicator	Light	<b>Tub material</b>	Stainless steel
Rinse aid indicator	Light	<b>Filter</b>	Stainless steel
End of cycle indicator	ActiveLight	<b>Concealed heating element</b>	Yes
Washing system	Planetarium	<b>Hinges</b>	Self balancing, Sliding, FLEXIFIT
Third spray arm	Single	<b>Min. and max. frontal panel weight</b>	2 - 10 lbs
Water softener	With electronic setting	<b>Min. and max plinth height</b>	50 - 215 mm
Turbidity sensor	Yes	<b>Adjustable feet</b>	7cm, from 860 to 930 mm
Aquatest		<b>Additional gaskets</b>	Yes
Flood protection system	Total Acquastop	<b>Back cover</b>	Yes
		<b>Depth of dishwasher with open door (mm)</b>	1186 mm
		<b>Top cover</b>	Metallic sheet

## Electrical Connection

 
<b>Connected power</b>	1800 W	<b>Type of connection</b>	Single-phase
<b>Current</b>	13 A	<b>Power supply cable length</b>	140 "
<b>Voltage</b>	115 V	<b>Plug</b>	(A) USA e Messico
<b>Frequency (Hz)</b>	60 Hz		

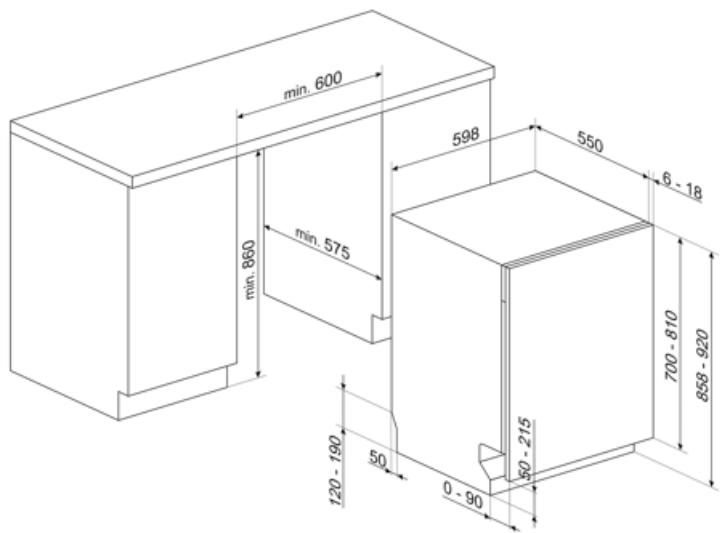

## Compatible Accessories

**KIT86CX-1**

Door kit, stainless steel, Canali handle, fully integrated dishwasher h.86 cm  
Compatible with models with Flexifit and fixed fulcrum hinges.

**KITGH**

Kit glass holder. It has to be fitted on the first basket but only if there are foldable racks

**KITPL60N**

Toekick Kit in Black colour with adjustable height and deepness. Can be installed over all the fully integrated and underbench models with variable fulcrum or flexifit hinges.

**KITPLV2**

Kit extension for dishwasher and washing machine: lenght mt. 2

**KITFLEXI****KITPL60B**

Toekick Kit in White colour with adjustable height and deepness. Can be installed over all the fully integrated and underbench models with variable fulcrum or flexifit hinges.

**KITPL60X**

Toekick Kit in Stainless Steel with adjustable height and deepness. Can be fitted over all the fully integrated and underbench models with variable fulcrum or flexifit hinges.

## Symbols glossary



Activelight is an led light which projects a red spot onto the floor beneath the dishwasher when the appliance is in use.



The Aquatest sensor is an electronic sensor that measures the degree of water transparency at the end of the initial soaking phase. Based on the values measured, the sensor sets the most suitable programme, thus obtaining the best washing results with the minimum amount of water.



86 cm high



Delay Timer: Option to postpone the start of the desired programme by up to 24 hours in order to programme the dishwasher to run at the desired time.



The Dry Assist option ensures optimal drying of the dishes by automatically opening the door at the end of the wash cycle. Reducing the rinse temperature



FlexiDuo: The FlexiDuo 3rd cutlery basket allows you to arrange cutlery or small cups, ladles, or bulky utensils however you like: it consists of two separate and moveable modules.



The FlexiFit hinges allow the kitchen panel to slide over the dishwasher door, allowing a minimum kitchen plinth height of 5 cm.



ExtraGlide guides system makes the second basket run even smoother and softer. It facilitates movement even when fully loaded, and thanks to the increased excursion, facilitates the insertion of dishes into the basket.



Noise Level: Excellent insulation and special devices keep noise to a minimum.



Planetarium washing system, with high rotations per minute, guarantees complete coverage of the tank, thanks to the simultaneous rotation of base and sprayers, and excellent washing results.



Delicate: Delicate washing program is designed for delicate dishes which are not heavily soiled.



1/2 load: This program is designed for washing dishes not heavily soiled with partial load of the dishwasher.



Delicate: Delicate washing program is designed for delicate dishes which are not heavily soiled.



Mix: The Mix programme is suitable for mixed crockery and everyday pots and pans, without any particular incrustation.



Soak programme: The soak programme provides a rinse to prevent dirt from drying.



Express 27': The Express 27' programme is a quick wash cycle, at low temperatures, for lightly soiled dishes.



13 place settings: Number of place settings.



Total Acquastop: In addition to the partial Acquastop protection present in all Smeg dishwashers, some models have an electronic device fitted to the water intake hose, which monitors water levels in the machine, detects leaks in the hose and switches off the water supply immediately when necessary.



System WaterSave ensures the best washing results with minimal water consumption depending on the model of dishwasher.



Dishwasher cleaning cycle. The cycle should be started with the machine empty, without dishes. It is recommended to run the program every 2-3 months, using special dishwasher detergents.



Allows you to enable additional programs when selected together with any wash cycle. After having selected the required wash cycle, press the button (



STERYL 75°: Intensive wash cycle ideal for plates, pots, pans, cutting boards, feeding bottles.