

# DI323BL



Product Family Commercial width Commercial height Installation Kitchen panel N° baskets Motor EAN code Dishwashers 60 cm 82 cm Fully-integrated built-in Not supplied 3, FlexiDuo Inverter 2.0 8017709307844



# Programs

(27min 45° 60 ECO 50°	AUTO 65°	<u>0</u> 75°	
N. of programmes	10+1	Auto sensor 45-65	Yes
Washing temperatures	38, 45, 50, 55, 65, 70, 75 °C	Mix	Yes
Soak	Yes	Quiet (-2 dB)	Yes
Express 27'	Yes	Intense	Yes
Crystal	Yes	Self clean	Yes
Full express - 60 minutes	Yes	Hygiene 99,9%	Yes
ECO	Yes		

# Options



Dry Assist+ option Delay timer option Yes Up to 24 hours 1/2 load FlexiZone Yes optionSpecial programs option Yes

# Baskets



Basket colour Basket components colour Handle Grey Grey

In plastic on upper and lower basket

Largest loadable dish in 19,0 cm upper basket Lower Basket With 4 foldable racks Lower basket with antidrip inserts



Upper Basket		
Glass holder		
Height adjustment of		
the upper basket		
Sliding Guides Extra		
Glide		

With 3 foldable racks Yes On three levels (5 cm) Yes

Largest loadable dish in 30,0 cm lower basket Colour Inner Blue Components Cutlery basket Yes

# **Technical Features**

ACTIVE LIGHT			
Width (mm)	598 mm	Water supply	Single; cold/hot water max.
Depth (mm)	545 mm		60°C - energysave with hot
Display type	LED display (3 digit)		water up to 35%
Product Height (mm)	818 mm	Max water hardness	100°fH;58°dH
Controls	Electronic	Drying system	Natural condenser drying,
Display	Delayed start, Programme time indicator		with Dry Assist + automatic door opening system at the end of the cycle
Programme graphics	Symbols and label	Steam protection	In plastic
On/off indicator	Yes	Tub material	Stainless steel
Salt light indicator	Light	Filter	Stainless steel
Rinse aid indicator	Light	Concealed heating	Yes
End of cycle indicator	ActiveLight	element	
Washing system	Planetarium	Hinges	Self balancing, Sliding,
Third spray arm	Single		FLEXIFIT
Water softener	With electronic setting	Min. and max. frontal	2,5 - 11 kg
Turbidity sensor	Yes	panel weight	
Aquatest Flood protection system	Total Acquaston	Min. and max plinth height	50 - 215 mm
		Adjustable feet	7 cm, from 820 to 890 mm
		Back cover	Yes
		Depth of dishwasher with open door (mm)	1146
		Back feet adjustable from front	Yes

Top cover

# Performance / Energy Label - Reg. 2019




Programme duration4:25 h:minAirborne acoustical42 dB(A) re 1 pWnoise emissionsBAirborne acousticalBnoise emission class37,9(EEI)Energy efficiency Index

In plastic

# **Electrical Connection**



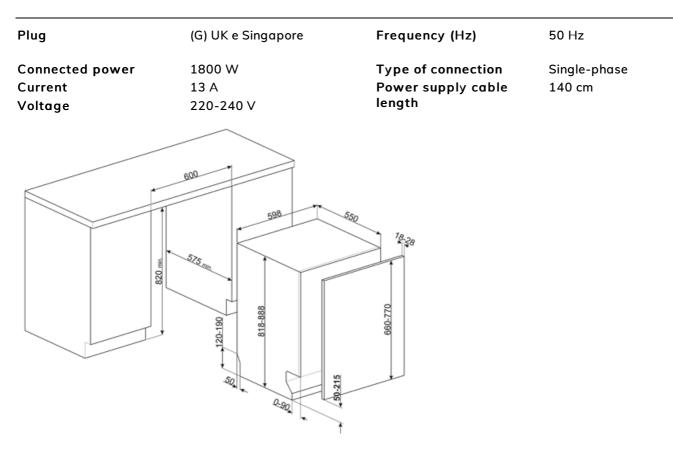



## **Compatible Accessories**



# KIT82CN



KIT82SPRAN



KIT82SPRX

### кіт82сх

KIT82SPRMW

#### KITFLEXI

Kit for 60cm dishwashers with FlexiFit hinges for door panel weight >11 kg (max 15 kg 82 cm and 13,5 kg 86 cm)

### KITPL60B

Toekick Kit in White colour with adjustable height and deepness. Can be installed over all the fully integrated and underbench models with variable fulcrum or flexifit hinges.

#### KITPL60X

Toekick Kit in Stainless Steel with adjustable height and deepness. Can be fitted over all the fully integrated and underbench models with variable fulcrum or flexifit hinges.



**KITPL60N** 

KITGH

racks



Toekick Kit in Black colour with adjustable height and deepness. Can be installed over all the fully integrated and underbench models with variable fulcrum or flexifit hinges.

Kit glass holder. It has to be fitted on the

first basket but only if there are foldable

### KITPLV2



Kit extension for dishwasher and washing machine: lenght mt. 2





# Symbols glossary

ACTIVE LIGHT	Activelight is an led light which projects a red spot onto the floor beneath the dishwasher when the appliance is in use.	AGUATIST	The Aquatest sensor is an electronic sensor that measures the degree of water transparency at the end of the initial soaking phase. ased on the values measured, the sensor sets the most suitable programme, thus obtaining the best washing results with the minimum amount of water.
Ď	To improve the drying of dishes without leaving stains.	B C	Energy efficiency class B
82 cm v	82 cm high	$\overline{\mathfrak{O}}$	Delay Timer: Option to postpone the start of the desired programme by up to 24 hours in order to programme the dishwasher to run at the desired time.
	FlexiDuo: The FlexiDuo 3rd cutlery basket allows you to arrange cutlery or small cups, ladles, or bulky utensils however you like: it consists of two separate and moveable modules.	FLEXI FIT	The FlexiFit hinges allow the kitchen panel to slide over the dishwasher door, allowing a minimum kitchen plinth height of 5 cm.
())	FlexiZone: The ½ load flexizone allows you to wash a reduced load saving energy, water and time and there are no restrictions on where the items are placed.		The ExtraGlide guides system makes the second basket run even smoother and softer. It facilitates movement even when fully loaded, and thanks to the increased excursion, facilitates the insertion of dishes into the basket.
42dB	Noise Level: Excellent insulation and special devices keep noise to a minimum.	Þ	The Planetarium washing system, with high rotations per minute, guarantees complete coverage of the tank, thanks to the simultaneous rotation of base and sprayers, and excellent washing results.
AUTO 45°-65°	Auto 45°- 65°: The auto programme regulates the length of a cycle depending on the need for a pre-wash and the number of rinses required.	Q45°	Crystals: The Crystals programme is dedicated to delicate dishes such as glasses and china.
ECO 50°	Eco: Eco, this economic wash programme uses a low amount of water and energy in order to provide the most environmentally friendly cleaning option.	65°)))	Mix: The Mix programme is suitable for mixed crockery and everyday pots and pans, without any particular incrustation.
<u>ش</u>	Soak programme: The soak programme provides a rinse to prevent dirt from drying.	27min	Express 27': The Express 27' programme is a quick wash cycle, at low temperatures, for lightly soiled dishes.
70°	Ultraclean: The Ultraclean option performs a final rinse at a high temperature of 70°c eliminating virtually all bacteria.	101	13 place settings: Number of place settings.

# •se•smeg

Accustion	Total Acquastop: In addition to the partial Acquastop protection present in all Smeg dishwashers, some models have an electronic device fitted to the water intake hose, which monitors water levels in the machine, detects leaks in the hose and switches off the water supply immediately when necessary.	000 91t	System WaterSave ensures the best washing results with minimal water consumption depending on the model of dishwasher.
60 min	Quick wash cycle for normally soiled mixed loads such as dishes and pans, even with dried-on residues. Dishes are washed and dried in 60 minutes.		Dishwasher cleaning cycle. The cycle should be started with the machine empty, without dishes. It is recommended to run the program every 2-3 months, using special dishwasher detergents.
ৰ্শ	SILENT: Wash cycle suitable for normally soiled dishes, even with dried-on residues. Ensures maximum noise reduction and is therefore ideal if you wish to run it during the night.	Ś	Allows you to enable additional programs when selected together with any wash cycle. After having selected the required wash cycle, press the button (
DRY	The Dry Assist + option, in addition to saving energy, ensures perfect drying of the dishes by opening the door automatically at the end of the washing cycle.	() 175°	HYGIENE 99.9% High-temperature washing programme. The 75° rinse guarantees the removal of 99.9% of germs and bacteria.
Avyates Ny Sol	The work aimed at continuous improvement has allowed the creation of the second generation of the Inverter motor 2.0, characterised by greater efficiency and durability over time, which allows very high performance and a lower energy consumption and noise level.		



# Benefit (TT)

#### Active Light

Maximum control thanks to the light projected on the floor that indicates when the dishwasher is running and when the cycle is complete

Smeg dishwashers equipped with ActiveLight signal the appliance's activity status by projecting a light on the floor while the cycle is running. The light goes out at the end of the cycle, signalling that the dishwasher can be unloaded.

#### FlexiDuo

The flexible third basket provides additional space, adapting to the load to accommodate various types of dishes, ensuring optimal organization and efficient use of interior capacity

The third FlexiDuo basket consists of two separate sections that can be handled independently of each other, stacked and/or removed, offering loading flexibility for every need. Depending on the arrangement, it allows cups, tall glasses, bulky utensils and pots and pans to be placed in the upper basket.

#### Planetarium Wash System

Full and deep wash coverage thanks to the advanced movement of the spray arm, an innovation patented by Smeg

Smeg's patented Planetarium Wash System guarantees impeccable cleaning. With a simultaneous double movement of the sprayer and 65 rotations per minute, it reaches every nook and cranny for extraordinary results. Dishes, glasses and utensils will be perfectly clean in no time. An intelligent system where efficiency and style meet, delivering brilliant results effortlessly.

#### Flexifit hinge system

Smooth-running door for optimal integration into the kitchen deisgn

The height of the plinth can vary from 5 cm to 21.5 cm, allowing it to fit perfectly into the cabinet. Thanks to this solution, the dishwasher blends harmoniously into its surroundings, with the door and plinth perfectly aligned with the other kitchen furniture.

#### Extra Glide Telescopic Guides

Smoother and more stable loading and unloading operations

Extra Glide telescopic guides ensure smooth and safe extraction of the upper basket, even with heavy loads. The telescopic design ensures smooth, stable and silent movement, improving ergonomics and convenience. Ideal for optimising space and ease of use, they combine durability and comfort in every washing operation.

#### DryAssist+

The Dry Assist+ system of automatic door opening at the end of the cycle ensures fast and energy-efficient drying