

# DID322BL







**Product Family** Dishwashers Commercial width 60 cm Commercial height 82 cm

Installation Fully-integrated built-in

Kitchen panel Not supplied N° baskets 3, FlexiDuo Motor Inverter 2.0 EAN code 8017709310264



### **Programs**























N. of programmes 10 + 1Washing temperatures 38, 45, 50, 55, 65, 70, 75 °C Soak Express 27' Yes Crystal Yes Full express - 60 Yes minutes **ECO** Yes

Yes Quiet (-2 dB) Yes Intense Yes Self clean Yes Hygiene 99,9% Yes **Delicate** Yes

## **Options**









Dry Assist+ option **Delay timer option**  Yes

1/2 load FlexiZone

Yes

option Up to 24 hours

Special programs option Yes

### **Baskets**



**Basket** colour **Basket components**  Grey Grey Largest loadable dish in 19,0 cm

upper basket Lower Basket

With 4 foldable racks

colour Handle

In plastic on upper and lower basket

Lower basket with anti- Yes drip inserts



**Upper Basket** 

Glass holder

Height adjustment of the upper basket

With 3 foldable racks

Yes

On three levels (5 cm)

Largest loadable dish in 30,0 cm

lower basket

Colour Inner Components

**Cutlery basket** 

Blue

Yes

#### **Technical Features**









Width (mm) 598 mm Depth (mm) 545 mm

LED display (3 digit) Display type

Product Height (mm) 818 mm Controls Electronic

Delayed start, Programme Display

time indicator

Symbols and label Programme graphics

On/off indicator Yes Salt light indicator Light Rinse aid indicator Light End of cycle indicator ActiveLight Washing system Planetarium

Third spray arm Single

Water softener With electronic setting

Flood protection system Total Acquastop

Water supply

Single; cold/hot water max. 60°C - energysave with hot

water up to 35%

Max water hardness 100°fH;58°dH Drying system

Natural condenser drying, with Dry Assist + automatic door opening system at the

end of the cycle

Steam protection In plastic Tub material Stainless steel Filter Stainless steel

Concealed heating element

Hinges Self balancing, Sliding,

**FLEXIFIT** 2,5 - 11 kg

50 - 215 mm

Yes

Min. and max. frontal

panel weight

Min. and max plinth

height

7cm, from 820 to 890 mm Adjustable feet

Back cover Depth of dishwasher with open door (mm)

Back feet adjustable

from front

Yes 1146

Yes

Top cover In plastic

## Performance / Energy Label - Reg. 2019









**Energy Efficiency Class Energy consumption** 63 KWh

[per 100 cycles, based on the eco programme] Rated capacity (ps)

13 Water consumption [per 9,0 litres

cycle]

Programme duration Airborne acoustical

noise emissions Airborne acoustical noise emission class

**Energy efficiency Index** 

4:25 h:min

42 dB(A) re 1 pW

37,9

В

(EEI)


### **Electrical Connection**

50 Hz Plug (G) UK e Singapore Frequency (Hz)



Connected power 1800 W
Current 13 A
Voltage 220-240 V

Type of connection Power supply cable length Single-phase 140 cm

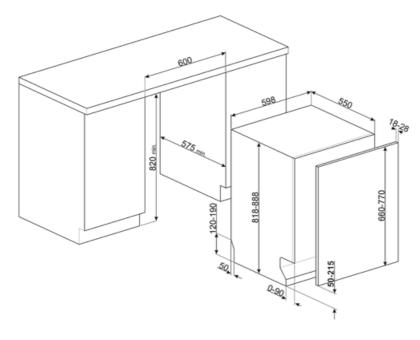



### **Compatible Accessories**



KIT82CN



KIT82CX



KIT82SPRAN



KIT82SPRMW



KIT82SPRX



Kit for 60cm dishwashers with FlexiFit hinges for door panel weight >11 kg

(max 15 kg 82 cm and 13,5 kg 86 cm)



#### **KITGH**

Kit glass holder. It has to be fitted on the first basket but only if there are foldable racks



#### KITPL60B

**KITFLEXI** 

Toekick Kit in White colour with adjustable height and deepness. Can be installed over all the fully integrated and underbench models with variable fulcrum or flexifit hinges.




#### KITPL60N

Toekick Kit in Black colour with adjustable height and deepness. Can be installed over all the fully integrated and underbench models with variable fulcrum or flexifit hinges.




#### KITPL60X







washing machine: lenght mt. 2





### Symbols glossary



Activelight is an led light which projects a red spot onto the floor beneath the dishwasher when the appliance is in use.



To improve the drying of dishes without leaving stains.



82 cm high



Delay Timer: Option to postpone the start of the desired programme by up to 24 hours in order to programme the dishwasher to run at the desired time.



FlexiDuo: The FlexiDuo 3rd cutlery basket allows you to arrange cutlery or small cups, ladles, or bulky utensils however you like: it consists of two separate and moveable modules.



The FlexiFit hinges allow the kitchen panel to slide over the dishwasher door, allowing a minimum kitchen plinth height of 5 cm.



FlexiZone: The ½ load flexizone allows you to wash a reduced load saving energy, water and time and there are no restrictions on where the items are placed.



Noise Level: Excellent insulation and special devices keep noise to a minimum.



The Planetarium washing system, with high rotations per minute, guarantees complete coverage of the tank, thanks to the simultaneous rotation of base and sprayers, and excellent washing results.



Crystals: The Crystals programme is dedicated to delicate dishes such as glasses and china.



Delicate: Delicate washing program is designed for delicate dishes which are not heavily soiled.



Eco: Eco, this economic wash programme uses a low amount of water and energy in order to provide the most environmentally friendly cleaning option.



Mix: The Mix programme is suitable for mixed crockery and everyday pots and pans, without any particular incrustation.



Soak programme: The soak programme provides a rinse to prevent dirt from drying.



Express 27': The Express 27' programme is a quick wash cycle, at low temperatures, for lightly soiled dishes.



Ultraclean: The Ultraclean option performs a final rinse at a high temperature of 70°c eliminating virtually all bacteria.



13 place settings: Number of place settings.



Total Acquastop: In addition to the partial Acquastop protection present in all Smeg dishwashers, some models have an electronic device fitted to the water intake hose, which monitors water levels in the machine, detects leaks in the hose and switches off the water supply immediately when necessary.



System WaterSave ensures the best washing results with minimal water consumption depending on the model of dishwasher.



Quick wash cycle for normally soiled mixed loads such as dishes and pans, even with dried-on residues. Dishes are washed and dried in 60 minutes.



Dishwasher cleaning cycle. The cycle should be started with the machine empty, without dishes. It is recommended to run the program every 2-3 months, using special dishwasher detergents.



SILENT: Wash cycle suitable for normally soiled dishes, even with dried-on residues. Ensures maximum noise reduction and is therefore ideal if you wish to run it during the night.





Allows you to enable additional programs when selected together with any wash cycle. After having selected the required wash cycle, press the button (



Energy efficiency class B



The work aimed at continuous improvement has allowed the creation of the second generation of the Inverter motor 2.0, characterised by greater efficiency and durability over time, which allows very high performance and a lower energy consumption and noise level.



The Dry Assist + option, in addition to saving energy, ensures perfect drying of the dishes by opening the door automatically at the end of the washing cycle.



HYGIENE 99.9% High-temperature washing programme. The 75° rinse guarantees the removal of 99.9% of germs and bacteria.



### Benefit (TT)

#### **Active Light**

Maximum control thanks to the light projected on the floor that indicates when the dishwasher is running and when the cycle is complete

Smeg dishwashers equipped with ActiveLight signal the appliance's activity status by projecting a light on the floor while the cycle is running. The light goes out at the end of the cycle, signalling that the dishwasher can be unloaded.

#### FlexiDuo

The flexible third basket provides additional space, adapting to the load to accommodate various types of dishes, ensuring optimal organization and efficient use of interior capacity

The third FlexiDuo basket consists of two separate sections that can be handled independently of each other, stacked and/or removed, offering loading flexibility for every need. Depending on the arrangement, it allows cups, tall glasses, bulky utensils and pots and pans to be placed in the upper basket.

#### Planetarium Wash System

Full and deep wash coverage thanks to the advanced movement of the spray arm, an innovation patented by Smeg

Smeg's patented Planetarium Wash System guarantees impeccable cleaning. With a simultaneous double movement of the sprayer and 65 rotations per minute, it reaches every nook and cranny for extraordinary results. Dishes, glasses and utensils will be perfectly clean in no time. An intelligent system where efficiency and style meet, delivering brilliant results effortlessly.

#### Flexifit hinge system

Smooth-running door for optimal integration into the kitchen deisgn

The height of the plinth can vary from 5 cm to 21.5 cm, allowing it to fit perfectly into the cabinet. Thanks to this solution, the dishwasher blends harmoniously into its surroundings, with the door and plinth perfectly aligned with the other kitchen furniture.

#### DryAssist+

The Dry Assist+ system of automatic door opening at the end of the cycle ensures fast and energy-efficient drying