

DW83TXSA

Product Family	Dishwashers
Commercial width	60 cm
Commercial height	85 cm
Installation	Free-standing
N° baskets	3, Flexi
EAN code	8017709334086




Programs



N. of programmes	8	ECO	Yes
Washing temperatures	50, 60, 65, 70 °C	Mix	Yes
Soak	Yes	Intense 60°	Yes
Full express - 60 minutes	Yes	Auto 50°-60°	Yes
Express 50°	Yes		

Options



Dry Assist option		Crystal option	Yes
Delay timer option	Up to 24 hours	Sterilise option	Yes
Extreme option	Yes		

Baskets

Basket colour	Grey	Height adjustment of the upper basket	On two levels (4 cm)
Basket components colour	Grey	Largest loadable dish in upper basket	19,0 cm
Handle	In plastic with stainless steel insert on upper and lower basket	Lower Basket	With 4 foldable racks
Upper Basket	With 3 foldable racks	Largest loadable dish in lower basket	27,0 cm
Glass holder	Yes	Colour Inner Components	Grey


Technical Features



Width (mm)	598 mm	Turbidity sensor Aquatest	Yes
Depth (mm)	600 mm	Flood protection system	Total Acquastop
Display type	LED display	Water supply	Single; cold/hot water max. 60°C - energysave with hot water up to 35%
Product Height (mm)	848 mm	Max water hardness	90°FH; 50°dH
Controls	Electronic	Drying system	Natural condenser drying, with Dry Assist automatic door opening system at the end of the cycle
Display	Delayed start, Programme time indicator, Time to end indication	Tub material	Stainless steel
Programme graphics	Symbols	Filter	Stainless steel
Salt light indicator	Light	Concealed heating element	Yes
Rinse aid indicator	Light	Hinges	Self balancing with fixed hinges
Progress indicator	Yes	Adjustable feet	Just for levelling
End of cycle indicator	On display, with acoustic signal	Depth of dishwasher with open door (mm)	1168 mm
Washing system	Orbital	Removable top	Yes
Third spray arm	Single	Top cover	In plastic
Water softener	With electronic setting		

Electrical Connection

Connected power	1950 W	Type of connection	Single-phase
Current	10 A	Power supply cable length	150 cm
Voltage	220-240 V	Plug	(F;E) Schuko
Frequency (Hz)	50 Hz		

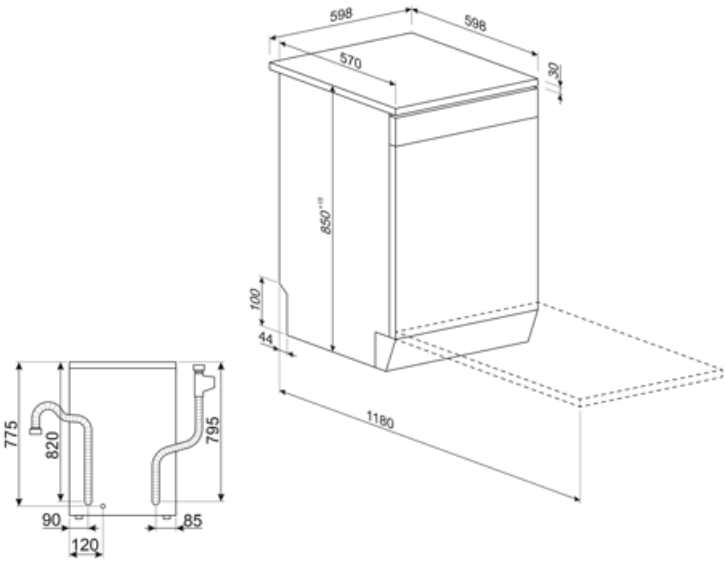

Compatible Accessories



KITGH

Kit glass holder. It has to be fitted on the first basket but only if there are foldable racks






















KITINC



KITPLV2

Kit extension for dishwasher and washing machine: lenght mt. 2

Symbols glossary

	The Aquatest sensor is an electronic sensor that measures the degree of water transparency at the end of the initial soaking phase. Based on the values measured, the sensor sets the most suitable programme, thus obtaining the best washing results with the minimum amount of water.		A+++: Appliances with this symbol can reduce energy consumption by a further 30% from the standard A energy rating.
	Delay Timer: Option to postpone the start of the desired programme by up to 24 hours in order to programme the dishwasher to run at the desired time.		Option which improves the washing results of the selected programme. It increases the wash temperature and duration.
	This option provides special care for a delicate load. It prevents rapid changes in the wash temperature of the selected programme and reduces it to 4		The work aimed at continuous improvement has allowed the creation of the second generation of the Inverter motor 2.0, characterised by greater efficiency and durability over time, which allows very high performance and a lower energy consumption and noise level.
	Noise Level: Excellent insulation and special devices keep noise to a minimum.		Orbital wash system distributes water evenly throughout the 60cm dishwasher cavity, directing water with precision to ensure an excellent wash.
	Wash cycle for normally soiled mixed loads such as dishes and pans, even with dried-on residues. When this program is selected, the dishwasher recognises the type of dirt and automatically adjusts the washing parameters as appropriate.		Eco: Eco, this economic wash programme uses a low amount of water and energy in order to provide the most environmentally friendly cleaning option.
	Mix: The Mix programme is suitable for mixed crockery and everyday pots and pans, without any particular incrustation.		Soak programme: The soak programme provides a rinse to prevent dirt from drying.
	15 place settings: Number of place settings.		Total Acquastop: In addition to the partial Acquastop protection present in all Smeg dishwashers, some models have an electronic device fitted to the water intake hose, which monitors water levels in the machine, detects leaks in the hose and switches off the water supply immediately when necessary.
	System WaterSave ensures the best washing results with minimal water consumption depending on the model of dishwasher.		A quick programme suitable for washing a load with fresh and light soil.
	Quick wash cycle for normally soiled mixed loads such as dishes and pans, even with dried-on residues. Dishes are washed and dried in 60 minutes.		Programme suitable for washing and drying heavily soiled items with encrusted residues.
	Option which provides better cleaning results by keeping the temperature between 65 and 70°C for at least 10 minutes during the last rinsing phase.		