
DW8610

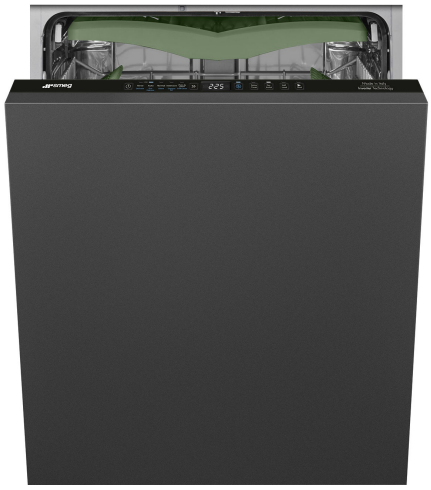

Product Family	Dishwashers
Commercial height	STANDARD HEIGHT
Installation	Fully-integrated built-in
N° baskets	3, Flexi
Motor	Inverter
EAN code	8017709354794

Programs

N. of programmes	10	**Normal**	Yes
Washing temperatures	30, 40, 50, 65, 75 °F	**Rinse**	Yes
Auto sensor 45-65	Yes	**Eco express**	Yes
Intense	Yes	**Express 60'**	Yes
Self clean	Yes	**Pots & Pans**	Yes
Delicate	Yes		

Options

Dry Assist+ option	Yes	**Intensive wash zone option**	
Delay timer option	Up to 24 hours	**Special programs option**	Yes
1/2 load FlexiZone option	Yes		

Baskets

Basket colour	Grey	**Lower Basket**	With fixed racks
Upper Basket	With central fixed racks	**Lower basket with anti-drip inserts**	Yes
Height adjustment of the upper basket	On three levels (5 cm)	**Colour Inner Components**	Sage Leaf
Largest loadable dish in upper basket	19,0 inches	**Cutlery basket**	Yes

Technical Features




Width (mm)	23 9/16 "
Depth (mm)	21 5/8 "
Display type	LED display (3 digit)
Product Height (mm)	33 3/4 "
Display	Delayed start, Programme time indicator
Programme graphics	Written in EN
On/off indicator	Yes
Rinse aid indicator	Light
End of cycle indicator	Acoustic signal
Auto switch-off	Yes
Washing system	Orbital
Third spray arm	Single
Turbidity sensor Aquatest	Yes
Flood protection system	Single Acquastop
Max water hardness	100°fH;58°dH

Drying system	Natural condenser drying, with Dry Assist + automatic door opening system at the end of the cycle
Steam protection	Metallic sheet
Tub material	Stainless steel
Filter	Stainless steel
Hinges	Self balancing, Sliding, FLEXIFIT
Min. and max. frontal panel weight	2 - 11 lbs
Min. and max plinth height	50 - 215 mm
Adjustable feet	7cm, from 860 to 930 mm
Airborne acoustical noise emissions dBA	42 dBA
Additional gaskets	Yes
Back cover	Yes
Depth of dishwasher with open door (mm)	1186 mm
Top cover	Metallic sheet
Energy Star	Yes

Electrical Connection

Connected power	1100 W
Current	13 A
Voltage	115 V
Frequency (Hz)	60 Hz

Type of connection	Single-phase
Power supply cable length	140 "
Plug	(B) NEMA 5-15P

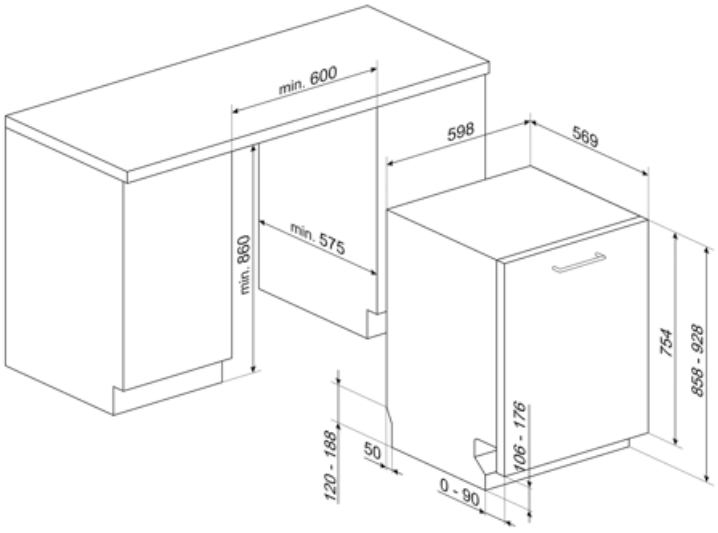
min. 600
598
569
min. 575
min. 860
754
858 - 928
106 - 176
120 - 188
50
0 - 90

Compatible Accessories



KIT86SPRAN



KIT86SPRMW



KIT86SPRX



KITFLEXI

KITJBDW





KITPL60B

Toekick Kit in White colour with adjustable height and deepness. Can be installed over all the fully integrated and underbench models with variable fulcrum or flexifit hinges.

KITPL60N



Toekick Kit in Black colour with adjustable height and deepness. Can be installed over all the fully integrated and underbench models with variable fulcrum or flexifit hinges.

KITPL60X



Toekick Kit in Stainless Steel with adjustable height and deepness. Can be fitted over all the fully integrated and underbench models with variable fulcrum or flexifit hinges.

KITPLV2



Kit extension for dishwasher and washing machine: lenght mt. 2

Symbols glossary



Acquastop: Some Smeg dishwashers are equipped with a simple Acquastop: float sensor in the bottom which is necesary to prevent an accidental leakage of water inside the appliance.



To improve the drying of dishes without leaving stains.



The FlexiFit hinges allow the kitchen panel to slide over the dishwasher door, allowing a minimum kitchen plinth height of 5 cm.



Smeg's evolution towards more intelligent and eco-friendly models has led to the choice of Inverter technology, which significantly reduces consumption.



Orbital wash system distributes water evenly throughout the 60cm dishwasher cavity, directing water with precision to ensure an excellent wash.



Delicate: Delicate washing program is designed for delicate dishes which are not heavily soiled.



Ultraclean: The Ultraclean option performs a final rinse at a high temperature of 70°c eliminating virtually all bacteria.



System WaterSave ensures the best washing results with minimal water consumption depending on the model of dishwasher.



SILENT: Wash cycle suitable for normally soiled dishes, even with dried-on residues. Ensures maximum noise reduction and is therefore ideal if you wish to run it during the night.



The Dry Assist + option, in addition to saving energy, ensures perfect drying of the dishes by opening the door automatically at the end of the washing cycle.



The Aquatest sensor is an electronic sensor that measures the degree of water transparency at the end of the initial soaking phase. ased on the values measured, the sensor sets the most suitable programme, thus obtaining the best washing results with the minimum amount of water.



Delay Timer: Option to postpone the start of the desired programme by up to 24 hours in order to programme the dishwasher to run at the desired time.



FlexiZone: The ½ load flexizone allows you to wash a reduced load saving energy, water and time and there are no restrictions on where the items are placed.



Noise Level: Excellent insulation and special devices keep noise to a minimum.



Auto 45°- 65°: The auto programme regulates the length of a cycle depending on the need for a pre-wash and the number of rinses required.



PRG_RINSE_72dpi



15 place settings: Number of place settings.



Dishwasher cleaning cycle. The cycle should be started with the machine empty, without dishes. It is recommended to run the program every 2-3 months, using special dishwasher detergents.



Allows you to enable additional programs when selected together with any wash cycle.