


# DW8620



Product family	Dishwashers
Width	24"
Commercial height	86 cm
N° baskets	3, FlexiDuo
Engine	Inverter
EAN code	8017709354855

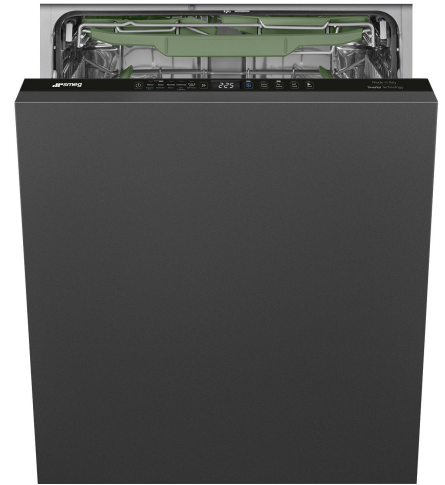

## Programs



Number of programs	10	Delicates	Yes
Washing temperatures	38, 45, 50, 55, 65, 70, 75 °F	Normal	Yes
Express 27'	Yes	Rinse	Yes
Automatic	Yes	Eco express	Yes
Intense	Yes	Pots & Pans	Yes
Self Clean	Yes		

## Options



Dry Assist+ option	Yes	FlexiZone half-load option	Yes
Delay start	Up to 24 hours	Special programs option	Yes

## Baskets



Basket color	Gray	Lower basket	With 2 foldable racks
Upper basket	1 foldable rack	Lower basket accessories	MultiLoad
Upper basket height adjustment	On 3 levels	Lower basket with anti-drip inserts	Yes
Sliding Guides Extra Glide	Yes	Colour Inner Components	Sage Leaf
Largest loadable dish in upper basket	19,0 inches	Cutlery basket	Yes

## Technical Features




<b>Width</b>	23 9/16 "	<b>Flood protection system</b>	Single Aquastop
<b>Depth</b>	21 5/8 "	<b>Max water hardness</b>	100°FH;58°dH
<b>Display type</b>	LED display (3 digits)	<b>Drying system</b>	Natural condenser drying, with Dry Assist + automatic door opening system at the end of the cycle
<b>Height</b>	33 3/4 "	<b>Tube material</b>	Stainless steel
<b>Display</b>	Delay start, Program progress indicator	<b>Filter</b>	Stainless steel
<b>Program symbols</b>	Writings in English	<b>Concealed heating element</b>	Yes
<b>On/off indicator</b>	Yes	<b>Hinges</b>	Self-balancing, Sliding, FLEXIFIT
<b>Salt indicator</b>	Light	<b>Min. and max. frontal panel weight</b>	4.4 - 24.3 lbs
<b>Rinse aid indicator</b>	Light	<b>Min. and max plinth height</b>	50 - 215 mm
<b>End-of-cycle indicator</b>	ActiveLight	<b>Adjustable feet</b>	2 3/4", from 33 7/8" to 36 5/8"
<b>Washing system</b>	Orbital	<b>Additional gaskets</b>	Yes
<b>Third spray arm</b>	Single	<b>Back cover</b>	Yes
<b>Water softener</b>	With electronic setting	<b>Depth of dishwasher with open door (mm)</b>	1186
<b>Turbidity sensor Aquatest</b>	Yes	<b>Top cover</b>	Metal sheet

## Electrical Connection

<b>Plug</b>	(B) NEMA 5-15P	<b>Frequency (Hz)</b>	60 Hz
<b>Connected power</b>	1100 W	<b>Connection type</b>	Single-phase
<b>Current</b>	13 A	<b>Power supply cable length</b>	140 "
<b>Voltage</b>	115 V		

## Compatible Accessories



### KITGH

Kit glass holder. It has to be fitted on the first basket but only if there are foldable racks



### KITPL60N

Toekick Kit in Black colour with adjustable height and deepness. Can be installed over all the fully integrated and underbench models with variable fulcrum or flexifit hinges.




### KITPLV2

Kit extension for dishwasher and washing machine: lenght mt. 2



### KITPL60B























Toekick Kit in White colour with adjustable height and deepness. Can be installed over all the fully integrated and underbench models with variable fulcrum or flexifit hinges.



### KITPL60X

Toekick Kit in Stainless Steel with adjustable height and deepness. Can be fitted over all the fully integrated and underbench models with variable fulcrum or flexifit hinges.

## Symbols glossary

	<p><b>Acquastop:</b> Some Smeg dishwashers are equipped with a simple Acquastop: float sensor in the bottom which is necessary to prevent an accidental leakage of water inside the appliance.</p>		<p><b>Activelight</b> is an led light which projects a red spot onto the floor beneath the dishwasher when the appliance is in use.</p>
	<p><b>Aquatest</b> measures the clarity of the water during an auto program, and automatically ensures the minimum consumption of water and energy.</p>		<p><b>Anti-drip:</b> Some models of dishwashers are equipped with special polymer nozzles anti-drip, that improve the process of drying.</p>
	<p><b>COMM_HEIGHT_86_72dpi</b></p>		<p><b>Delay Timer:</b> The delay timer can postpone the start of the program by up to 24 hours.</p>
	<p><b>FlexiDuo:</b> The FlexiDuo 3rd cutlery basket allows you to arrange cutlery or small cups, ladles, or bulky utensils however you like: it consists of two separate and moveable modules.</p>		<p>Models with new Flexi Fit hinges are able to be installed in kitchens with a plinth of just 5cms. With this new hinge design, the panel has a sliding movement from the bottom to the top, avoiding any possible interference of the panel with the plinth.</p>
	<p><b>FlexiZone:</b> The ½ load flexizone allows you to wash a reduced load saving energy, water and time and there are no restrictions on where the items are placed.</p>		<p>The new ExtraGlide guide system, available on top of the range models, makes the second basket even smoother and softer. In fact, it facilitates the extraction of the introduction, even at full load and, for the greater excursion, the insertion of crockery is also facilitated in the rear part.</p>
	<p><b>Inverter technology:</b> The evolution of Smeg's driers towards more intelligent and environmentally sustainable models has led to the choice of using Inverter technology with heat pumps, which reduces significantly energy consumption.</p>		<p><b>Noise Level:</b> Excellent insulation and special devices keep noise to a minimum.</p>
	<p><b>Orbital wash system</b> distributes water evenly throughout the 60cm dishwasher cavity, directing water with precision to ensure an excellent wash.</p>		<p><b>Auto 45°- 65°:</b> The auto programme regulates the length of a cycle depending on the need for a pre-wash and the number of rinses required.</p>
	<p><b>Delicate:</b> Delicate washing program is designed for delicate dishes which are not heavily soiled.</p>		<p><b>PRG_RINSE_72dpi</b></p>
	<p><b>Rapid 27 Mins:</b> The rapid 27 mins quick program takes just 27 minutes to wash a load.</p>		<p><b>Ultraclean:</b> The Ultraclean option performs a final rinse at a high temperature of 70°C eliminating virtually all bacteria.</p>
	<p>The symbols show the number of plate settings of the dishwasher.</p>		<p><b>System WaterSave</b> ensures the best washing results with minimal water consumption depending on the model of dishwasher.</p>
	<p>...</p>		<p>...</p>



...



The Dry Assist + option, in addition to saving energy, ensures perfect drying of the dishes by opening the door automatically at the end of the wash c

## Benefit (TT)

---

### Active Light

Maximum control thanks to the light projected on the floor that indicates when the dishwasher is running and when the cycle is complete

Smeg dishwashers equipped with ActiveLight signal the appliance's activity status by projecting a light on the floor while the cycle is running. The light goes out at the end of the cycle, signalling that the dishwasher can be unloaded.

### FlexiDuo

The flexible third basket provides additional space, adapting to the load to accommodate various types of dishes, ensuring optimal organization and efficient use of interior capacity

The third FlexiDuo basket consists of two separate sections that can be handled independently of each other, stacked and/or removed, offering loading flexibility for every need. Depending on the arrangement, it allows cups, tall glasses, bulky utensils and pots and pans to be placed in the upper basket.

### Orbital Wash System

Even water distribution, deep cleaning and low noise thanks to the dual rotating spray arms

Orbital washing system, which, thanks to its double arm, its 7 water exit points and thanks to overlapping and simultaneous rotations and 40 rotations per minute, allows ample coverage of the tank area, thus guaranteeing optimal results in any basket-loading configuration.

### Flexifit hinge system

Smooth-running door for optimal integration into the kitchen design

The height of the plinth can vary from 5 cm to 21.5 cm, allowing it to fit perfectly into the cabinet. Thanks to this solution, the dishwasher blends harmoniously into its surroundings, with the door and plinth perfectly aligned with the other kitchen furniture.

### Extra Glide Telescopic Guides

Smoother and more stable loading and unloading operations

Extra Glide telescopic guides ensure smooth and safe extraction of the upper basket, even with heavy loads. The telescopic design ensures smooth, stable and silent movement, improving ergonomics and convenience. Ideal for optimising space and ease of use, they combine durability and comfort in every washing operation.

### DryAssist+

The Dry Assist+ system of automatic door opening at the end of the cycle ensures fast and energy-efficient drying