
DW8630

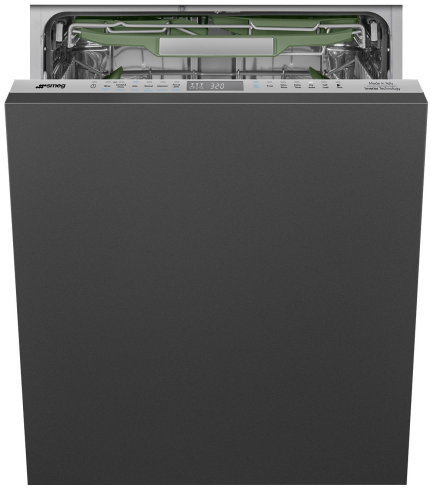

Product Family	Dishwashers
Commercial height	STANDARD HEIGHT
Installation	Fully-integrated built-in
N° baskets	3, FlexiDuo
Motor	Inverter
EAN code	8017709355258

Programs

N. of programmes	12+2	**Auto**	Yes
Washing temperatures	38, 45, 50, 55, 65, 70, 75 °F	**Rinse**	Yes
Express 27'	Yes	**Crystal & China**	Yes
Normal	Yes	**Eco express**	Yes
Self clean	Yes	**Pots & Pans**	Yes
Sterilise	Yes	**Trays**	Yes
Delicate	Yes		

Options

Dry Assist option	Yes	**Intensive wash zone option**	
Delay timer option	Up to 24 hours	**Special programs option**	Yes
1/2 load FlexiZone option	Yes	**Clean&Shine option**	Yes

Baskets

Basket colour	Grey	**Lower basket accessories**	MultiLoad, ProFlex Holder, WinePro
Upper Basket	With 3 foldable racks	**Lower basket with anti-drip inserts**	Yes
Height adjustment of the upper basket	On three levels (5 cm)	**Largest loadable dish in lower basket**	35,0 inches

Sliding Guides Extra Glide	Yes	**Colour Inner Components**	Sage Leaf
Largest loadable dish in upper basket	19,0 inches	**Cutlery basket**	Yes
Lower Basket	With 4 foldable racks		


Technical Features



Width (mm)	23 9/16 "	**Drying system**	Natural condenser drying, with Dry Assist automatic door opening system at the end of the cycle
Depth (mm)	21 5/8 "		
Display type	LED display (3 digit)		
Product Height (mm)	33 3/4 "	**Steam protection**	Metallic sheet
Display	Delayed start, Programme time indicator, Time to end indication, Consumptions	**Internal light**	With White led
		Tub material	Stainless steel
		Filter	Stainless steel
Programme graphics	Written in EN	**Concealed heating element**	Yes
Salt light indicator	Light		
Rinse aid indicator	Light	**Hinges**	Self balancing, Sliding, FLEXIFIT
End of cycle indicator	ActiveLight		
Auto switch-off	Yes	**Min. and max. frontal panel weight**	2 - 10 lbs
Washing system	Planetarium		
Third spray arm	Single	**Min. and max plinth height**	50 - 215 mm
Water softener	With electronic setting		
Turbidity sensor Aquatest	Yes	**Adjustable feet**	7cm, from 860 to 930 mm
		Airborne acoustical noise emissions dBA	38 dBA
Flood protection system	Total Acquastop		
Max water hardness	100°fH;58°dH	**Additional gaskets**	Yes
		Back cover	Yes
		Depth of dishwasher with open door (mm)	1186 mm
		Top cover	Metallic sheet
		Energy Star	Yes

Electrical Connection

Connected power	1100 W	**Type of connection**	Single-phase
Current	13 A	**Power supply cable length**	140 "
Voltage	115 V		
Frequency (Hz)	60 Hz	**Plug**	(B) NEMA 5-15P

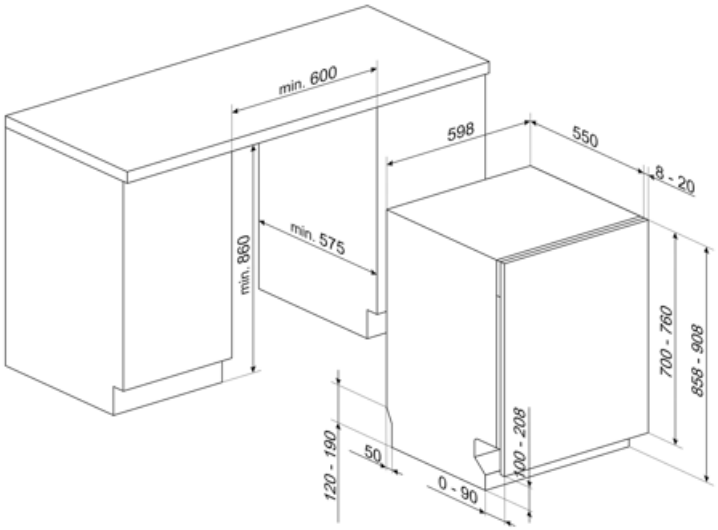
min. 600
598
550
8 - 20
min. 575
min. 860
700 - 760
858 - 908
120 - 190
50
0 - 90
100 - 208

Compatible Accessories



KIT86SPRAN



KIT86SPRMW



KIT86SPRX



KITFLEXI

KITJBDW





KITPL60B

Toekick Kit in White colour with adjustable height and deepness. Can be installed over all the fully integrated and underbench models with variable fulcrum or flexifit hinges.

KITPL60N



Toekick Kit in Black colour with adjustable height and deepness. Can be installed over all the fully integrated and underbench models with variable fulcrum or flexifit hinges.

KITPL60X



Toekick Kit in Stainless Steel with adjustable height and deepness. Can be fitted over all the fully integrated and underbench models with variable fulcrum or flexifit hinges.

KITPLV2



Kit extension for dishwasher and washing machine: lenght mt. 2

Symbols glossary



Activelight is an led light which projects a red spot onto the floor beneath the dishwasher when the appliance is in use.



The Aquatest sensor is an electronic sensor that measures the degree of water transparency at the end of the initial soaking phase. ased on the values measured, the sensor sets the most suitable programme, thus obtaining the best washing results with the minimum amount of water.



To improve the drying of dishes without leaving stains.



Delay Timer: Option to postpone the start of the desired programme by up to 24 hours in order to programme the dishwasher to run at the desired time.



The Dry Assist option ensures optimal drying of the dishes by automatically opening the door at the end of the wash cycle. Reducing the rinse temperat



FlexiDuo: The FlexiDuo 3rd cutlery basket allows you to arrange cutlery or small cups, ladles, or bulky utensils however you like: it consists of two separate and moveable modules.



The FlexiFit hinges allow the kitchen panel to slide over the dishwasher door, allowing a minimum kitchen plinth height of 5 cm.



FlexiZone: The ½ load flexizone allows you to wash a reduced load saving energy, water and time and there are no restrictions on where the items are placed.



The ExtraGlide guides system makes the second basket run even smoother and softer. It facilitates movement even when fully loaded, and thanks to the increased excursion, facilitates the insertion of dishes into the basket.



Smeg's evolution towards more intelligent and eco-friendly models has led to the choice of Inverter technology, which significantly reduces consumption.



Noise Level: Excellent insulation and special devices keep noise to a minimum.



The Planetarium washing system, with high rotations per minute, guarantees complete coverage of the tank, thanks to the simultaneous rotation of base and sprayers, and excellent washing results.



Delicate: Delicate washing program is designed for delicate dishes which are not heavily soiled.



Delicate: Delicate washing program is designed for delicate dishes which are not heavily soiled.



PRG_RINSE_72dpi



Express 27': The Express 27' programme is a quick wash cycle, at low temperatures, for lightly soiled dishes.



Total Acquastop: In addition to the partial Acquastop protection present in all Smeg dishwashers, some models have an electronic device fitted to the water intake hose, which monitors water levels in the machine, detects leaks in the hose and switches off the water supply immediately when necessary.



System WaterSave ensures the best washing results with minimal water consumption depending on the model of dishwasher.



Dishwasher cleaning cycle. The cycle should be started with the machine empty, without dishes. It is recommended to run the program every 2-3 months, using special dishwasher detergents.



SILENT: Wash cycle suitable for normally soiled dishes, even with dried-on residues. Ensures maximum noise reduction and is therefore ideal if you wish to run it during the night.

Allows you to enable additional programs when selected together with any wash cycle.

STERYL 75°: Intensive wash cycle ideal for plates, pots, pans, cutting boards, feeding bottles.

Clean&Shine option: For perfect cleaning results, this option adds an extra rinse to the wash cycle, which also gives the dishes a higher gloss.

Baking tray programme: for intensive cleaning of the oven trays. Place the trays in the lower basket of the dishwasher.