

## DW8630



Product family Width Commercial height Installation N° baskets Engine EAN code Dishwashers 24" 86 cm Fully-integrated built-in 3, FlexiDuo Inverter 8017709355258



## Programs

Number of programs	12+2	Auto	Yes
Washing temperatures	38, 45, 50, 55, 65, 70, 75 °F	Rinse	Yes
Express 27'	Yes	Crystal & China	Yes
Mix	Yes	Eco express	Yes
Self Clean	Yes	Pots & Pans	Yes
Sterilize	Yes	Trays	Yes
Delicates	Yes		

## Options



Dry Assist option Delay start FlexiZone half-load option Yes Up to 24 hours Yes Intensive washing zone option Special programs option Yes Clean&Shine option Yes

## Baskets



Basket color Upper basket Upper basket height adjustment Gray 3 foldable racks On 3 levels Lower basketMultiLoad, ProFlex Holder,accessoriesWineProLower basket with anti-<br/>drip insertsYesLargest loadable dish in<br/>lower basket35,0 inches



Sliding Guides Extra Glide	Yes	Colour Inner Components	Sage Leaf
Largest loadable dish in upper basket	19,0 inches	Cutlery basket	Yes
Lower basket	With 4 foldable racks		


## **Technical Features**

ACTIVE			
Width	23 9/16 "	Max water hardness	100°fH;58°dH
Depth	21 5/8 "	Drying system	Natural condenser drying,
Display type	LED display (3 digits)		with Dry Assist automatic
Height	33 3/4 "		door opening system at the end of the cycle
Display De	Delay start, Program progress indicator, Time-to-	Internal lighting	White LED
	end indicator,	Tub material	Stainless steel
	Consumptions	Filter	Stainless steel
Program symbols	Writings in English	Concealed heating	Yes
Salt indicator	Light	element	
Rinse aid indicator	Light	Hinges	Self-balancing, Sliding, FLEXIFIT
End-of-cycle indicator	ActiveLight		
Washing system	hird spray armSingleVater softenerWith electronic settingurbidity sensorYesAquatest	Min. and max. frontal panel weight	4.4 - 22 lbs
Third spray arm Water softener		Min. and max plinth height	50 - 215 mm
Turbidity sensor Aquatest		Adjustable feet	2 3/4", from 33 7/8" to 36 5/8"
Flood protection system	Total Aquastop	Additional gaskets	Yes
		Back cover	Yes
		Depth of dishwasher with open door (mm)	1186
		Top cover	Metal sheet

## **Electrical Connection**

Plug	(B) NEMA 5-15P	Frequency (Hz)	60 Hz
Connected power	1100 W	Connection type	Single-phase
Current	13 A	Power supply cable	140 "
Voltage	115 V	length	



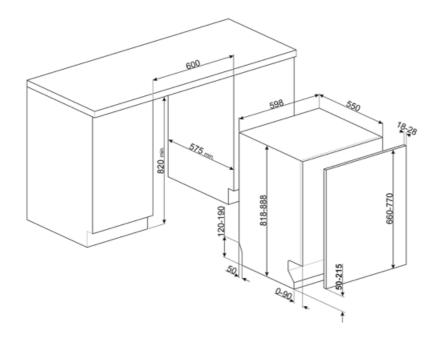



## **Compatible Accessories**



#### KIT86CX-1

Door kit, stainless steel, Canali handle, fully integrated dishwasher h.86 cm Compatible with models with Flexifit and fixed fulcrum hinges.



#### **KIT86PORTWH-1**





**KIT86SPRAN** 



**KIT86PORTAN-1** 

KIT86PORTX-1



KITFLEXI



#### **KIT86SPRX**

KITJBDW



Kit glass holder. It has to be fitted on the first basket but only if there are foldable racks





#### KITPL60B

KITGH

Toekick Kit in White colour with adjustable height and deepness. Can be installed over all the fully integrated and underbench models with variable fulcrum or flexifit hinges.

#### KITPL60X



Toekick Kit in Stainless Steel with adjustable height and deepness. Can be fitted over all the fully integrated and underbench models with variable fulcrum or flexifit hinges.



#### **KITPL60N**

Toekick Kit in Black colour with adjustable height and deepness. Can be installed over all the fully integrated and underbench models with variable fulcrum or flexifit hinges.

#### KITPLV2

Kit extension for dishwasher and washing machine: lenght mt. 2

# •ss•smeg

## Symbols glossary

ACTIVE LIGHT	Activelight is an led light which projects a red spot onto the floor beneath the dishwasher when the appliance is in use.	AQUATEST	Aquatest measures the clarity of the water during an auto program, and automatically ensures the minimum consumption of water and energy.
Ď	Anti-drip: Some models of dishwashers are equipped with special polymer nozzles anti-drip, that improve the process of drying.	<u>P</u>	Clean&Shine option: For perfect cleaning results, this option adds an extra rinse to the wash cycle, which also gives the dishes a higher gloss.
▲ 86 cm ▼	COMM_HEIGHT_86_72dpi	$\overline{\mathbb{O}}$	Delay Timer: The delay timer can postpone the start of the program by up to 24 hours.
<b>F</b>	Enersave: At the end of the drying cycle a special device slowly automatically opens the door a few centimeters, to ensure perfect drying and to save up to 20% of energy on some models.		FlexiDuo: The FlexiDuo 3rd cutlery basket allows you to arrange cutlery or small cups, ladles, or bulky utensils however you like: it consists of two separate and moveable modules.
FLEXI FIT	Models with new Flexi Fit hinges are able to be installed in kitchens with a plinth of just 5cms. With this new hinge design, the panel has a sliding movement from the bottom to the top, avoiding any possible interference of the panel with the plinth.	٢	FlexiZone: The ½ load flexizone allows you to wash a reduced load saving energy, water and time and there are no restrictions on where the items are placed.
	The new ExtraGlide guide system, available on top of the range models, makes the second basket even smoother and softer. In fact, it facilitates the extraction of the introduction, even at full load and, for the greater excursion, the insertion of crockery is also facilitated in the rear part.	$\odot$	Inverter technology: The evolution of Smeg's driers towards more intelligent and environmentally sustainable models has led to the choice of using Inverter technology with heat pumps, which reduces significantly energy consumption.
Þ	PLANETARIUM_WASHING_SYSTEM_72dpi	<u> </u>	Delicate: Delicate washing program is designed for delicate dishes which are not heavily soiled.
	Delicate: Delicate washing program is designed for delicate dishes which are not heavily soiled.		PRG_RINSE_72dpi
	Rapid 27 Mins: The rapid 27 mins quick program takes just 27 minutes to wash a load.		Total Acquastop: In addition to the partial Acquastop protection present in all Smeg dishwashers, some models have an electronic device fitted to the water intake hose, which monitors water levels in the machine, detects leaks in the hose and switches off the water supply immediately when necessary.
000 9 it	System WaterSave ensures the best washing results with minimal water consumption depending on the model of dishwasher.		
¢		Ś	
<u>25</u> °		<u>////</u>	Baking tray programme: for intensive cleaning of the oven trays. Place the trays in the lower basket of the dishwasher.



## Benefit (TT)

#### **Glassy Touch Display**

The easy and intuitive lexan touch display guides the user towards conscious and sustainable choices, reducing waste

The display, featuring indicators for dirt level, water usage, and energy consumption, enables users to optimise efficiency, minimise waste, and address daily needs with an eco-conscious approach. With a range of available options, it allows for customised washing and consumption settings tailored to individual preferences, consistently delivering exceptional results with minimal environmental impact.

#### Active Light

Maximum control thanks to the light projected on the floor that indicates when the dishwasher is running and when the cycle is complete

Smeg dishwashers equipped with ActiveLight signal the appliance's activity status by projecting a light on the floor while the cycle is running. The light goes out at the end of the cycle, signalling that the dishwasher can be unloaded.

#### FlexiDuo

The flexible third basket provides additional space, adapting to the load to accommodate various types of dishes, ensuring optimal organization and efficient use of interior capacity

The third FlexiDuo basket consists of two separate sections that can be handled independently of each other, stacked and/or removed, offering loading flexibility for every need. Depending on the arrangement, it allows cups, tall glasses, bulky utensils and pots and pans to be placed in the upper basket.

#### Planetarium Wash System

Full and deep wash coverage thanks to the advanced movement of the spray arm, an innovation patented by Smeg

Smeg's patented Planetarium Wash System guarantees impeccable cleaning. With a simultaneous double movement of the sprayer and 65 rotations per minute, it reaches every nook and cranny for extraordinary results. Dishes, glasses and utensils will be perfectly clean in no time. An intelligent system where efficiency and style meet, delivering brilliant results effortlessly.

#### Flexifit hinge system

Smooth-running door for optimal integration into the kitchen deisgn

The height of the plinth can vary from 5 cm to 21.5 cm, allowing it to fit perfectly into the cabinet. Thanks to this solution, the dishwasher blends harmoniously into its surroundings, with the door and plinth perfectly aligned with the other kitchen furniture.

#### Extra Glide Telescopic Guides

Smoother and more stable loading and unloading operations

Extra Glide telescopic guides ensure smooth and safe extraction of the upper basket, even with heavy loads. The telescopic design ensures smooth, stable and silent movement, improving ergonomics and convenience. Ideal for optimising space and ease of use, they combine durability and comfort in every washing operation.