

DWA6214B2

Product Family Dishwashers
Commercial width 60 cm
Commercial height 85 cm
Installation Free-standing

N° baskets 2

EAN code 8017709296452

Yes



Programs



ECO





N. of programmes 5 Ultraclean Yes Washing temperatures 45, 55, 65, 70 °C Intensive 65° Yes Soak Yes Normal ECO Yes

Options





Delay timer option 3-6-9 hours Options for tabs Yes

Baskets



Basket colour Grey Lower Basket With 2 foldable racks

Basket components Grey Lower basket with anti- Yes

colour drip inserts

Handle In plastic on upper and Largest loadable dish in 30,0 cm

lower basket lower basket

Upper Basket With central fixed racks Colour Inner Green

Height adjustment of On three levels

the upper basket Cutlery basket 13 place settings sliding

Largest loadable dish in 25,0 cm upper basket



Technical Features





Width (mm) 598 mm

Depth (mm) 600 mm

Product Height (mm) 848 mm

Controls Electronic

Programme graphics Symbols

On/off indicator Yes

On/off indicator Yes
Rinse aid indicator Light
End of cycle indicator Led on display, with

Washing system Orbital
Third spray arm Single

Flood protection system Total Acquastop

Water supply Single; cold/hot water max. 60°C - energysave with hot

water up to 35%

Max water hardness100°fH;58°dHDrying systemNatural condenser dryingTub materialStainless steel

Filter Stainless steel
Concealed heating Yes

element
Hinges Self balancing with fixed

hinges

1168 mm

Single-phase

(I) Australia

140 cm

Adjustable feet Just for levelling

Back cover Yes, with covered counterweight


Depth of dishwasher with open door (mm)

Removable top Yes, with optional KIT

Electrical Connection

Connected power 1800 W Type of connection
Current 10 A Power supply cable
Voltage 220-240 V length
Frequency (Hz) 50 Hz Plug

acoustic signal

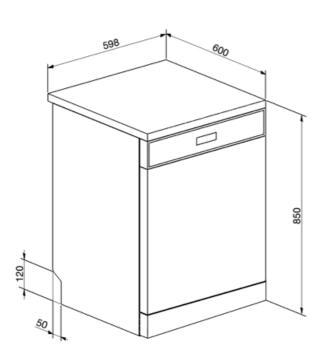



Compatible Accessories

KITGH



Kit glass holder. It has to be fitted on the first basket but only if there are foldable racks



KITINC

a steel bar fitted on the top will block the dishwasher at the top.

KITPLV2



Kit extension for dishwasher and washing machine: lenght mt. 2



Symbols glossary



Anti-drip: Some models of dishwashers are equipped with special polymer nozzles anti-drip, that improve the process of drying.



Delay Timer: The delay timer can postpone the start of the program by up to 24 hours.



Flexitabs: Flexitabs adjusts the wash cycle to give the best possible results regardless of the type of detergent used.



Noise Level: Excellent insulation and special devices keep noise to a minimum.



Orbital wash system distributes water evenly throughout the 60cm dishwasher cavity, directing water with precision to ensure an excellent wash.



Eco: Eco, this economic wash programme uses a low amount of water and energy in order to provide the most environmentally friendly cleaning option.



Soak programme: The soak programme provides a rinse to prevent dirt from drying.



REF_PRG_NORMAL_ECO_72dpi



The symbols show the number of plate settings of the dishwasher.



Total Acquastop: In addition to the partial Acquastop protection present in all Smeg dishwashers, some models have an electronic device fitted to the water intake hose, which monitors water levels in the machine, detects leaks in the hose and switches off the water supply immediately when necessary.



System WaterSave ensures the best washing results with minimal water consumption depending on the model of dishwasher.