

DWAFI6D15PO

86 cm 1

Product Family Commercial width Commercial height Installation **Kitchen panel** N° baskets Motor EAN code

Dishwashers 60 cm 86 cm Fully-integrated built-in Not supplied 3, FlexiDuo Single phase 8017709220020



Programs

ECO 50° Eco*			
N. of programmes	5+5 quick programmes	ECO Quick	Yes
Washing temperatures	38, 45, 50, 65, 70 °C	Daily Quick	Yes
Soak	Yes	Normal Quick	Yes
Rapid 27'	Yes	Auto 60-70	Yes
ECO	Yes	Strong and fast	Yes
Ultraclean	Yes	Normal ECO	Yes

Options



Enersave option Delay timer option 1/2 load FlexiZone option

Yes Up to 24 hours Yes

Options for tabs Yes FlexiTabs **Quick Time option**

Yes

Baskets

÷	۲			
Basket colour				
Bas	ket components			

colour

Handle

Grey

Grey

In plastic with stainless steel insert on upper and lower basket

Largest loadable dish in 18,0 cm upper basket Lower Basket With completely foldable racks and glass holder Lower basket with anti- Yes

drip inserts

SMEG SPA



Upper Basket

_ _

Height adjustment of the upper basket Upper basket with EasyGlide System With foldable central racks and glass holder On three levels

Yes

_ _

Largest loadable dish in 35,0 cm lower basket Cutlery basket 13 place

13 place settings sliding

Technical Features


_ __ __ _

	De		
Width (mm)	598 mm	Drying system	Natural condenser drying,
Depth (mm)	550 mm		with EnerSave automatic
Display type	LED display (3 digit)		door opening system at the end of the cycle
Product Height (mm)	858 mm	Steam protection	In plastic
Controls	Electronic	Child safety system	Yes
Display	Delayed start	(door lock)	103
Programme graphics	Symbols	Internal light	With White led
Salt light indicator	Light	Push-pull opening	Yes
Rinse aid indicator	Light	system without handle	
Progress indicator	Yes	Tub material	Stainless steel
End of cycle indicator	ActiveLight	Filter	Stainless steel
Washing system	Planetarium	Concealed heating	Yes
Third spray arm	Single	element	
Water softener	With electronic setting	Hinges	Self balancing with variable
Turbidity sensor	Yes		hinges
Aquatest	T () A ()	Min. and max. frontal panel weight	2 - 8 kg
Flood protection system	Total Acquastop	Min. and max plinth	100 - 228 mm
Water supply	Single; cold/hot water max. 60°C - energysave with hot	height	100 220 1111
	water up to 35%	Adjustable feet	7cm, from 860 to 930 mm
Max water hardness	100°fH;58°dH	Insulation level	Тор
		Additional gaskets	Yes, with stainless steel plate
		Back cover	Yes
		Depth of dishwasher with open door (mm)	1146
		Back feet adjustable from front	Yes

Electrical Connection

Plug Connected power Current Voltage (I) Australia 1800 W 10 A 220-240 V Frequency (Hz) Type of connection Power supply cable length 50 Hz Single-phase 140 cm



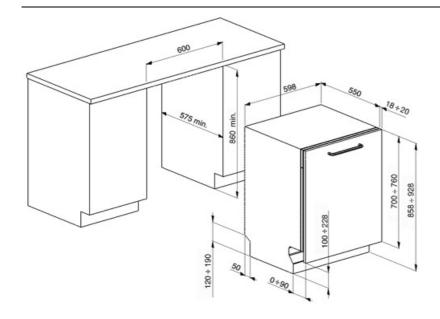



Compatible Accessories



KITGH

Kit glass holder. It has to be fitted on the first basket but only if there are foldable racks

KITPL60N



Toekick Kit in Black colour with adjustable height and deepness. Can be installed over all the fully integrated and underbench models with variable fulcrum or flexifit hinges.

KITPLV2



Kit extension for dishwasher and washing machine: lenght mt. 2



KITPL60B

Toekick Kit in White colour with adjustable height and deepness. Can be installed over all the fully integrated and underbench models with variable fulcrum or flexifit hinges.

KITPL60X



Toekick Kit in Stainless Steel with adjustable height and deepness. Can be fitted over all the fully integrated and underbench models with variable fulcrum or flexifit hinges.

•se•smeg

Symbols glossary

ACTIVE LIGHT	Activelight is an led light which projects a red spot onto the floor beneath the dishwasher when the appliance is in use.	AQUATEST	Aquatest measures the clarity of the water during an auto program, and automatically ensures the minimum consumption of water and energy.
Ň	Anti-drip: Some models of dishwashers are equipped with special polymer nozzles anti-drip, that improve the process of drying.	ს	Child lock: some models are fitted with a device to lock the programme/cycle so it cannot be accidentally changed.
86 cm ▼	COMM_HEIGHT_86_72dpi	$\widehat{\mathbb{Y}}$	Delay Timer: The delay timer can postpone the start of the program by up to 24 hours.
	EasyGlide: Convenient EasyGlide system for easy unloading of the appliance that allows reaching maximum flexibility of load of the machine.		FlexiDuo: The FlexiDuo 3rd cutlery basket allows you to arrange cutlery or small cups, ladles, or bulky utensils however you like: it consists of two separate and moveable modules.
\bigcirc	Flexitabs: Flexitabs adjusts the wash cycle to give the best possible results regardless of the type of detergent used.		FlexiZone: The ½ load flexizone allows you to wash a reduced load saving energy, water and time and there are no restrictions on where the items are placed.
42dB	Noise Level: Excellent insulation and special devices keep noise to a minimum.	Dr.	Automatic opening: some models have Automatic opening door when the cycle is finished which is a perfect solution for handle-less kitchen units as no handle is needed. For safety reasons, the door locks automatically when the machine is in use to avoid it being opened inadvertently.
Þ	PLANETARIUM_WASHING_SYSTEM_72dpi	40°-70'	Auto 60° - 70°: The auto program regulates the length of a cycle depending on the need for a pre- wash and the number of rinses required.
Ên	Daily Quick: The daily program is suitable for quick daily washing of dishes.	ECO 50°	Eco: Eco, this economic wash programme uses a low amount of water and energy in order to provide the most environmentally friendly cleaning option.
Ecổ	Eco: Eco, this economic wash programme uses a low amount of water and energy in order to provide the most environmentally friendly cleaning option.		Normal Quick: Program Normal Quick is suitable for quick washing of mixed dishes, for everyday use.
④	Soak programme: The soak programme provides a rinse to prevent dirt from drying.	C/*	Strong&Fast: This special programme takes less than 1 hour to eliminate the most stubborn dirt and dried on residues.
□50°	REF_PRG_NORMAL_ECO_72dpi	ıÖı	The symbols show the number of plate settings of the dishwasher.



 \approx

Total Acquastop: In addition to the partial Acquastop protection present in all Smeg dishwashers, some models have an electronic device fitted to the water intake hose, which monitors water levels in the machine, detects leaks in the hose and switches off the water supply immediately when necessary. 000 9,8 lt

System WaterSave ensures the best washing results with minimal water consumption depending on the model of dishwasher.



Benefit (TT)

Active Light

Maximum control thanks to the light projected on the floor that indicates when the dishwasher is running and when the cycle is complete

Smeg dishwashers equipped with ActiveLight signal the appliance's activity status by projecting a light on the floor while the cycle is running. The light goes out at the end of the cycle, signalling that the dishwasher can be unloaded.

FlexiDuo

The flexible third basket provides additional space, adapting to the load to accommodate various types of dishes, ensuring optimal organization and efficient use of interior capacity

The third FlexiDuo basket consists of two separate sections that can be handled independently of each other, stacked and/or removed, offering loading flexibility for every need. Depending on the arrangement, it allows cups, tall glasses, bulky utensils and pots and pans to be placed in the upper basket.

Planetarium Wash System

Full and deep wash coverage thanks to the advanced movement of the spray arm, an innovation patented by Smeg

Smeg's patented Planetarium Wash System guarantees impeccable cleaning. With a simultaneous double movement of the sprayer and 65 rotations per minute, it reaches every nook and cranny for extraordinary results. Dishes, glasses and utensils will be perfectly clean in no time. An intelligent system where efficiency and style meet, delivering brilliant results effortlessly.