


LS13N-4

Product Family	Dishwashers
Width	60 cm
Commercial height	85 cm
Installation	Free-standing
N° baskets	2
EAN code	8017709261047



Programmes

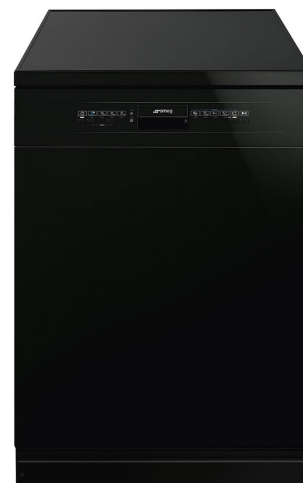

No. of programmes	5+5 quick programmes	Ultraclean	Yes
Washing temperatures	38, 45, 50, 55, 65, 70 °C	Daily 1/2 load	Yes
Soak	Yes	ECO Quick	Yes
Rapid 27'	Yes	Delicate and Quick	Yes
Glass	Yes	Normal Quick	Yes
ECO	Yes	Strong and fast	Yes

Options



Delay timer option	3-6-9 hours, with automatic soak	Quick Time option	Yes
--------------------	----------------------------------	-------------------	-----

Baskets



Basket colour	Grey	Lower Basket	With 2 foldable racks
Basket components colour	Grey	Lower basket with anti-drip inserts	Yes
Handle	In plastic on upper and lower basket	Largest loadable dish in lower basket	30,0 cm
Upper Basket	With central fixed racks		
Height adjustment of the upper basket	On three levels		

Largest loadable dish in upper basket 23,5 cm

Colour Inner Components

Pastel Blue anti drop inserts, Pastel Blue handles, Pastel Blue plate for regulation second basket on three levels, Pastel Blue Orbital

Cutlery basket

13 place settings sliding

Technical Features



Width (mm)	598 mm
Depth (mm)	600 mm
Product Height (mm)	848 mm
Controls	Electronic
Programme graphics	Symbols
Salt light indicator	Light
Rinse aid indicator	Light
Progress indicator	Yes
End of cycle indicator	Acoustic signal
Washing system	Orbital
Third spray arm	Single
Water softener	With electronic setting
Flood protection system	Single Acquastop

Water supply

Single; cold/hot water max. 60°C - energysave with hot water up to 35%

Max water hardness

100°FH;58°dH

Drying system

Natural condenser drying

Tank material

Stainless steel

Filter

Stainless steel

Concealed heating element

Yes

Hinges

Self balancing with fixed hinges

Adjustable feet

Just for levelling

Back cover

Yes, with covered counterweight

Depth of dishwasher with open door (mm)

1168

Removable top

Yes, with optional KIT

Top cover

In plastic

Electrical Connection

Plug	(F;E) Schuko
Connected power	1800 W
Current	10 A
Voltage	220-240 V

Frequency (Hz)


50 Hz

Type of connection

Single-phase

Power supply cable length

140 cm

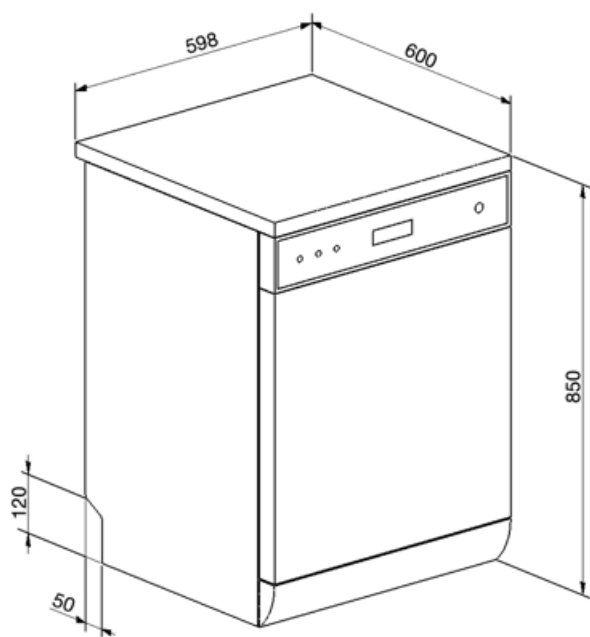

Compatible Accessories



KITGH

Kit glass holder. It has to be fitted on the first basket but only if there are foldable racks



KITINC
















a steel bar fitted on the top will block the dishwasher at the top.



KITPLV2

Kit extension for dishwasher and washing machine: length mt. 2

Symbols glossary

	Acquastop: Some Smeg dishwashers are equipped with a simple Acquastop: float sensor in the bottom which is necessary to prevent an accidental leakage of water inside the appliance.		Anti-drip: Some models of dishwashers are equipped with special polymer nozzles anti-drip, that improve the process of drying.
	A+: Energy efficiency class A+ helps to save up to 10% energy compared to class A. Maximum performance with minimum consumption is guaranteed.		Delay Timer: The delay timer can postpone the start of the program by up to 24 hours.
	Noise Level: Excellent insulation and special devices keep noise to a minimum.		Orbital wash system distributes water evenly throughout the 60cm dishwasher cavity, directing water with precision to ensure an excellent wash.
	1/2 load: This program is designed for washing dishes not heavily soiled with partial load of the dishwasher.		Delicate Quick: Program Delicate Quick is suitable for quick washing of delicate dishes.
	Eco: Eco, this economic wash programme uses a low amount of water and energy in order to provide the most environmentally friendly cleaning option.		Eco: Eco, this economic wash programme uses a low amount of water and energy in order to provide the most environmentally friendly cleaning option.
	Normal Quick: Program Normal Quick is suitable for quick washing of mixed dishes, for everyday use.		Soak programme: The soak programme provides a rinse to prevent dirt from drying.
	Strong&Fast: This special programme takes less than 1 hour to eliminate the most stubborn dirt and dried on residues.		The symbols show the number of plate settings of the dishwasher.
	System WaterSave ensures the best washing results with minimal water consumption depending on the model of dishwasher.		

Benefit

Orbital Wash System

Even water distribution, deep cleaning and low noise thanks to the dual rotating spray arms

Orbital washing system, which, thanks to its double arm, its 7 water exit points and thanks to overlapping and simultaneous rotations and 40 rotations per minute, allows ample coverage of the tank area, thus guaranteeing optimal results in any basket-loading configuration.