

LSA6444B2

Product Family

Width

Commercial height

Installation

N° baskets

Motor **EAN** code Dishwashers

60 cm

85 cm

Free-standing

Single phase

8017709166557



Programmes









Washing temperatures





















Soak Rapid 27' Yes Glass Yes **ECO** Yes **Delicate** Yes

ECO Quick Yes

Delicate and Quick Yes **Daily Quick** Yes **Normal Quick** Yes Auto 40-50 Yes Auto 60-70 Yes Strong and fast Yes Super Yes

Options









Energy saving option EnerSave

Delay timer option

1/2 load FlexiZone option (varied

Up to 24 hours, with automatic soak

Yes

Options for tabs **FlexiTabs**

Quick Time option Sanitizing option

Hyclean

Yes

Yes Yes

Baskets

distribution)



Basket colour

Grey

Largest loadable dish in 23,5 cm upper basket



Basket components

colour Handle Grey

Lower Basket With 4 foldable racks

Lower basket with anti- Yes

drip inserts

Largest loadable dish in 30,0 cm

lower basket

Cutlery basket 13 place settings sliding

Upper Basket Height adjustment of

the upper basket

On three levels

lower basket

In plastic on upper and

With central fixed racks

Technical Features



Width (mm) Depth (mm) Display type

Product Height (mm) Controls

Display

Programme graphics On/off indicator Salt light indicator Rinse aid indicator **Progress indicator** End of cycle indicator

Washing system Third spray arm Water softener

598 mm 600 mm 4 digits

848 mm Electronic

Delayed start, Programme time indicator, Time to end indication

Symbols Yes Light Light Yes

On display, with acoustic

signal Orbital Sinale

With electronic setting

Turbidity sensor

Aquatest

Flood protection system Total Acquastop

Water supply

Max water hardness

Single; cold/hot water max.

60°C - energysave with hot water up to 35%

Yes

100°fH;58°dH

Natural condenser drying, Drying system with EnerSave automatic

door opening system at the end of the cycle

Self balancing with fixed

Stainless steel Stainless steel

Yes

hinges

Top

Just for levelling

Yes, with covered counterweight

Concealed heating

element

Filter

Hinges

Tank material

Adjustable feet

Insulation level

Back cover

Depth of dishwasher

with open door (mm) Removable top

1168

Yes, with optional KIT

Electrical Connection

Plug Connected power

Current Voltage

(F;E) Schuko 1800 W 10 A 220-240 V


Frequency (Hz) Type of connection Power supply cable

length

50 Hz

Single-phase 140 cm



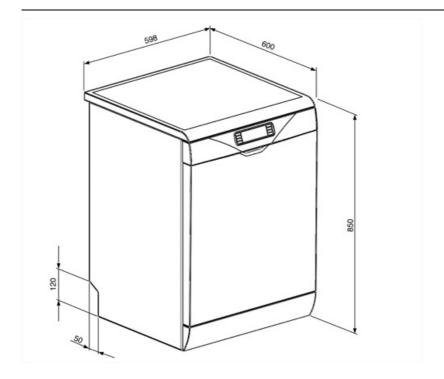



Not included accessories

KITGH



Kit glass holder. It has to be fitted on the first basket but only if there are foldable racks



KITINC

a steel bar fitted on the top will block the dishwasher at the top.

KITPLV2



Kit extension for dishwasher and washing machine: length mt. 2



Symbols glossary



A+++: Appliances with this symbol can reduce energy consumption by a further 30% from the standard A energy rating.



Aquatest measures the clarity of the water during an auto program, and automatically ensures the minimum consumption of water and energy.



Anti-drip: Some models of dishwashers are equipped with special polymer nozzles anti-drip, that improve the process of drying.



Delay Timer: The delay timer can postpone the start of the program by up to 24 hours.



Flexitabs: Flexitabs adjusts the wash cycle to give the best possible results regardless of the type of detergent used.



FlexiZone: The ½ load flexizone allows you to wash a reduced load saving energy, water and time and there are no restrictions on where the items are placed.



Hyclean: When the HYCLEAN option is selected, the dishwasher performs a final 10 minute rinse at a high temperature of 70°C, eliminating virtually all bacteria to achieve the highest possible standards of cleanliness. The Hyclean option can be selected with almost all cycles at temperatures above 50°C.



Noise Level: Excellent insulation and special devices keep noise to a minimum.



Orbital wash system distributes water evenly throughout the 60cm dishwasher cavity, directing water with precision to ensure an excellent wash.



Auto 40°- 50°: The auto programme regulates the length of a cycle depending on the need for a pre-wash and the number of rinses required.



Auto 60° - 70°: The auto program regulates the length of a cycle depending on the need for a prewash and the number of rinses required.



Daily Quick: The daily program is suitable for quick daily washing of dishes.



Delicate: Delicate washing program is designed for delicate dishes which are not heavily soiled.



Delicate Quick: Program Delicate Quick is suitable for quick washing of delicate dishes.



Eco: Eco, this economic wash programme uses a low amount of water and energy in order to provide the most environmentally friendly cleaning option.



Eco: Eco, this economic wash programme uses a low amount of water and energy in order to provide the most environmentally friendly cleaning option.



Normal Quick: Program Normal Quick is suitable for quick washing of mixed dishes, for everyday use.



Soak programme: The soak programme provides a rinse to prevent dirt from drying.



PRG_STRONG_72dpi



Strong&Fast: This special programme takes less than 1 hour to eliminate the most stubborn dirt and dried on residues.



The symbols show the number of plate settings of the dishwasher.



Total Acquastop: In addition to the partial Acquastop protection present in all Smeg dishwashers, some models have an electronic device fitted to the water intake hose, which monitors water levels in the machine, detects leaks in the hose and switches off the water supply immediately when necessary.





System WaterSave ensures the best washing results with minimal water consumption depending on the model of dishwasher.