

# LSP234CX



Product Family Dishwashers

Commercial width60 cmCommercial height82 cm

**Installation** Under counter built-in

N° baskets

**EAN code** 8017709305147



## **Programs**













Yes











N. of programmes 10+1 Washing temperatures 38, 45, 50, 55, 65, 70, 75 °C

Washing temperatures 38, 45, 50, Soak Yes
Express 27' Yes
Crystal Yes

Crystal Full express - 60

minutes

ECO Yes

1 Auto sensor 45-65

Mix Yes
Quiet (-2 dB) Yes
Intense Yes
Self clean Yes

Hygiene 99,9% Yes

# **Options**









Dry Assist+ option Delay timer option

Yes

Up to 24 hours

1/2 load FlexiZone

Yes

Yes

option

Special programs option Yes

## **Baskets**





Basket colour

Basket components colour

Handle

Grey

Grey

lower basket

In plastic on upper and

Largest loadable dish in 25,0 cm

upper basket

Lower Basket With 4 foldable racks

Lower basket with anti- Yes

drip inserts



**Upper Basket** 

Glass holder

Height adjustment of the upper basket Sliding Guides Extra

Glide

With 3 foldable racks

Yes

On three levels (5 cm)

Yes

Largest loadable dish in 30,0 cm

lower basket

Colour Inner Components

**Cutlery basket** 

Blue

Yes

## **Technical Features**







Width (mm) Depth (mm) Display type

Product Height (mm) Controls

Display

Programme graphics On/off indicator Salt light indicator Rinse aid indicator **Progress indicator** 

End of cycle indicator

Washing system Third spray arm Water softener **Turbidity sensor** 

Aquatest

:::**/:::** 

598 mm 570 mm

LED (external) 818 mm Flectronic

> Delayed start, Programme time indicator, Time to end

indication Symbols

Yes Light Light Yes

On display, with acoustic signal

Planetarium Single

With electronic setting

Yes

Flood protection system Total Acquastop

Water supply

Single; cold/hot water max. 60°C - energysave with hot

Natural condenser drying,

water up to 35% 100°fH;58°dH

Max water hardness

Drying system

with Dry Assist + automatic door opening system at the end of the cycle

Steam protection In plastic Tub material Stainless steel Stainless steel Filter

Concealed heating element

Hinges

Min. and max plinth

height

Adjustable feet Additional gaskets 100 - 170 mm

7 cm, from 820 to 890 mm Yes, with stainless steel plate

Self balancing with variable

Back cover Yes Depth of dishwasher 1146 mm with open door (mm)

Back feet adjustable

from front Top cover

Yes

Yes

hinges

In plastic

# Performance / Energy Label - Reg. 2019









**Energy Efficiency Class** 73 kWh **Energy consumption** [per 100 cycles, based

on the eco programme] Rated capacity (ps) 13 Water consumption [per 8.5 litres

cycle]

C

Airborne acoustical noise emissions Airborne acoustical noise emission class

**Energy efficiency Index** 

Programme duration

(EEI)

4:40 h:min

43 dB(A) re 1 pW

В

43.8


## **Electrical Connection**



Connected power 1800 W
Current 10 A
Voltage 220-240 V
Frequency (Hz) 50 Hz

Type of connection Power supply cable length Plug Single-phase 140 cm

(F;E) Schuko

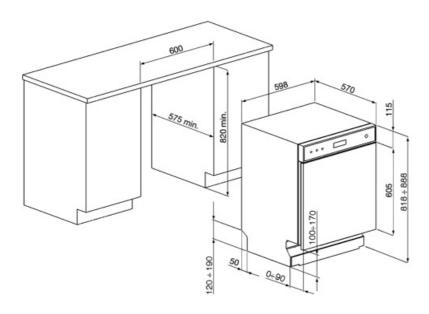



# **Compatible Accessories**

### **KITGH**



Kit glass holder. It has to be fitted on the first basket but only if there are foldable

### KITPL60N



Toekick Kit in Black colour with adjustable height and deepness. Can be installed over all the fully integrated and underbench models with variable fulcrum or flexifit hinges.



#### KITPL60X

KITPL60B



Toekick Kit in Stainless Steel with adjustable height and deepness. Can be fitted over all the fully integrated and underbench models with variable fulcrum or flexifit hinges.

Toekick Kit in White colour with

be installed over all the fully integrated and underbench models with variable fulcrum or flexifit hinges.

adjustable height and deepness. Can

#### KITPLV2



Kit extension for dishwasher and washing machine: lenght mt. 2



## Symbols glossary



The Aquatest sensor is an electronic sensor that measures the degree of water transparency at the end of the initial soaking phase. ased on the values measured, the sensor sets the most suitable programme, thus obtaining the best washing results with the minimum amount of water.



To improve the drying of dishes without leaving stains.



82 cm high



Delay Timer: Option to postpone the start of the desired programme by up to 24 hours in order to programme the dishwasher to run at the desired time.



LED display: to show programmes, functions and options selected and the time to the end of the cycle.



FlexiZone: The ½ load flexizone allows you to wash a reduced load saving energy, water and time and there are no restrictions on where the items are placed.



The ExtraGlide guides system makes the second basket run even smoother and softer. It facilitates movement even when fully loaded, and thanks to the increased excursion, facilitates the insertion of dishes into the basket.



Noise Level: Excellent insulation and special devices keep noise to a minimum.



The Planetarium washing system, with high rotations per minute, guarantees complete coverage of the tank, thanks to the simultaneous rotation of base and sprayers, and excellent washing results.



Auto 45°- 65°: The auto programme regulates the length of a cycle depending on the need for a pre-wash and the number of rinses required.



Crystals: The Crystals programme is dedicated to delicate dishes such as glasses and china.



Eco: Eco, this economic wash programme uses a low amount of water and energy in order to provide the most environmentally friendly cleaning option.



Mix: The Mix programme is suitable for mixed crockery and everyday pots and pans, without any particular incrustation.



Soak programme: The soak programme provides a rinse to prevent dirt from drying.



Express 27': The Express 27' programme is a quick wash cycle, at low temperatures, for lightly soiled dishes.



Ultraclean: The Ultraclean option performs a final rinse at a high temperature of 70°c eliminating virtually all bacteria.



13 place settings: Number of place settings.



Total Acquastop: In addition to the partial Acquastop protection present in all Smeg dishwashers, some models have an electronic device fitted to the water intake hose, which monitors water levels in the machine, detects leaks in the hose and switches off the water supply immediately when necessary.



System WaterSave ensures the best washing results with minimal water consumption depending on the model of dishwasher.



Quick wash cycle for normally soiled mixed loads such as dishes and pans, even with dried-on residues. Dishes are washed and dried in 60 minutes.





Dishwasher cleaning cycle. The cycle should be started with the machine empty, without dishes. It is recommended to run the program every 2-3 months, using special dishwasher detergents.



Allows you to enable additional programs when selected together with any wash cycle. After having selected the required wash cycle, press the button (



Energy efficiency class C



The work aimed at continuous improvement has allowed the creation of the second generation of the Inverter motor 2.0, characterised by greater efficiency and durability over time, which allows very high performance and a lower energy consumption and noise level.



SILENT: Wash cycle suitable for normally soiled dishes, even with dried-on residues. Ensures maximum noise reduction and is therefore ideal if you wish to run it during the night.



The Dry Assist + option, in addition to saving energy, ensures perfect drying of the dishes by opening the door automatically at the end of the washing cycle.



HYGIENE 99.9% High-temperature washing programme. The 75° rinse guarantees the removal of 99.9% of germs and bacteria.