


LSPU8612S



| | |
|-------------------|---------------|
| Product family | Dishwashers |
| Width | 24" |
| Commercial height | 86 cm |
| Installation | Under-Counter |
| N° baskets | 2 |
| EAN code | 8017709303716 |

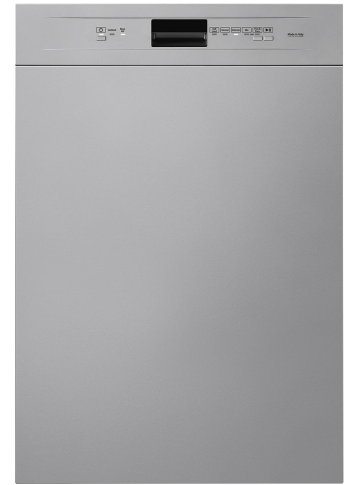

Programs



| | | | |
|----------------------|-------------------|-------------|-----|
| Number of programs | 5 | Delicates | Yes |
| Washing temperatures | 45, 50, 65, 70 °F | Normal | Yes |
| Mix | Yes | Pots & Pans | Yes |
| Daily (half load) | Yes | | |

Options

| | |
|---------------------|-------------------------------|
| Professional option | Intensive washing zone option |
|---------------------|-------------------------------|

Baskets



| | | | |
|---------------------------------------|----------------------|---------------------------------------|-------------|
| Basket components finish | Gray | Lower basket | Fixed racks |
| Upper basket | Central fixed racks | Lower basket with anti-drip inserts | Yes |
| Glass holder | Yes | Largest loadable dish in lower basket | 35,0 inches |
| Upper basket height adjustment | On two height levels | Colour Inner Components | Blue |
| Largest loadable dish in upper basket | 18,0 inches | Cutlery basket | Yes |


Technical Features



| | | | |
|--------------------------------|--|--|----------------------------------|
| Width | 23 9/16 " | Drying system | Natural condensation drying |
| Depth | 22 7/16 " | Tube material | Stainless steel |
| Height | 32 3/16 " | Filter | Stainless steel |
| Program symbols | Symbols | Concealed heating element | Yes |
| On/off indicator | Yes | Hinges | Self-balancing with fixed hinges |
| Rinse aid indicator | Light | Min. and max plinth height | 3.9" - 6.6" |
| End-of-cycle indicator | Light on display, with acoustic signal | Adjustable feet | 2 3/4", from 33 7/8" to 36 5/8" |
| Auto switch-off | Yes | Additional gaskets | Yes |
| Washing system | Standard | Back cover | Yes |
| Third spray arm | Single | Depth of dishwasher with open door (mm) | 1146 mm |
| Flood protection system | Single Aquastop | Top cover | Metal sheet |
| Max water hardness | 100°fH;58°dH | Energy Star | Yes |

Electrical Connection

| | | | |
|------------------------|-----------|--------------------------|------------------|
| Connected power | 1800 W | Connection type | Single-phase |
| Current | 10 A | Power Cord Length | 140 " |
| Voltage | 110-120 V | Plug | (A) USA & Mexico |
| Frequency | 60 Hz | | |

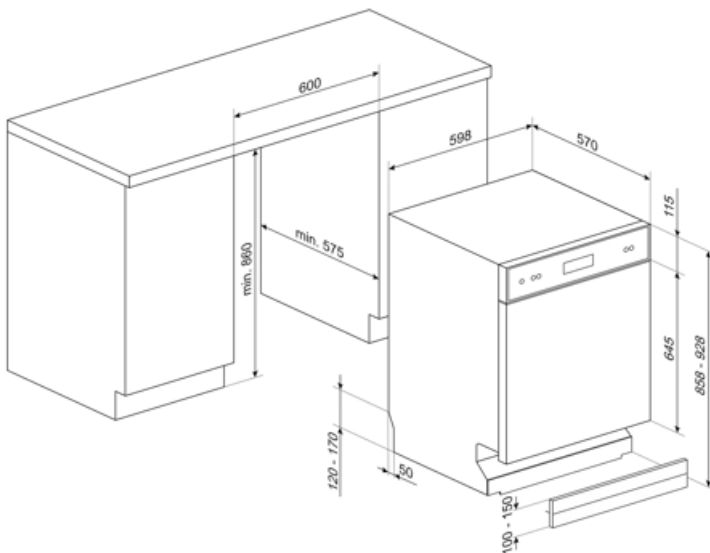

Compatible Accessories

KITPL60FABB



Toe kick Kit in White colour with adjustable height. Can be fitted over all the fully integrated and underbench models with Fixed Fulcrum. Can be installed also on the models with variable fulcrum or flexifit hinges.

KITPL60FABX



Toe kick Kit in Stainless Steel with adjustable height. Can be fitted over all the fully integrated and underbench models with Fixed Fulcrum. Can be installed also on the models with variable fulcrum or flexifit hinges.

KITPL60FABN











Toe kick Kit in Black colour with adjustable height. Can be fitted over all the fully integrated and underbench models with Fixed Fulcrum. Can be installed also on the models with variable fulcrum or flexifit hinges.

KITPLV2



Kit extension for dishwasher and washing machine: lenght mt. 2

Symbols glossary

| | | | |
|--|--|---|--|
|  | Acquastop: Some Smeg dishwashers are equipped with a simple Acquastop: float sensor in the bottom which is necessary to prevent an accidental leakage of water inside the appliance. |  | Anti-drip: Some models of dishwashers are equipped with special polymer nozzles anti-drip, that improve the process of drying. |
|  | COMM_HEIGHT_86_72dpi |  | Noise Level: Excellent insulation and special devices keep noise to a minimum. |
|  | 1/2 load: This program is designed for washing dishes not heavily soiled with partial load of the dishwasher. |  | Delicate: Delicate washing program is designed for delicate dishes which are not heavily soiled. |
|  | Normal programme: The normal programme is suitable for normal degrees of dirt for everyday use. |  | The symbols show the number of plate settings of the dishwasher. |