
LSPU8643BL

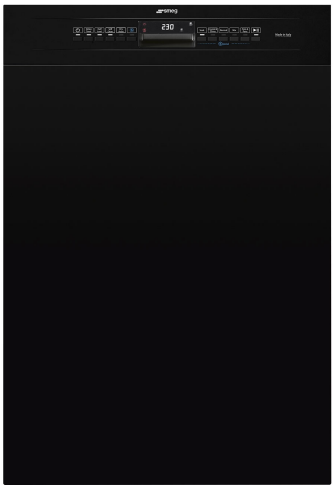

Product family	Dishwasher
Width	24"
Commercial height	86 cm
Installation	Under-Counter
N° baskets	3, FlexiDuo
EAN code	8017709303723

Programs

Number of programs	10+1	**Delicates**	Yes
Washing temperatures	38, 45, 50, 55, 65, 70, 75 °F	**Normal**	Yes
Soak	Yes	**Crystal & China**	Yes
Express	Yes	**Eco express**	Yes
Mix	Yes	**Express 60'**	Yes
Self Clean	Yes	**Pots & Pans**	Yes
Sterilize	Yes		

Options

Dry Assist option	Yes	**FlexiZone half-load option**	Yes
Delay start	Up to 24 hours	**Special programs option**	Yes

Baskets

Basket components finish	Gray	**Lower basket**	With 2 foldable racks
Upper basket	1 foldable rack	**Lower basket with anti-drip inserts**	Yes
Glass holder	Yes	**Largest loadable dish in lower basket**	35,0 inches
Upper basket height adjustment	On 3 levels		

Sliding Guides Extra Glide	Yes	**Colour Inner Components**	Blue
Largest loadable dish in upper basket	18,0 inches	**Cutlery basket**	Yes


Technical Features




Width	23 9/16 "	**Flood protection system**	Total Aquastop
Depth	22 7/16 "	**Max water hardness**	100°fH;58°dH
Display type	LED (external)	**Drying system**	Dry Assist
Height	32 3/16 "	**Tub material**	Stainless steel
Display	Delay start, Program progress indicator, Time-to-end indicator	**Filter**	Stainless steel
		Concealed heating element	Yes
Program symbols	Symbols	**Hinges**	Self-balancing with variable hinges
On/off indicator	Yes		
Salt indicator	Light	**Min. and max plinth height**	3.9" - 6.6"
Rinse aid indicator	Light		
Program progress indicator	Yes	**Adjustable feet**	2 3/4", from 33 7/8" to 36 5/8"
End-of-cycle indicator	On display, with acoustic signal	**Additional gaskets**	Yes
		Back cover	Yes
Auto switch-off	Yes	**Depth of dishwasher with open door (mm)**	1146 mm
Washing system	Orbital		
Third spray arm	Single	**Top cover**	Metal sheet
Water softener	With electronic setting	**Energy Star**	Yes

Electrical Connection

Connected power	1800 W	**Connection type**	Single-phase
Current	10 A	**Power Cord Length**	140 "
Voltage	110-120 V	**Plug**	(A) USA & Mexico
Frequency	60 Hz		

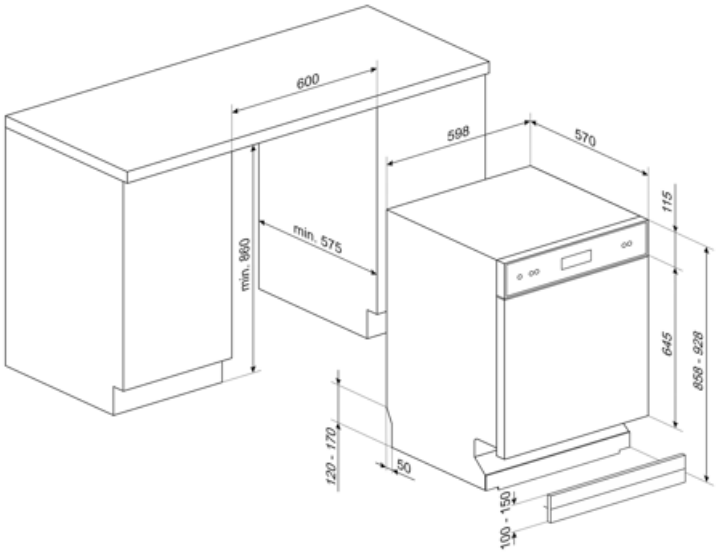
600
598
570
115
min. 575
min. 960
645
858 - 928
120 - 170
50
100 - 150

Compatible Accessories



KITGH

Kit glass holder. It has to be fitted on the first basket but only if there are foldable racks



KITPL60N

Toekick Kit in Black colour with adjustable height and deepness. Can be installed over all the fully integrated and underbench models with variable fulcrum or flexifit hinges.



KITPLV2

Kit extension for dishwasher and washing machine: lenght mt. 2



KITPL60B

Toekick Kit in White colour with adjustable height and deepness. Can be installed over all the fully integrated and underbench models with variable fulcrum or flexifit hinges.



KITPL60X

Toekick Kit in Stainless Steel with adjustable height and deepness. Can be fitted over all the fully integrated and underbench models with variable fulcrum or flexifit hinges.

Symbols glossary



Anti-drip: Some models of dishwashers are equipped with special polymer nozzles anti-drip, that improve the process of drying.



Delay Timer: The delay timer can postpone the start of the program by up to 24 hours.



Enersave: At the end of the drying cycle a special device slowly automatically opens the door a few centimeters, to ensure perfect drying and to save up to 20% of energy on some models.



FlexiZone: The ½ load flexizone allows you to wash a reduced load saving energy, water and time and there are no restrictions on where the items are placed.



Noise Level: Excellent insulation and special devices keep noise to a minimum.



Delicate: Delicate washing program is designed for delicate dishes which are not heavily soiled.



Dishwasher cleaning cycle. The cycle should be started with the machine empty, without dishes. It is recommended to run the program every 2-3 months, using special dishwasher detergents.



Soak programme: The soak programme provides a rinse to prevent dirt from drying.



STERYL 75°: Intensive wash cycle ideal for plates, pots, pans, cutting boards, feeding bottles.



Total Acquastop: In addition to the partial Acquastop protection present in all Smeg dishwashers, some models have an electronic device fitted to the water intake hose, which monitors water levels in the machine, detects leaks in the hose and switches off the water supply immediately when necessary.



COMM_HEIGHT_86_72dpi



LED display: to show programmes, functions and options selected and the time to the end of the cycle.



FlexiDuo: The FlexiDuo 3rd cutlery basket allows you to arrange cutlery or small cups, ladles, or bulky utensils however you like: it consists of two separate and moveable modules.



The new ExtraGlide guide system, available on top of the range models, makes the second basket even smoother and softer. In fact, it facilitates the extraction of the introduction, even at full load and, for the greater excursion, the insertion of crockery is also facilitated in the rear part.



Orbital wash system distributes water evenly throughout the 60cm dishwasher cavity, directing water with precision to ensure an excellent wash.



Normal programme: The normal programme is suitable for normal degrees of dirt for everyday use.



Allows you to enable additional programs when selected together with any wash cycle.



Rapid 27 Mins: The rapid 27 mins quick program takes just 27 minutes to wash a load.



The symbols show the number of plate settings of the dishwasher.