

# LSPU8643X



86 cm



Product family

Dishwashers

Width

24"

Commercial height

86 cm

Installation

Under-Counter

Nº baskets

3, FlexiDuo

EAN code

8017709303747



## Programs



Number of programs

10+1

Delicates

Yes

Washing temperatures

38, 45, 50, 55, 65, 70, 75 °F

Normal

Yes

Soak

Yes

Crystal & China

Yes

Express 27'

Yes

Eco express

Yes

Mix

Yes

Express 60'

Yes

Self Clean

Yes

Pots & Pans

Yes

Sterilize

Yes

## Options



Dry Assist option

Yes

FlexiZone half-load

Yes

Delay start

Up to 24 hours

option

Special programs option

Yes

## Baskets



Basket components  
finish

Gray

Lower basket

With 2 foldable racks

Upper basket

1 foldable rack

Lower basket with anti-

Yes

Glass holder

Yes

drip inserts

Upper basket height  
adjustment

On 3 levels

Largest loadable dish in  
lower basket

---

<b>Sliding Guides Extra Glide</b>	Yes	<b>Colour Inner Components</b>	Blue
<b>Largest loadable dish in upper basket</b>	18,0 inches	<b>Cutlery basket</b>	Yes

## Technical Features


---

			
<b>Width</b>	23 9/16 "	<b>Water softener</b>	With electronic setting
<b>Depth</b>	22 7/16 "	<b>Flood protection system</b>	Total Aquastop
<b>Display type</b>	LED (external)	<b>Max water hardness</b>	100°fH;58°dH
<b>Height</b>	32 3/16 "	<b>Drying system</b>	Natural condenser drying, with Dry Assist automatic door opening system at the end of the cycle
<b>Display</b>	Delay start, Program progress indicator, Time-to-end indicator	<b>Tub material</b>	Stainless steel
<b>Program symbols</b>	Symbols	<b>Filter</b>	Stainless steel
<b>On/off indicator</b>	Yes	<b>Concealed heating element</b>	Yes
<b>Salt indicator</b>	Light	<b>Hinges</b>	Self-balancing with variable hinges
<b>Rinse aid indicator</b>	Light	<b>Min. and max plinth height</b>	3.9" - 6.6"
<b>Program progress indicator</b>	Yes	<b>Adjustable feet</b>	2 3/4", from 33 7/8" to 36 5/8"
<b>End-of-cycle indicator</b>	On display, with acoustic signal	<b>Additional gaskets</b>	Yes
<b>Auto switch-off</b>	Yes	<b>Back cover</b>	Yes
<b>Washing system</b>	Orbital	<b>Depth of dishwasher with open door (mm)</b>	1146 mm
<b>Third spray arm</b>	Single	<b>Top cover</b>	Metal sheet

## Electrical Connection


---

<b>Connected power</b>	1800 W	<b>Connection type</b>	Single-phase
<b>Current</b>	10 A	<b>Power supply cable length</b>	140 "
<b>Voltage</b>	110-120 V	<b>Plug</b>	(A) USA & Mexico
<b>Frequency (Hz)</b>	60 Hz		

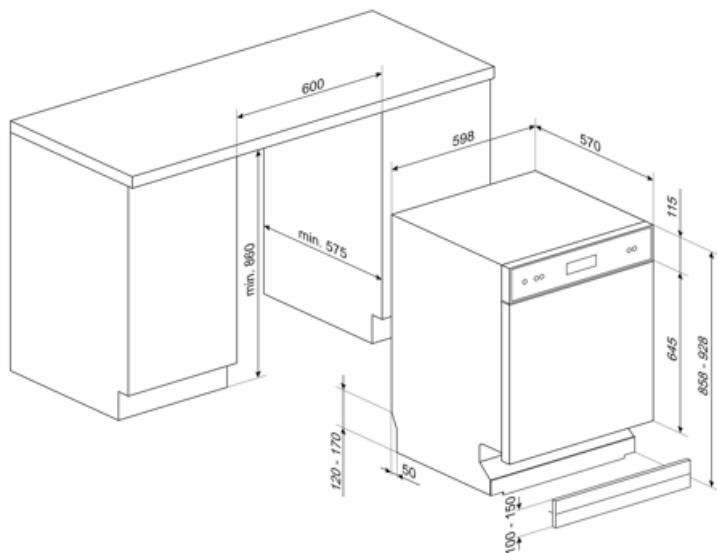

## Compatible Accessories

### KITGH



Kit glass holder. It has to be fitted on the first basket but only if there are foldable racks

### KITPL60N



Toekick Kit in Black colour with adjustable height and deepness. Can be installed over all the fully integrated and underbench models with variable fulcrum or flexifit hinges.

### KITPLV2



Kit extension for dishwasher and washing machine: lenght mt. 2

### KITPL60B



Toekick Kit in White colour with adjustable height and deepness. Can be installed over all the fully integrated and underbench models with variable fulcrum or flexifit hinges.



Toekick Kit in Stainless Steel with adjustable height and deepness. Can be fitted over all the fully integrated and underbench models with variable fulcrum or flexifit hinges.

## Symbols glossary



Anti-drip: Some models of dishwashers are equipped with special polymer nozzles anti-drip, that improve the process of drying.



Delay Timer: The delay timer can postpone the start of the program by up to 24 hours.



Enersave: At the end of the drying cycle a special device slowly automatically opens the door a few centimeters, to ensure perfect drying and to save up to 20% of energy on some models.



FlexiZone: The  $\frac{1}{2}$  load flexizone allows you to wash a reduced load saving energy, water and time and there are no restrictions on where the items are placed.



Noise Level: Excellent insulation and special devices keep noise to a minimum.



Delicate: Delicate washing program is designed for delicate dishes which are not heavily soiled.



Soak programme: The soak programme provides a rinse to prevent dirt from drying.



The symbols show the number of plate settings of the dishwasher.



COMM\_HEIGHT\_86\_72dpi



LED display: to show programmes, functions and options selected and the time to the end of the cycle.



FlexiDuo: The FlexiDuo 3rd cutlery basket allows you to arrange cutlery or small cups, ladles, or bulky utensils however you like: it consists of two separate and moveable modules.



The new ExtraGlide guide system, available on top of the range models, makes the second basket even smoother and softer. In fact, it facilitates the extraction of the introduction, even at full load and, for the greater excursion, the insertion of crockery is also facilitated in the rear part.



Orbital wash system distributes water evenly throughout the 60cm dishwasher cavity, directing water with precision to ensure an excellent wash.



Normal programme: The normal programme is suitable for normal degrees of dirt for everyday use.



Rapid 27 Mins: The rapid 27 mins quick program takes just 27 minutes to wash a load.



Total Acquastop: In addition to the partial Acquastop protection present in all Smeg dishwashers, some models have an electronic device fitted to the water intake hose, which monitors water levels in the machine, detects leaks in the hose and switches off the water supply immediately when necessary.



...