# LSPU8653X



| | |
|---|---|
| **Product Family** | Dishwashers |
| **Commercial width** | 60 cm |
| **Commercial height** | 86 cm |
| **Installation** | Under counter built-in |
| **N° baskets** | 3, FlexiDuo |
| **EAN code** | 8017709303754 |

## Programs

| | | | |
|---|---|---|---|
| **N. of programmes** | 10+1 | **Sterilise** | Yes |
| **Washing temperatures** | 38, 45, 50, 55, 65, 70, 75 °F | **1/2 load** | Yes |
| **Soak** | Yes | **Delicate** | Yes |
| **Express 27'** | Yes | **Auto** | Yes |
| **Mix** | Yes | **Crystal & China** | Yes |
| **Ultraclean** | | **Eco express** | Yes |
| **Self clean** | Yes | **Pots & Pans** | Yes |

## Options


| | | | |
|---|---|---|---|
| **Dry Assist option** | Yes | **1/2 load FlexiZone option** | Yes |
| **Delay timer option** | Up to 24 hours | **Special programs option** | Yes |

## Baskets

| | | | |
|---|---|---|---|
| **Basket components colour** | Grey | **Lower Basket** | With 4 foldable racks |
| **Upper Basket** | With 3 foldable racks | **Lower basket with anti-drip inserts** | Yes |
| **Height adjustment of the upper basket** | On three levels (5 cm) | **Largest loadable dish in lower basket** | 35,0 inches |

| | | | |
|---|---|---|---|
| **Sliding Guides Extra Glide** | Yes | **Colour Inner Components** | Blue |
| **Largest loadable dish in upper basket** | 18,0 inches | **Cutlery basket** | Yes |


## Technical Features





| | | | |
|---|---|---|---|
| **Width (mm)** | 23 9/16 " | **Flood protection system** | Total Acquastop |
| **Depth (mm)** | 22 7/16 " | **Max water hardness** | 100°fH;58°dH |
| **Display type** | OLED | **Drying system** | Natural condenser drying, with Dry Assist automatic door opening system at the end of the cycle |
| **Product Height (mm)** | 32 3/16 " | | |
| **Display** | Delayed start, Programme time indicator, Time to end indication | **Internal light** | With White led |
| | | **Tub material** | Stainless steel |
| **Programme graphics** | Symbols | **Filter** | Stainless steel |
| **On/off indicator** | Yes | **Concealed heating element** | Yes |
| **Salt light indicator** | Light | | |
| **Rinse aid indicator** | Light | **Hinges** | Self balancing with variable hinges |
| **Progress indicator** | Yes | | |
| **End of cycle indicator** | On display, with acoustic signal | **Min. and max plinth height** | 98 - 168 mm |
| | | **Adjustable feet** | 7cm, from 860 to 930 mm |
| **Auto switch-off** | Yes | **Additional gaskets** | Yes |
| **Washing system** | Planetarium | **Back cover** | Yes |
| **Third spray arm** | Single | **Depth of dishwasher with open door (mm)** | 1146 mm |
| **Water softener** | With electronic setting | | |
| **Turbidity sensor Aquatest** | Yes | **Top cover** | Metallic sheet |
| | | **Energy Star** | Yes |

## Electrical Connection

| | | | |
|---|---|---|---|
| **Connected power** | 1800 W | **Type of connection** | Single-phase |
| **Current** | 10 A | **Power supply cable length** | 140 " |
| **Voltage** | 110-120 V | | |
| **Frequency (Hz)** | 60 Hz | **Plug** | (A) USA e Messico |

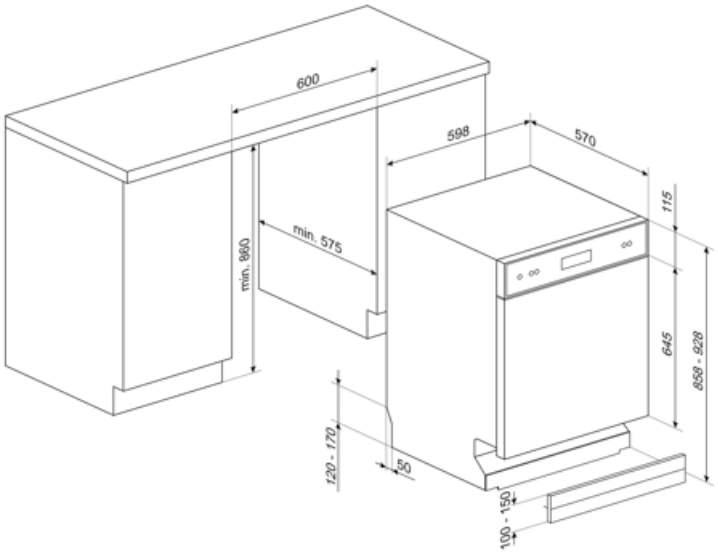
600
598
570
115
min. 575
min. 960
645
858 - 928
120 - 170
50
100 - 150

## Compatible Accessories



**KITGH**

Kit glass holder. It has to be fitted on the first basket but only if there are foldable racks



**KITPL60N**

Toekick Kit in Black colour with adjustable height and deepness. Can be installed over all the fully integrated and underbench models with variable fulcrum or flexifit hinges.



**KITPLV2**

Kit extension for dishwasher and washing machine: lenght mt. 2



**KITPL60B**

Toekick Kit in White colour with adjustable height and deepness. Can be installed over all the fully integrated and underbench models with variable fulcrum or flexifit hinges.



**KITPL60X**

Toekick Kit in Stainless Steel with adjustable height and deepness. Can be fitted over all the fully integrated and underbench models with variable fulcrum or flexifit hinges.

## Symbols glossary




The Aquatest sensor is an electronic sensor that measures the degree of water transparency at the end of the initial soaking phase. ased on the values measured, the sensor sets the most suitable programme, thus obtaining the best washing results with the minimum amount of water.




86 cm high




LED display: to show programmes, functions and options selected and the time to the end of the cycle.



FlexiDuo: The FlexiDuo 3rd cutlery basket allows you to arrange cutlery or small cups, ladles, or bulky utensils however you like: it consists of two separate and moveable modules.



The ExtraGlide guides system makes the second basket run even smoother and softer. It facilitates movement even when fully loaded, and thanks to the increased excursion, facilitates the insertion of dishes into the basket.



The Planetarium washing system, with high rotations per minute, guarantees complete coverage of the tank, thanks to the simultaneous rotation of base and sprayers, and excellent washing results.




1/2 load: This program is designed for washing dishes not heavily soiled with partial load of the dishwasher.




Mix: The Mix programme is suitable for mixed crockery and everyday pots and pans, without any particular incrustation.




Express 27': The Express 27' programme is a quick wash cycle, at low temperatures, for lightly soiled dishes.




Total Acquastop: In addition to the partial Acquastop protection present in all Smeg dishwashers, some models have an electronic device fitted to the water intake hose, which monitors water levels in the machine, detects leaks in the hose and switches off the water supply immediately when necessary.



To improve the drying of dishes without leaving stains.



Delay Timer: Option to postpone the start of the desired programme by up to 24 hours in order to programme the dishwasher to run at the desired time.




The Dry Assist option ensures optimal drying of the dishes by automatically opening the door at the end of the wash cycle. Reducing the rinse temperat




FlexiZone: The ½ load flexizone allows you to wash a reduced load saving energy, water and time and there are no restrictions on where the items are placed.




Noise Level: Excellent insulation and special devices keep noise to a minimum.



Delicate: Delicate washing program is designed for delicate dishes which are not heavily soiled.




Delicate: Delicate washing program is designed for delicate dishes which are not heavily soiled.



Soak programme: The soak programme provides a rinse to prevent dirt from drying.




13 place settings: Number of place settings.



Dishwasher cleaning cycle. The cycle should be started with the machine empty, without dishes. It is recommended to run the program every 2-3 months, using special dishwasher detergents.



Allows you to enable additional programs when selected together with any wash cycle.



STERYL 75°: Intensive wash cycle ideal for plates, pots, pans, cutting boards, feeding bottles.