

LVS32SIEX

Product Family	Dishwashers
Width	60 cm
Commercial height	85 cm
Installation	Free-standing
N° baskets	2
EAN code	8017709260026



Programmes



No. of programmes	5+5 quick programmes	Normal	Yes
Washing temperatures	38, 45, 50, 55, 65, 70 °C	Ultraclean	Yes
Soak	Yes	Daily 1/2 load	Yes
Rapid 27'	Yes	ECO Quick	Yes
Glass	Yes	Normal Quick	Yes
ECO	Yes	Strong and fast	Yes

Options



Energy saving option EnerSave	Yes	Options for tabs FlexiTabs	Yes
Delay timer option	3-6-9-12 hours, with automatic soak	Quick Time option	Yes

Baskets



Basket colour	Grey	Lower Basket	With 2 foldable racks
Basket components colour	Grey	Lower basket with anti- drip inserts	Yes
Handle	In plastic on upper and lower basket	Largest loadable dish in lower basket	30,0 cm
Upper Basket	With central fixed racks		

Height adjustment of the upper basket	On two levels, by extraction	Colour Inner Components	Orange anti drop inserts, Orange handles, Orange Orbital
Largest loadable dish in upper basket	23,5 cm	Cutlery basket	13 place settings sliding


Technical Features




Width (mm)	598 mm	Flood protection system	Single Acquastop
Depth (mm)	600 mm	Water supply	Single; cold/hot water max. 60°C - energysave with hot water up to 35%
Display type	LED (external)	Max water hardness	100°FH;58°dH
Product Height (mm)	848 mm	Drying system	Natural condenser drying, with EnerSave automatic door opening system at the end of the cycle
Controls	Electronic	Tank material	Stainless steel
Display	Delayed start	Filter	Stainless steel
Programme graphics	Symbols	Concealed heating element	Yes
Salt light indicator	Light	Hinges	Self balancing with fixed hinges
Rinse aid indicator	Light	Adjustable feet	Just for levelling
End of cycle indicator	Led on display, with acoustic signal	Depth of dishwasher with open door (mm)	1168
Washing system	Orbital	Removable top	Yes, with optional KIT
Third spray arm	Single	Top cover	In plastic
Water softener	With electronic setting		

Electrical Connection

Plug	(F;E) Schuko	Frequency (Hz)	50 Hz
Connected power	1800 W	Type of connection	Single-phase
Current	10 A	Power supply cable length	140 cm
Voltage	220-240 V		

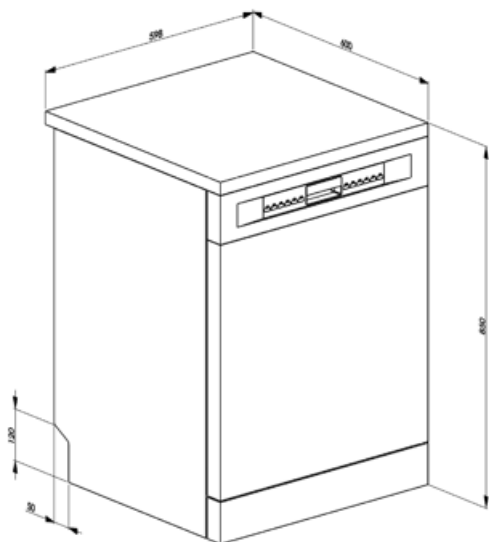


Compatible Accessories

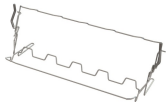

KITGH

Kit glass holder. It has to be fitted on the first basket but only if there are foldable racks



KITINC

















a steel bar fitted on the top will block the dishwasher at the top.



KITPLV2

Kit extension for dishwasher and washing machine: length mt. 2

Symbols glossary

 <p>Acquastop: Some Smeg dishwashers are equipped with a simple Acquastop: float sensor in the bottom which is necessary to prevent an accidental leakage of water inside the appliance.</p>	 <p>Anti-drip: Some models of dishwashers are equipped with special polymer nozzles anti-drip, that improve the process of drying.</p>
 <p>A++: Energy efficiency class A++ helps to save up to 20% energy compared to class A. Maximum performance with minimum consumption is guaranteed.</p>	 <p>Delay Timer: The delay timer can postpone the start of the program by up to 24 hours.</p>
 <p>LED display: to show programmes, functions and options selected and the time to the end of the cycle.</p>	 <p>Flexitabs: Flexitabs adjusts the wash cycle to give the best possible results regardless of the type of detergent used.</p>
 <p>Noise Level: Excellent insulation and special devices keep noise to a minimum.</p>	 <p>Orbital wash system distributes water evenly throughout the 60cm dishwasher cavity, directing water with precision to ensure an excellent wash.</p>
 <p>1/2 load: This program is designed for washing dishes not heavily soiled with partial load of the dishwasher.</p>	 <p>Eco: Eco, this economic wash programme uses a low amount of water and energy in order to provide the most environmentally friendly cleaning option.</p>
 <p>Eco: Eco, this economic wash programme uses a low amount of water and energy in order to provide the most environmentally friendly cleaning option.</p>	 <p>Normal Quick: Program Normal Quick is suitable for quick washing of mixed dishes, for everyday use.</p>
 <p>Soak programme: The soak programme provides a rinse to prevent dirt from drying.</p>	 <p>Strong&Fast: This special programme takes less than 1 hour to eliminate the most stubborn dirt and dried on residues.</p>
 <p>The symbols show the number of plate settings of the dishwasher.</p>	 <p>System WaterSave ensures the best washing results with minimal water consumption depending on the model of dishwasher.</p>

Benefit

Orbital Wash System

Even water distribution, deep cleaning and low noise thanks to the dual rotating spray arms

Orbital washing system, which, thanks to its double arm, its 7 water exit points and thanks to overlapping and simultaneous rotations and 40 rotations per minute, allows ample coverage of the tank area, thus guaranteeing optimal results in any basket-loading configuration.