

# PL4325XIN



Product Family	Dishwashers
Commercial width	60 cm
Commercial height	82 cm
Installation	Partially-integrated built-in
N° baskets	2
EAN code	8017709244613



## Programs



N. of programmes	5+5 quick programmes	Normal	Yes
Washing temperatures	38, 45, 50, 55, 65, 70 °C	Ultraclean	Yes
Soak	Yes	ECO Quick	Yes
Rapid 27'	Yes	Delicate and Quick	Yes
Glass	Yes	Normal Quick	Yes
ECO	Yes	Strong and fast	Yes

## Options



Enersave option	Yes	Options for tabs	Yes
Delay timer option	Up to 24 hours	FlexiTabs	
1/2 load FlexiZone option	Yes	Quick Time option	Yes

## Baskets



Basket colour	Grey	Lower Basket	With 4 foldable racks
Basket components colour	Grey	Lower basket with anti-drip inserts	Yes
Handle	In plastic with stainless steel insert on upper and lower basket	Largest loadable dish in lower basket	30,0 cm

<b>Upper Basket</b>	With central fixed racks	<b>Colour Inner Components</b>	Grey anti drop inserts, Grey handles, Grey pastic plate for regulation second basket on three levels, Green Planetarium
<b>Height adjustment of the upper basket</b>	On three levels (5 cm)		
<b>Largest loadable dish in upper basket</b>	23,5 cm	<b>Cutlery basket</b>	13 place settings sliding


## Technical Features




<b>Width (mm)</b>	598 mm	<b>Flood protection system</b>	Total Acquastop
<b>Depth (mm)</b>	570 mm	<b>Water supply</b>	Single; cold/hot water max. 60°C - energysave with hot water up to 35%
<b>Display type</b>	LED display (4 digit)	<b>Max water hardness</b>	100°FH;58°dH
<b>Product Height (mm)</b>	818 mm	<b>Drying system</b>	Natural condenser drying, with EnerSave automatic door opening system at the end of the cycle
<b>Controls</b>	Electronic	<b>Steam protection</b>	In plastic
<b>Display</b>	Delayed start, Programme time indicator, Time to end indication	<b>Tube material</b>	Stainless steel
<b>Programme graphics</b>	Symbols	<b>Filter</b>	Stainless steel
<b>On/off indicator</b>	Yes	<b>Concealed heating element</b>	Yes
<b>Salt light indicator</b>	Light	<b>Hinges</b>	Self balancing with variable hinges
<b>Rinse aid indicator</b>	Light	<b>Adjustable feet</b>	7 cm, from 820 to 890 mm
<b>Progress indicator</b>	Yes	<b>Additional gaskets</b>	Yes, with stainless steel plate
<b>End of cycle indicator</b>	On display, with acoustic signal	<b>Back cover</b>	Yes, with covered counterweight
<b>Washing system</b>	Planetarium	<b>Depth of dishwasher with open door (mm)</b>	1146 mm
<b>Third spray arm</b>	Single	<b>Back feet adjustable from front</b>	Yes
<b>Water softener</b>	With electronic setting	<b>Top cover</b>	In plastic

## Electrical Connection

<b>Connected power</b>	1800 W	<b>Type of connection</b>	Single-phase
<b>Current</b>	10 A	<b>Power supply cable length</b>	140 cm
<b>Voltage</b>	220-240 V	<b>Plug</b>	(F;E) Schuko
<b>Frequency (Hz)</b>	50 Hz		

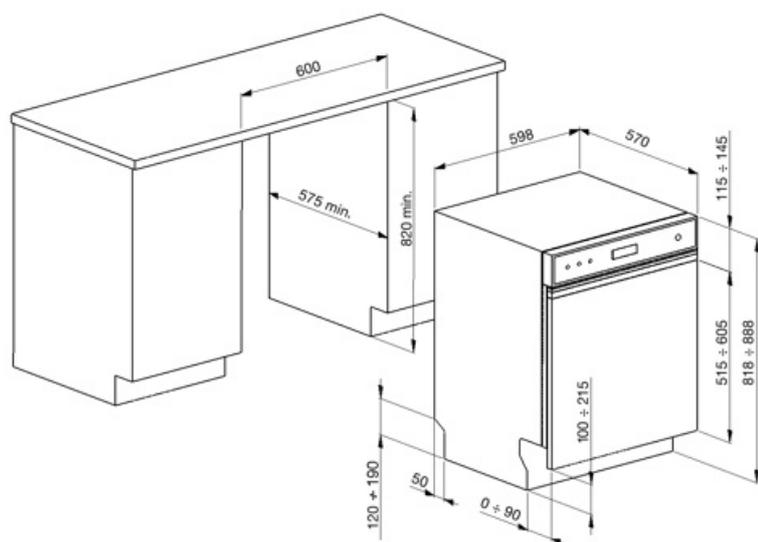

## Compatible Accessories



### KITGH

Kit glass holder. It has to be fitted on the first basket but only if there are foldable racks



### KITPL60B

Toekick Kit in White colour with adjustable height and deepness. Can be installed over all the fully integrated and underbench models with variable fulcrum or flexifit hinges.



### KITPL60N

Toekick Kit in Black colour with adjustable height and deepness. Can be installed over all the fully integrated and underbench models with variable fulcrum or flexifit hinges.



### KITPL60X

Toekick Kit in Stainless Steel with adjustable height and deepness. Can be fitted over all the fully integrated and underbench models with variable fulcrum or flexifit hinges.



### KITPLV2

Kit extension for dishwasher and washing machine: lenght mt. 2

## Symbols glossary

 To improve the drying of dishes without leaving stains.	 A+++: Appliances with this symbol can reduce energy consumption by a further 30% from the standard A energy rating.
 82 cm high	 Delay Timer: Option to postpone the start of the desired programme by up to 24 hours in order to programme the dishwasher to run at the desired time.
 Fingerprint proof stainless steel: Fingerprint proof stainless steel keeps stainless steel looking as good as new.	 Ideal for multi-function detergents, this option allows washing to be optimised, with full benefits from the combined-action tablets. When this option is activated, any salt and rinse aid is used.
 FlexiZone: The ½ load flexizone allows you to wash a reduced load saving energy, water and time and there are no restrictions on where the items are placed.	 Noise Level: Excellent insulation and special devices keep noise to a minimum.
 The Planetarium washing system, with high rotations per minute, guarantees complete coverage of the tank, thanks to the simultaneous rotation of base and sprayers, and excellent washing results.	 Delicate Quick: Program Delicate Quick is suitable for quick washing of delicate dishes.
 Eco: Eco, this economic wash programme uses a low amount of water and energy in order to provide the most environmentally friendly cleaning option.	 Eco: Eco, this economic wash programme uses a low amount of water and energy in order to provide the most environmentally friendly cleaning option.
 Normal Quick: Program Normal Quick is suitable for quick washing of mixed dishes, for everyday use.	 Soak programme: The soak programme provides a rinse to prevent dirt from drying.
 Strong&Fast: This special programme takes less than 1 hour to eliminate the most stubborn dirt and dried on residues.	 13 place settings: Number of place settings.
 Total Acquastop: In addition to the partial Acquastop protection present in all Smeg dishwashers, some models have an electronic device fitted to the water intake hose, which monitors water levels in the machine, detects leaks in the hose and switches off the water supply immediately when necessary.	 System WaterSave ensures the best washing results with minimal water consumption depending on the model of dishwasher.