
SI2321D

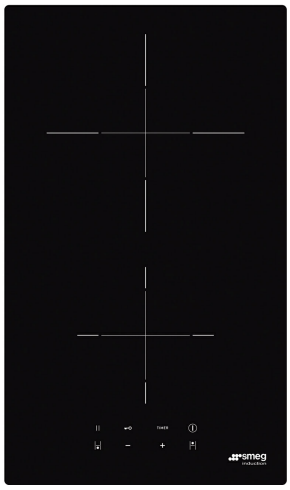

Product Family	Hob
Built-in type	Ultra-low profile or Fully Flushed
Dimensions	30 cm
Power supply	Electric
Type	Induction
EAN code	8017709330644

Aesthetics

Aesthetic	Universale
Colour	Black
Finishing	Glass
Material	Glass
Glass type	Ceramic
Glass edge	Straight edge
Type of control setting	Digi Touch
LED colours	Red
Control knob position	Front
Logo	Silk screen
Serigraphy colour	Grey

Program / Functions

No. of induction cook zones	2
No. of cooking zones with booster	2
Main on/off switch	Yes
Power levels	9
Total no. of cook zones	2

Options

Worktop Cut-Out	478-482x252-256 mm	**Residual time indicator**	Yes
End cooking timer	2	**Control Lock / Child Safety**	Yes
Minute minder	1	**Quick start**	Yes
End of cooking alarm	Yes		

Technical Features


Front-centre - Induction - Single - 1.20 kW - Booster 1.60 kW - Ø 14.5 cm

Rear-centre - Induction - Single - 1.50 kW - Booster 2.00 kW - Ø 21.0 cm

Automatic setting according to pan dimension	Yes	**Residual heat indicator**	Yes
pan detection	Yes	**Eco-Off**	Yes
Minimum pan diameter indication	Yes	**Protection against accidental start up**	Yes
Automatic switch off when overheat	Yes		

Electrical Connection

Electrical connection rating (W)	3600 W	**Frequency (Hz)**	50/60 Hz
Current	16 A	**Power supply cable length**	120 cm
Voltage (V)	220-240 V	**Plug**	Not present
Type of electric cable installed	Yes, Single phase		

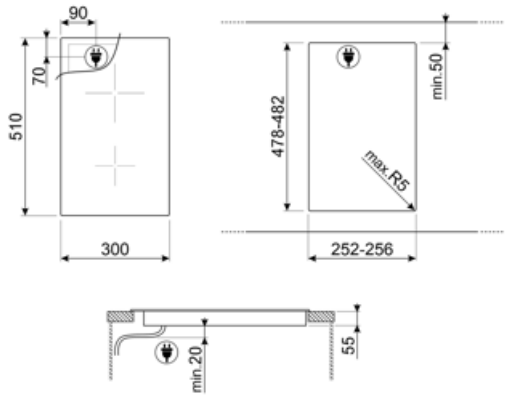

Compatible Accessories



SCRP

Non-scratch hob scraper - suitable for induction and ceramic hobs

Symbols glossary



Power booster: option allows the zone to work at full power when very intense cooking is necessary.



Eco-Off: This energy-saving function shuts the zone down before the timer sounds, making use of the residual heat in the pan.



Induction: The work of these hobs is based on the principle of electromagnetic induction. The heat is generated directly in the bottom of the pan during its contact with the hob.



Indication of residual heat: After the glass ceramic hob is switched off the residual heat indicator shows which of the heating zones still remains hot. When the temperature drops below 60 ° C, the indicator goes out.



Timer: All ceramic hobs have a timer which automatically ends cooking after a preset time.



Child lock: some models are fitted with a device to lock the programme/cycle so it cannot be accidentally changed.



Overheat protection: The safety system that automatically turns off the hob in case of overheating of the control unit.



Quick Start function: the chosen temperature is reached faster. The heating element works at maximum power until the right temperature is reached.



Time elapsed: shows how long the cooking zone has been in use.



Touch control