
SIM3323D

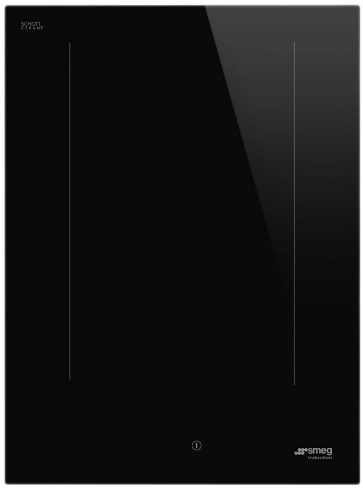

Product Family	Hob
Built-in type	Ultra-low profile or Fully Flushed
Dimensions	38 cm
Power supply	Electric
Type	Induction
EAN code	8017709285371

Aesthetics

Aesthetic	Classica
Colour	Black
Finishing	Glass
Material	Glass
Glass type	Ceramic Eclipse
Glass edge	Straight edge
Type of control setting	EVO Slider
Slider	Yes
LED colours	White
Control knob position	Front
Logo	Silk screen
Serigraphy colour	Grey

Program / Functions

No. of induction cook zones	2
Time-setting options	Automatic switch-off
No. of cooking zones with booster	2
No. of Flexible zones	1
Main on/off switch	Yes
Power levels	9
Total no. of cook zones	2

Options

Multizone Option	Yes
Flexible Zone Type	MultiZone
Worktop Cut-Out	490x310 mm
Keep warm automatic function	Yes
Grill function	Yes
End cooking timer	2
Pause option	Yes
Minute minder	1
End of cooking alarm	Yes
Residual time indicator	Yes
Limited Power Consumption Mode	Si Advance
Limited Power Consumption Mode in W	2100 a 3700 - step 100 W
Showroom Demo Option	Yes
Control Lock / Child Safety	Yes
Bridge option	Yes
Quick start	Yes
Rapid level selection	Yes


Technical Features

Front-centre - Induction - Multizone - 2.10 kW - Booster 2.50 kW - Double booster 3.00 kW - 24.0x18.0 cm
Rear-centre - Induction - Multizone - 2.10 kW - Booster 2.50 kW - Double booster 3.00 kW - 24.0x18.0 cm
Multizone center - Booster 3.70 kW - 38.5x23.0 cm

Automatic setting according to pan dimension	Yes
pan detection	Yes, min. 9 cm
Permanent Automatic Pot Detection with indication of the relative control	Yes
Automatic switch off when overheat	Yes
Automatic switch off when overflow	Yes
Residual heat indicator	Yes
Protection against accidental start up	Yes

Electrical Connection

Electrical connection rating (W)	3700 W
Current	16 A
Voltage (V)	220-240 V
Type of electric cable installed	Yes, Single phase
Frequency (Hz)	50/60 Hz
Power supply cable length	120 cm
Plug	Not present

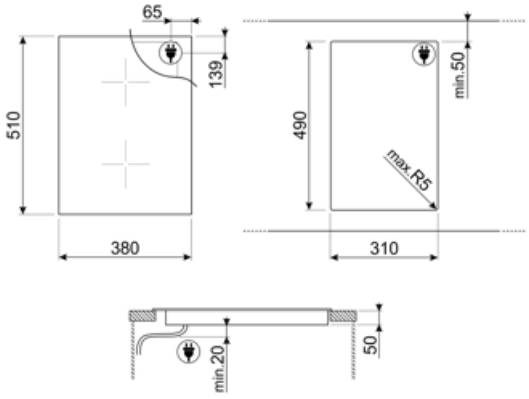
65
139
510
380
490
min.50
max.R5
310
50
min.20

Compatible Accessories



GRILLPLATE

Universal griddle for induction, gas, ceramic and electric hobs. Non-stick surface ideal for cooking meat, cheese and vegetables. Dimensions: 410 x 240 mm.



TPKPLATE

Universal plate for induction, gas, ceramic and electric hobs. Non-stick surface ideal for cooking fish, eggs and vegetables. Dimensions: 410 X 240 mm.



SCRP

Non-scratch hob scraper - suitable for induction and ceramic hobs

Symbols glossary



Permanent auto pot detection



Child lock: some models are fitted with a device to lock the programme/cycle so it cannot be accidentally changed.



The slider control panel allows you to adjust the power simply by passing your finger across the touch device.



Grill function



Overheat protection: The safety system that automatically turns off the hob in case of overheating of the control unit.



Multizone: allows several pans to be used at once, large or small, offering freedom of placement and greater flexibility



Min diameter pot detection of 9 cm.



Quick selection, with one touch cooking begins at the highest level, then automatically reduces after time. Ideal for dishes that require quick boiling and then continued cooking without constant control (eg beef broth).



Indication of residual heat: After the glass ceramic hob is switched off the residual heat indicator shows which of the heating zones still remains hot. When the temperature drops below 60 ° C, the indicator goes out.



Timer: All ceramic hobs have a timer which automatically ends cooking after a preset time.



Possibility to set the maximum power absorbion of the hob.



Power booster: option allows the zone to work at full power when very intense cooking is necessary.



Evolution Slider totally Back-lighted ghost effect



Darkness becomes light



This function allows you to keep cooked food warm without burner it



Induction: The work of these hobs is based on the principle of electromagnetic induction. The heat is generated directly in the bottom of the pan during its contact with the hob.



Overfill protection: The special overfill protection shuts down the stove in the presence of overflow of liquids.



All cooking zones can be reduced to the minimum power level, so the hob can be left unattended for a short period without food overcooking or burning. Then just press again this function, the previously set power levels can be reactivated.



Quick Start function: the chosen temperature is reached faster. The heating element works at maximum power until the right temperature is reached.



Time elapsed: shows how long the cooking zone has been in use.



TWIN_ZONE_72dpi