

SIMU324D



Product Family

Built-in type Ultra-low profile or Fully Flushed

Hob

Dimensions 24"
Power supply Mixed
Type Induction

EAN code 8017709328917



Aesthetics







AestheticUniversaleColourBlackFinishingGlassMaterialGlass

Glass type ceramic Eclipse
Glass edge Straight edge
Type of control setting EVO Slider

Slider Yes

LED colours White

Control knob position Front

Logo Serigraphy colour Grey

Program / Functions



No. of induction cook zones

Time-setting options Spegnimento automatico

No. of cooking zones with booster 4
No. of Flexible zones 2
Main on/off switch Yes
Power levels 9
Total no. of cook zones 4

Options

























Multizone Option Yes Flexible Zone Type MultiZone Auto Multizone Yes **Double Booster** Yes Keep warm automatic Yes function

Grill function Yes End cooking timer 4 Pause option Yes Minute minder 1

End of cooking alarm Yes Residual time indicator Yes Limited Power Yes

Consumption Mode

Limited Power 2400 a 7400 - step 100 W

Consumption Mode in W Showroom Demo Option Yes Control Lock / Child Yes

Safety

Bridge option Yes Quick start Yes Rapid level selection Yes

Technical Features













Front-left - Induction - Multizone - 2.10 kW - Booster 2.50 kW - Double booster 3.00 kW - 24.0x18.0 cm Rear-left - Induction - Multizone - 2.10 kW - Booster 2.50 kW - Double booster 3.00 kW - 24.0x18.0 cm Front-right - Induction - Multizone - 2.10 kW - Booster 2.50 kW - Double booster 3.00 kW - 24.0x18.0 cm Rear-right - Induction - Multizone - 2.10 kW - Booster 2.50 kW - Double booster 3.00 kW - 24.0x18.0 cm

Multizone left - Booster 3.70 kW - 38.5x23.0 cm Multizone right - Booster 3.70 kW - 38.5x23.0 cm

Automatic setting according to pan dimension

pan detection

Permanent Automatic Pot Detection with indication of the relative

control

Automatic switch off

when overheat

Yes

7400 W

Yes, min 9 cm

Yes

Yes

Automatic switch off

when overflow

Residual heat indicator **Protection against** accidental start up

Yes

Yes

Yes

Electrical Connection

Electrical connection

rating (W) Current 33 A Voltage (V) 240 V Voltage 2 (V) 208 V Type of electric cable

Frequency (Hz) Power supply cable

length


Terminal box

Single phase

60 Hz 47 1/4 "

5 poles



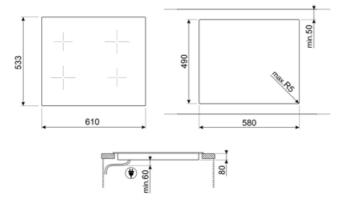



Compatible Accessories



SCRP

Non-scratch hob scraper - suitable for induction and ceramic hobs





Stainless steel grill plate to cook Teppanyaki dishes



energy consumption

Evolution Slider totally Back-lighted ghost effect

EVO slider

Symbols glossary

Ō	Automatic merge of zones for a bigger area	O	Permanent auto pot detection
P	Power booster: option allows the zone to work at full power when very intense cooking is necessary.	S	Child lock: some models are fitted with a device to lock the programme/cycle so it cannot be accidentally changed.
19	The slider control panel allows you to adjust the power simply by passing your finger across the touch device.	ECO logic	ECO-logic: option allows you to restrict the power limit of the appliance real energy saving.
"	This function allows you to keep cooked food warm without burner it	STOP °C∓	Overheat protection: The safety system that automatically turns off the hob in case of overheating of the control unit.
	Induction: The work of these hobs is based on the principle of electromagnetic induction. The heat is generated directly in the bottom of the pan during its contact with the hob.	≑⊙	Multizone: allows several pans to be used at once, large or small, offering freedom of placement and greater flexibility
	Overfill protection: The special overfill protection shuts down the stove in the presence of overflow of liquids.		All cooking zones can be reduced to the minimum power level, so the hob can be left unattended for a short period without food overcooking or burning. Then just press again this function, the previously set power levels can be reactivated.
† P 14 10 10 5	Quick selection, with one touch cooking begins at the highest level, then automatically reduces after time. Ideal for dishes that require quick boiling and then continued cooking without constant control (eg beef broth).	4	Quick Start function: the chosen temperature is reached faster. The heating element works at maximum power until the right temperature is reached.
Н	Indication of residual heat: After the glass ceramic hob is switched off the residual heat indicator shows which of the heating zones still remains hot. When the temperature drops below 60 ° C, the indicator goes out.	<u>()</u>	Time elapsed: shows how long the cooking zone has been in use.
(%)	Timer: All ceramic hobs have a timer which automatically ends cooking after a preset time.		TWIN_ZONE_72dpi
Ē	Grill function	9cm min	Min diameter pot detection of 9 cm
BOOST	Additional maximum power level for a better	ECLIPSE	Darkness becomes light