

ST4523IN



Product Family Dishwashers Width 45 cm

Commercial height 82 cm

Installation Fully-integrated built-in

Kitchen panel Not supplied N° baskets 3, Flexi

EAN code 8017709302917



Programmes

















No. of programmes

Washing temperatures

Full express - 60

minutes

Express 50°

8

50,60°C

Yes

Yes

Yes

ECO

Mix

Self clean Intense 60°

Auto 50°-60°

Yes

Options







Delay timer option

Up to 24 hours, with

automatic soak

Extreme option Yes **Crystal option**

Yes

Yes

Yes

Yes

Yes

Baskets



Basket colour

Upper Basket

Basket components

Height adjustment of the upper basket

colour Handle Grey Grey

In plastic on upper and

lower basket

With central fixed racks On two levels (4 cm)

Largest loadable dish in 14,0 cm

upper basket

With fixed racks Lower Basket

Lower basket with anti- Yes

drip inserts

Largest loadable dish in 31,5 cm

lower basket



Colour Inner Components Grey

Technical Features









Width (mm) 446 mm Depth (mm) 550 mm Display type 3 digit Product Height (mm) 818 mm

Controls

Display

Programme graphics On/off indicator Salt light indicator Rinse aid indicator End of cycle indicator

Water softener Turbidity sensor

Washing system

Aquatest

Flood protection system Total Acquastop

Electronic

Delayed start, Programme

time indicator Symbols Yes

Light Light ActiveLight Standard With electronic setting

Yes

Water supply

Single; cold/hot water max. 60°C - energysave with hot

water up to 35%

90°fH; 50°dH

Max water hardness Drying system

Natural condenser drying, with Dry Assist automatic door opening system at the

end of the cycle

Steam protection In plastic Tank material Stainless steel Filter Stainless steel Concealed heating Yes

element

Hinges

Min. and max. frontal panel weight

Min. and max plinth

height

Adjustable feet

Additional gaskets Depth of dishwasher with open door (mm)

Back feet adjustable from front

Self balancing, Sliding, **FLEXIFIT**

2 - 7,5 kg

40 - 175 mm

6 cm, from 820 to 880 mm

Yes 1200

Yes

Performance / Energy Label









Energy Efficiency Class

(Washing cycle) **Energy consumption** [per 100 cycles, based on the eco programme]

Water consumption [per 9.9 litres

Rated capacity (ps) cycle]

75 kWh

10

Programme duration Airborne acoustical

noise emissions (spinning phase) Airborne acoustical noise emission class

Energy efficiency Index (EEI) (Washing cycle)

4:00 h:min

46 dB(A) re 1 pW

55.9

C


Electrical Connection

Plug (F;E) Schuko Connected power 1950 W 10 A Current 220-240 V Voltage

Frequency (Hz) Type of connection Power supply cable length

50 Hz Single-phase 150 cm



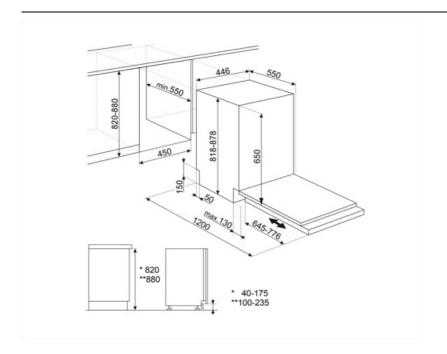



Compatible Accessories

KITPLV2

Kit extension for dishwasher and washing machine: length mt. 2





Symbols glossary



Activelight is an led light which projects a red spot onto the floor beneath the dishwasher when the appliance is in use.



Aquatest measures the clarity of the water during an auto program, and automatically ensures the minimum consumption of water and energy.



Anti-drip: Some models of dishwashers are equipped with special polymer nozzles anti-drip, that improve the process of drying.



Energy efficiency class E



COMM_HEIGHT_82_72dpi



Delay Timer: The delay timer can postpone the start of the program by up to 24 hours.



Option which improves the washing results of the selected programme. It increases the wash temperature and duration.



Models with new Flexi Fit hinges are able to be installed in kitchens with a plinth of just 5cms. With this new hinge design, the panel has a sliding movement from the bottom to the top, avoiding any possible interference of the panel with the plinth.





This option provides special care for a delicate load. It prevents rapid changes in the wash temperature of the selected programme and reduces it to 4



Inverter technology: The evolution of Smeg's driers towards more intelligent and environmentally sustainable models has led to the choice of using Inverter technology with heat pumps, which reduces significantly energy consumption.



Noise Level: Excellent insulation and special devices keep noise to a minimum.



Wash cycle for normally soiled mixed loads such as dishes and pans, even with dried-on residues. When this program is selected, the dishwasher recognises the type of dirt and automatically adjusts the washing parameters as appropriate.



Eco: Eco, this economic wash programme uses a low amount of water and energy in order to provide the most environmentally friendly cleaning option.



..



in ..



Programme suitable for washing and drying heavily soiled items with encrusted residues.



Normal programme: The normal programme is suitable for normal degrees of dirt for everyday use.



...



Soak programme: The soak programme provides a rinse to prevent dirt from drying.



The symbols show the number of plate settings of the dishwasher.



Total Acquastop: In addition to the partial Acquastop protection present in all Smeg dishwashers, some models have an electronic device fitted to the water intake hose, which monitors water levels in the machine, detects leaks in the hose and switches off the water supply immediately when necessary.





System WaterSave ensures the best washing results with minimal water consumption depending on the model of dishwasher.



Benefit

Glassy Touch Display

The easy and intuitive lexan touch display guides the user towards conscious and sustainable choices, reducing waste

The display, featuring indicators for dirt level, water usage, and energy consumption, enables users to optimise efficiency, minimise waste, and address daily needs with an eco-conscious approach. With a range of available options, it allows for customised washing and consumption settings tailored to individual preferences, consistently delivering exceptional results with minimal environmental impact.

Active Light

Active Light gives you clear control by projecting light onto the floor, so you always know when the dishwasher is running or when the cycle is complete

Smeg dishwashers equipped with ActiveLight signal the appliance's activity status by projecting a light on the floor while the cycle is running. The light goes out at the end of the cycle, signalling that the dishwasher can be unloaded.

Flexifit hinge system

The Flexifit hinge system ensures smooth door movement, allowing for seamless integration into your kitchen design

The height of the plinth can vary from 5 cm to 21.5 cm, allowing it to fit perfectly into the cabinet. Thanks to this solution, the dishwasher blends harmoniously into its surroundings, with the door and plinth perfectly aligned with the other kitchen furniture.