

# STL252CH





**Product Family** Dishwashers Commercial width 60 cm Commercial height 86 cm

Installation Fully-integrated built-in

Kitchen panel Not supplied

N° baskets

Motor Inverter 2.0 EAN code 8017709307417



## **Programme / Functions**























N. of programmes 10+1 Washing temperatures 38, 45, 50, 55, 65, 70, 75 °C Soak Express 27' Yes Crystal Yes Full express - 60 Yes minutes **ECO** Yes

Yes Quiet (-2 dB) Yes Intense Yes Self clean Yes Hygiene 99,9% Yes **Delicate** Yes

## **Options**









Dry Assist+ option **Delay timer option** 

Up to 24 hours

1/2 load FlexiZone

Yes

option

Special programs option Yes

## **Baskets**



colour

**Basket** colour **Basket components** 

Grey

Largest loadable dish in 25,0 cm upper basket

Lower basket with anti- Yes

Grey

With 2 foldable racks Lower Basket

Handle In plastic on upper and lower basket

drip inserts



**Upper Basket** 

Glass holder

Height adjustment of the upper basket

With central fixed racks

Yes

On three levels (5 cm)

Largest loadable dish in 35,0 cm

lower basket

Colour Inner Components

**Cutlery basket** 

Blue

Yes

### **Technical Features**







Width (mm) 598 mm Depth (mm) 550 mm

LED display (3 digit) Display type

858 mm Product Height (mm) Controls Electronic

Delayed start, Programme Display

time indicator

Programme graphics Symbols Salt light indicator Light Rinse aid indicator Light

End of cycle indicator Acoustic signal

Washing system Orbital Third spray arm Single

Water softener With electronic setting

Flood protection system **Total Acquastop** 

Single; cold/hot water max. Water supply 60°C - energysave with hot

water up to 35%

Max water hardness

Drying system

100°fH;58°dH

Natural condenser drying, with Dry Assist + automatic

door opening system at the

end of the cycle

Steam protection In plastic Tub material Stainless steel Filter Stainless steel

Concealed heating

element

Self balancing, Sliding, Hinges

> **FLEXIFIT** 2,5 - 10 kg

50 - 215 mm

Yes

Min. and max. frontal

panel weight

Min. and max plinth

height

Adjustable feet

Additional gaskets

7cm, from 860 to 930 mm

Yes, with stainless steel

plate

Yes Back cover Depth of dishwasher 1186

with open door (mm) Back feet adjustable

from front

Top cover

Yes

In plastic

## Performance / Energy Label NEW 2019









**Energy Efficiency Class** 

**Energy consumption** 73 KWh

[per 100 cycles, based on the eco programme]

Rated capacity (ps) 13 Water consumption [per 8.5 litres

cycle]

Programme duration

Airborne acoustical noise emissions

Airborne acoustical noise emission class

**Energy efficiency Index** 

4:40 h:min

45 dB(A) re 1 pW

C

43.8


### **Electrical Connection**

Plug Connected power (F;E) Schuko 1800 W

Frequency (Hz) Type of connection 50 Hz

Single-phase



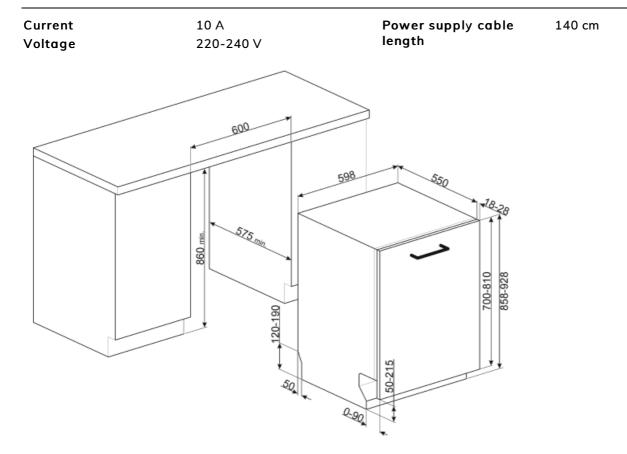



### Not included accessories

#### KITPL60N



Toekick Kit in Black colour with adjustable height and deepness. Can be installed over all the fully integrated and underbench models with variable fulcrum or flexifit hinges.

#### KITPL60X



Toekick Kit in Stainless Steel with adjustable height and deepness. Can be fitted over all the fully integrated and underbench models with variable fulcrum or flexifit hinges.

#### KITPL60B



Toekick Kit in White colour with adjustable height and deepness. Can be installed over all the fully integrated and underbench models with variable fulcrum or flexifit hinges.

#### KITPLV2



Kit extension for dishwasher and washing machine: lenght mt. 2

#### KITGH



Kit glass holder. It has to be fitted on the first basket but only if there are foldable racks



#### KIT86PORTX-1



#### KIT86PORTAN-1



#### **KITFLEXI**

Kit for 60cm dishwashers with FlexiFit hinges for door panel weight >11 kg (max 15 kg 82 cm and 13,5 kg 86 cm)



KIT86PORTWH-1



## Symbols glossary (TT)



To improve the drying of dishes without leaving stains.



86 cm high



Delay Timer: Option to postpone the start of the desired programme by up to 24 hours in order to programme the dishwasher to run at the desired time.



Energy efficiency class C



The Dry Assist + option, in addition to saving energy, ensures perfect drying of the dishes by opening the door automatically at the end of the washing cycle.



The FlexiFit hinges allow the kitchen panel to slide over the dishwasher door, allowing a minimum kitchen plinth height of 5 cm.



FlexiZone: The ½ load flexizone allows you to wash a reduced load saving energy, water and time and there are no restrictions on where the items are placed.



The work aimed at continuous improvement has allowed the creation of the second generation of the Inverter motor 2.0, characterised by greater efficiency and durability over time, which allows very high performance and a lower energy consumption and noise level.



Noise Level: Excellent insulation and special devices keep noise to a minimum.



Orbital wash system distributes water evenly throughout the 60cm dishwasher cavity, directing water with precision to ensure an excellent wash.



Crystals: The Crystals programme is dedicated to delicate dishes such as glasses and china.



Delicate: Delicate washing program is designed for delicate dishes which are not heavily soiled.



Eco: Eco, this economic wash programme uses a low amount of water and energy in order to provide the most environmentally friendly cleaning option.



Mix: The Mix programme is suitable for mixed crockery and everyday pots and pans, without any particular incrustation.



Soak programme: The soak programme provides a rinse to prevent dirt from drying.



Express 27': The Express 27' programme is a quick wash cycle, at low temperatures, for lightly soiled dishes.



Ultraclean: The Ultraclean option performs a final rinse at a high temperature of 70°c eliminating virtually all bacteria.



13 place settings: Number of place settings.



Total Acquastop: In addition to the partial Acquastop protection present in all Smeg dishwashers, some models have an electronic device fitted to the water intake hose, which monitors water levels in the machine, detects leaks in the hose and switches off the water supply immediately when necessary.



System WaterSave ensures the best washing results with minimal water consumption depending on the model of dishwasher.



Quick wash cycle for normally soiled mixed loads such as dishes and pans, even with dried-on residues. Dishes are washed and dried in 60 minutes.



Dishwasher cleaning cycle. The cycle should be started with the machine empty, without dishes. It is recommended to run the program every 2-3 months, using special dishwasher detergents.





SILENT: Wash cycle suitable for normally soiled dishes, even with dried-on residues. Ensures maximum noise reduction and is therefore ideal if you wish to run it during the night.



Allows you to enable additional programs when selected together with any wash cycle. After having selected the required wash cycle, press the button (



HYGIENE 99.9% High-temperature washing programme. The 75° rinse guarantees the removal of 99.9% of germs and bacteria.