

## STL332CH



Product Family Commercial width Commercial height Installation Kitchen panel N° baskets Motor EAN code Dishwashers 60 cm 86 cm Fully-integrated built-in Not supplied 3, Flexi Inverter 2.0 8017709307431



## Programs

(1) (2) (2) (2) (2) (2) (2) (2) (2) (2) (2	5° (* 100	<u>Q</u> 50°	
N. of programmes	10+1	Mix	Yes
Washing temperatures	38, 45, 50, 55, 65, 70, 75 °C	Quiet (-2 dB)	Yes
Soak	Yes	Intense	Yes
Express 27'	Yes	Self clean	Yes
Crystal	Yes	Hygiene 99,9%	Yes
Full express - 60	Yes	Delicate	Yes
minutes			
ECO	Yes		

## Options



Dry Assist+ option Delay timer option Yes Up to 24 hours 1/2 load FlexiZone Yes option Special programs option Yes

## Baskets



Basket colour Basket components colour Handle Grey Grey

In plastic on upper and lower basket Upper basket with Yes EasyGlide System Largest loadable dish in 19,0 cm upper basket Lower Basket With 2 foldable racks



**Upper Basket Glass** holder Height adjustment of the upper basket

With central fixed racks Yes On three levels (5 cm)

Lower basket with anti- Yes drip inserts Largest loadable dish in 35,0 cm lower basket Colour Inner Blue Components


## **Technical Features**

ORBITAL	FLEXI
SYSTEM	FIT

Width (mm) Depth (mm) Display type Product Height (mm)	598mm 550mm LED display (3 digit) 858mm	Max water hardness Drying system	100°fH;58°dH Natural condenser drying, with Dry Assist + automatic door opening system at the end of the cycle
Controls Display	Electronic Delayed start, Programme time indicator	Steam protection Tub material	In plastic Stainless steel
Programme graphics Salt light indicator	Symbols Light	Filter Concealed heating element	Stainless steel Yes
Rinse aid indicator End of cycle indicator Washing system	Light Acoustic signal Orbital	Hinges	Self balancing, Sliding, FLEXIFIT
Third spray arm Water softener	Single With electronic setting	Min. and max. frontal panel weight Min. and max plinth	2,5 - 10 kg 50 - 215 mm
Flood protection system Water supply	Total Acquastop Single; cold/hot water max.	height Adjustable feet	7 cm, from 860 to 930 mm
	60°C - energysave with hot water up to 35%	Back cover Depth of dishwasher with open door (mm)	Yes 1168
		Back feet adjustable from front	Yes

Top cover

## Performance / Energy Label - Reg. 2019



**Energy consumption** 

**Energy Efficiency Class** 

С 73 kWh

[per 100 cycles, based on the eco programme] Rated capacity (ps) 13 Water consumption [per 9,0 litres cycle]

#### **Programme duration** 4:25 h:min Airborne acoustical 43 dB(A) re 1 pW noise emissions Airborne acoustical В noise emission class Energy efficiency Index 43,8 (EEI)

## **Electrical Connection**


Plug **Connected power** Current

(F;E) Schuko 1800 W 10 A

Frequency (Hz) Type of connection 50 Hz Single-phase

In plastic



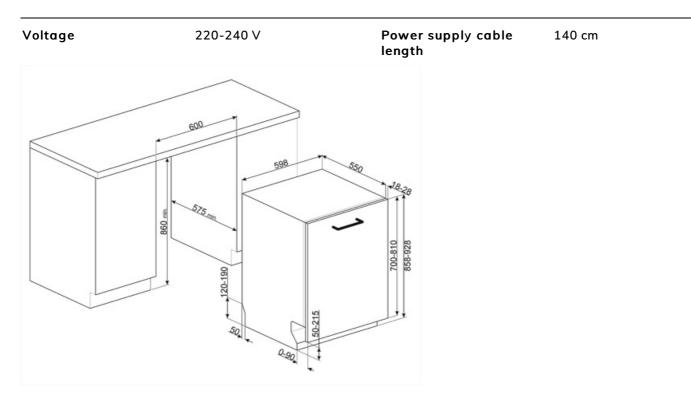



## **Compatible Accessories**



#### KIT86CX-1

Door kit, stainless steel, Canali handle, fully integrated dishwasher h.86 cm Compatible with models with Flexifit and fixed fulcrum hinges.



#### KIT86PORTWH-1



#### KIT86PORTAN-1

KIT86PORTX-1

KIT86SPRMW

<del>. . .</del>

#### KIT86SPRAN

**KIT86SPRX** 



#### Kit for 60cm dishwashers with FlexiFit hinges for door panel weight >11 kg (max 15 kg 82 cm and 13,5 kg 86 cm)

#### KITPL60B

KITFLEXI

Toekick Kit in White colour with adjustable height and deepness. Can be installed over all the fully integrated and underbench models with variable fulcrum or flexifit hinges.

#### KITPL60X

Toekick Kit in Stainless Steel with adjustable height and deepness. Can be fitted over all the fully integrated and underbench models with variable fulcrum or flexifit hinges.

### KITO

Kit glass holder. It has to be fitted on the first basket but only if there are foldable racks

#### KITPL60N



Toekick Kit in Black colour with adjustable height and deepness. Can be installed over all the fully integrated and underbench models with variable fulcrum or flexifit hinges.

#### KITPLV2



Kit extension for dishwasher and washing machine: lenght mt. 2



### кітдн

K. 6.



# •se•smeg

## Symbols glossary

Ď	To improve the drying of dishes without leaving stains.	86 cm	86 cm high
(i)	Delay Timer: Option to postpone the start of the desired programme by up to 24 hours in order to programme the dishwasher to run at the desired time.	***	EasyGlide: Convenient EasyGlide system for easy unloading of the appliance that allows reaching maximum flexibility of load of the machine.
FLEXI FIT	The FlexiFit hinges allow the kitchen panel to slide over the dishwasher door, allowing a minimum kitchen plinth height of 5 cm.		FlexiZone: The ½ load flexizone allows you to wash a reduced load saving energy, water and time and there are no restrictions on where the items are placed.
43 dB	Noise Level: Excellent insulation and special devices keep noise to a minimum.	CORDINAL OFFICIAL SYSTEM	Orbital wash system distributes water evenly throughout the 60cm dishwasher cavity, directing water with precision to ensure an excellent wash.
<b>₽</b> 45°	Crystals: The Crystals programme is dedicated to delicate dishes such as glasses and china.	0 	Delicate: Delicate washing program is designed for delicate dishes which are not heavily soiled.
ECO 50°	Eco: Eco, this economic wash programme uses a low amount of water and energy in order to provide the most environmentally friendly cleaning option.	65)))	Mix: The Mix programme is suitable for mixed crockery and everyday pots and pans, without any particular incrustation.
<u>ش</u>	Soak programme: The soak programme provides a rinse to prevent dirt from drying.	27min	Express 27': The Express 27' programme is a quick wash cycle, at low temperatures, for lightly soiled dishes.
70°	Ultraclean: The Ultraclean option performs a final rinse at a high temperature of 70°c eliminating virtually all bacteria.	1011	13 place settings: Number of place settings.
40000100	Total Acquastop: In addition to the partial Acquastop protection present in all Smeg dishwashers, some models have an electronic device fitted to the water intake hose, which monitors water levels in the machine, detects leaks in the hose and switches off the water supply immediately when necessary.	000 9 It	System WaterSave ensures the best washing results with minimal water consumption depending on the model of dishwasher.
60 min	Quick wash cycle for normally soiled mixed loads such as dishes and pans, even with dried-on residues. Dishes are washed and dried in 60 minutes.		Dishwasher cleaning cycle. The cycle should be started with the machine empty, without dishes. It is recommended to run the program every 2-3 months, using special dishwasher detergents.
¶₹.	SILENT: Wash cycle suitable for normally soiled dishes, even with dried-on residues. Ensures maximum noise reduction and is therefore ideal if you wish to run it during the night.	Ś	Allows you to enable additional programs when selected together with any wash cycle. After having selected the required wash cycle, press the button (



E	)
I	~
I	/DRY*
Ш	

The Dry Assist + option, in addition to saving energy, ensures perfect drying of the dishes by opening the door automatically at the end of the washing cycle.

02	

HYGIENE 99.9% High-temperature washing programme. The 75° rinse guarantees the removal of 99.9% of germs and bacteria.

0
140
2.0

C <sup>A</sup> G

> The work aimed at continuous improvement has allowed the creation of the second generation of the Inverter motor 2.0, characterised by greater efficiency and durability over time, which allows very high performance and a lower energy consumption and noise level.

Energy efficiency class C

8,3



## Benefit (TT)

#### Orbital Wash System

Even water distribution, deep cleaning and low noise thanks to the dual rotating spray arms

Orbital washing system, which, thanks to its double arm, its 7 water exit points and thanks to overlapping and simultaneous rotations and 40 rotations per minute, allows ample coverage of the tank area, thus guaranteeing optimal results in any basket-loading configuration.

#### Flexifit hinge system

Smooth-running door for optimal integration into the kitchen deisgn

The height of the plinth can vary from 5 cm to 21.5 cm, allowing it to fit perfectly into the cabinet. Thanks to this solution, the dishwasher blends harmoniously into its surroundings, with the door and plinth perfectly aligned with the other kitchen furniture.

#### DryAssist+

The Dry Assist+ system of automatic door opening at the end of the cycle ensures fast and energy-efficient drying