

STL342CSL





Product Family Dishwashers
Commercial width 60 cm
Commercial height 82 cm

Installation Fully-integrated built-in

Kitchen panel Not supplied
N° baskets 3, FlexiDuo
Motor Single phase
EAN code 8017709324391



Programs























N. of programmes 10+1
Washing temperatures 38, 45,
Soak Yes
Express 27' Yes
Crystal Yes
Full express - 60 Yes
minutes
ECO Yes

 10+1
 Green express
 Yes

 38, 45, 50, 55, 65, 70, 75 °C
 Auto sensor 45-65
 Yes

 Yes
 Mix
 Yes

 Yes
 Intense
 Yes

 Yes
 Self clean
 Yes

 Yes
 Hygiene 99,9%
 Yes

Options









Dry Assist+ option
Delay timer option

Yes Up to 24 hours 1/2 load FlexiZone

Yes

option

Special programs option Yes

Baskets



Basket colour

Basket components colour

Handle

Grey Grey Largest loadable dish in 19,0 cm upper basket

With 2 foldable racks

In plastic on upper and

lower basket

Lower basket with anti- Yes

drip inserts

Lower Basket



Upper Basket Height adjustment of the upper basket

With central fixed racks On three levels (5 cm)

Largest loadable dish in 30,0 cm lower basket

Blue

Colour Inner Components

Technical Features











Display type LED display (3 digit)

Product Height (mm) 818 mm Controls Electronic

Display Delayed start, Programme

time indicator

Programme graphics Symbols On/off indicator Yes Salt light indicator Light Rinse aid indicator Light End of cycle indicator ActiveLight Washing system Orbital Single Third spray arm

Water softener

Turbidity sensor

Aquatest

Flood protection system Total Acquastop

With electronic setting Yes

Water supply

Single; cold/hot water max. 60°C - energysave with hot

water up to 35%

Max water hardness

100°fH;58°dH Drying system Natural condenser drying,

> with Dry Assist + automatic door opening system at the

end of the cycle

Steam protection In plastic Tub material Stainless steel Filter Stainless steel

Concealed heating

element

Hinges Self balancing, Sliding,

FLEXIFIT

2,5 - 11 kg

50 - 215 mm

Yes

Min. and max. frontal

panel weight

Min. and max plinth

height

7 cm, from 820 to 890 mm Adjustable feet

Back cover Depth of dishwasher

with open door (mm)

from front

Back feet adjustable

Yes

Yes

1146

Top cover In plastic

Performance / Energy Label





Number of place

Frequency (Hz)

settings

Energy efficiency class

13

C

50 Hz

Energy Effiency Index

(EE)

Noise level

43,5

44 dB(A) re 1 pW

Electrical Connection

Connected power 1800 W Current 10 A 220-240 V Voltage

Type of connection Power supply cable


length

Plug

Single-phase 140 cm

(F;E) Schuko



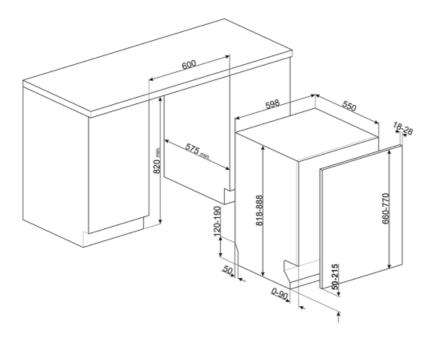



Compatible Accessories



KIT82CN



KIT82CX



KIT82SPRAN



KIT82SPRMW



KIT82SPRX



Kit for 60cm dishwashers with FlexiFit hinges for door panel weight >11 kg

(max 15 kg 82 cm and 13,5 kg 86 cm)



KITGH

Kit glass holder. It has to be fitted on the first basket but only if there are foldable racks



KITPL60B

KITFLEXI

Toekick Kit in White colour with adjustable height and deepness. Can be installed over all the fully integrated and underbench models with variable fulcrum or flexifit hinges.




KITPL60N

Toekick Kit in Black colour with adjustable height and deepness. Can be installed over all the fully integrated and underbench models with variable fulcrum or flexifit hinges.



KITPL60X







Kit extension for dishwasher and washing machine: lenght mt. 2



Symbols glossary



Activelight is an led light which projects a red spot onto the floor beneath the dishwasher when the appliance is in use.



The Aquatest sensor is an electronic sensor that measures the degree of water transparency at the end of the initial soaking phase. ased on the values measured, the sensor sets the most suitable programme, thus obtaining the best washing results with the minimum amount of water.



To improve the drying of dishes without leaving stains.



Energy efficiency class C



82 cm high



Delay Timer: Option to postpone the start of the desired programme by up to 24 hours in order to programme the dishwasher to run at the desired time



The Dry Assist + option, in addition to saving energy, ensures perfect drying of the dishes by opening the door automatically at the end of the washing cycle.



FlexiDuo: The FlexiDuo 3rd cutlery basket allows you to arrange cutlery or small cups, ladles, or bulky utensils however you like: it consists of two separate and moveable modules.



The FlexiFit hinges allow the kitchen panel to slide over the dishwasher door, allowing a minimum kitchen plinth height of 5 cm.



FlexiZone: The ½ load flexizone allows you to wash a reduced load saving energy, water and time and there are no restrictions on where the items are placed.





GREEN EXPRESS Washing programme with low water and energy consumption.



Noise Level: Excellent insulation and special devices keep noise to a minimum.



Orbital wash system distributes water evenly throughout the 60cm dishwasher cavity, directing water with precision to ensure an excellent wash.



Auto 45°- 65°: The auto programme regulates the length of a cycle depending on the need for a pre-wash and the number of rinses required.



Crystals: The Crystals programme is dedicated to delicate dishes such as glasses and china.



Eco: Eco, this economic wash programme uses a low amount of water and energy in order to provide the most environmentally friendly cleaning option.



Mix: The Mix programme is suitable for mixed crockery and everyday pots and pans, without any particular incrustation.



Soak programme: The soak programme provides a rinse to prevent dirt from drying.



Express 27': The Express 27' programme is a quick wash cycle, at low temperatures, for lightly soiled dishes.



Ultraclean: The Ultraclean option performs a final rinse at a high temperature of 70°c eliminating virtually all bacteria.



13 place settings: Number of place settings.





Total Acquastop: In addition to the partial Acquastop protection present in all Smeg dishwashers, some models have an electronic device fitted to the water intake hose, which monitors water levels in the machine, detects leaks in the hose and switches off the water supply immediately when necessary.



System WaterSave ensures the best washing results with minimal water consumption depending on the model of dishwasher.



Quick wash cycle for normally soiled mixed loads such as dishes and pans, even with dried-on residues. Dishes are washed and dried in 60 minutes.



Dishwasher cleaning cycle. The cycle should be started with the machine empty, without dishes. It is recommended to run the program every 2-3 months, using special dishwasher detergents.



Allows you to enable additional programs when selected together with any wash cycle. After having selected the required wash cycle, press the button (



HYGIENE 99.9% High-temperature washing programme. The 75° rinse guarantees the removal of 99.9% of germs and bacteria.