

# STL362CS



**Product Family** Dishwashers Commercial width 60 cm Commercial height 82 cm

Installation Fully-integrated built-in

Kitchen panel Not supplied N° baskets 3, Flexi Motor Single phase EAN code 8017709324384



## **Programs**

























N. of programmes 10 + 1Washing temperatures Soak Express 27' Yes Crystal Yes Full express - 60 Yes minutes

**ECO** Yes

38, 45, 50, 55, 65, 70, 75 °C

Mix Intense Self clean

Hygiene 99,9%

Green express

Auto sensor 45-65

Delicate

# **Options**









Dry Assist+ option **Delay timer option** 

Up to 24 hours

1/2 load FlexiZone

Yes

Yes

Yes

Yes

Yes

Yes

Yes

option

Special programs option Yes

### **Baskets**



colour

Handle

**Basket** colour **Basket components**  Grey Grey Largest loadable dish in 19,0 cm

upper basket

With 2 foldable racks

In plastic on upper and

lower basket

Lower basket with anti- Yes

drip inserts

Lower Basket



**Upper Basket** Height adjustment of the upper basket

With central fixed racks On three levels (5 cm)

Largest loadable dish in 30,0 cm

lower basket Colour Inner

Blue

Components

### **Technical Features**









Width (mm) 598 mm Depth (mm)

Display type

Product Height (mm) Controls Display

Electronic

Programme graphics Symbols On/off indicator Yes Salt light indicator Light Rinse aid indicator Light End of cycle indicator

Washing system Third spray arm

Water softener

Turbidity sensor

Aquatest

Flood protection system Total Acquastop

545 mm

LED display (3 digit) 818 mm

Delayed start, Programme

time indicator

Acoustic signal

Orbital Single

With electronic setting

Yes

Water supply

Single; cold/hot water max. 60°C - energysave with hot

water up to 35%

Max water hardness Drying system

100°fH;58°dH

Natural condenser drying, with Dry Assist + automatic door opening system at the

end of the cycle

Steam protection In plastic Tub material Stainless steel Filter Stainless steel

Concealed heating

element

Hinges Self balancing, Sliding,

**FLEXIFIT** 

2,5 - 11 kg

Yes

Min. and max. frontal

panel weight

Min. and max plinth

height

50 - 215 mm

7 cm, from 820 to 890 mm Adjustable feet

**Back cover** Depth of dishwasher with open door (mm)

from front

Back feet adjustable

Yes

Yes

1146 mm

In plastic Top cover

# Performance / Energy Label - Reg. 2019









**Energy Efficiency Class Energy consumption** 73 kWh

[per 100 cycles, based on the eco programme]

Rated capacity (ps) 13

Water consumption [per 9.0 litres cycle]

Programme duration Airborne acoustical

noise emissions Airborne acoustical

noise emission class

**Energy efficiency Index** (EEI)

43.8

C

4:00 h:min

46 dB(A) re 1 pW

**Electrical Connection** 

1800 W Connected power Current 10 A

Type of connection

Single-phase




Voltage Frequency (Hz) 220-240 V 50 Hz

Power supply cable length

Plug (F;E) Schuko

140 cm

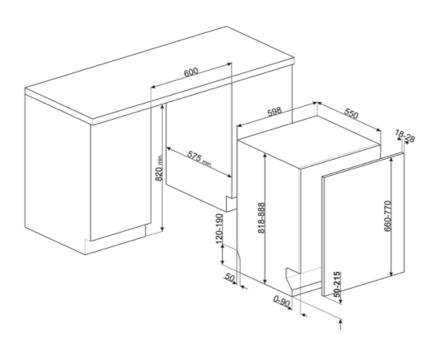



# **Compatible Accessories**



#### KIT82CN



KIT82CX



KIT82SPRAN



KIT82SPRMW



KIT82SPRX



Kit for 60cm dishwashers with FlexiFit hinges for door panel weight >11 kg (max 15 kg 82 cm and 13,5 kg 86 cm)




#### **KITGH**

Kit glass holder. It has to be fitted on the first basket but only if there are foldable racks



#### KITPL60B

**KITFLEXI** 





#### KITPL60N

Toekick Kit in Black colour with adjustable height and deepness. Can be installed over all the fully integrated and underbench models with variable fulcrum or flexifit hinges.



#### KITPL60X



Toekick Kit in Stainless Steel with adjustable height and deepness. Can be fitted over all the fully integrated and underbench models with variable fulcrum or flexifit hinges.





Kit extension for dishwasher and washing machine: lenght mt. 2



## Symbols glossary



The Aquatest sensor is an electronic sensor that measures the degree of water transparency at the end of the initial soaking phase. ased on the values measured, the sensor sets the most suitable programme, thus obtaining the best washing results with the minimum amount of water.



To improve the drying of dishes without leaving stains.



82 cm high



Delay Timer: Option to postpone the start of the desired programme by up to 24 hours in order to programme the dishwasher to run at the desired time.



The FlexiFit hinges allow the kitchen panel to slide over the dishwasher door, allowing a minimum kitchen plinth height of 5 cm.



FlexiZone: The ½ load flexizone allows you to wash a reduced load saving energy, water and time and there are no restrictions on where the items are placed.



Noise Level: Excellent insulation and special devices keep noise to a minimum.



Noise Level: Excellent insulation and special devices keep noise to a minimum.



Orbital wash system distributes water evenly throughout the 60cm dishwasher cavity, directing water with precision to ensure an excellent wash.



Auto 45°- 65°: The auto programme regulates the length of a cycle depending on the need for a pre-wash and the number of rinses required.



Crystals: The Crystals programme is dedicated to delicate dishes such as glasses and china.



Eco: Eco, this economic wash programme uses a low amount of water and energy in order to provide the most environmentally friendly cleaning option.



Mix: The Mix programme is suitable for mixed crockery and everyday pots and pans, without any particular incrustation.



Soak programme: The soak programme provides a rinse to prevent dirt from drying.



Express 27': The Express 27' programme is a quick wash cycle, at low temperatures, for lightly soiled dishes.



Ultraclean: The Ultraclean option performs a final rinse at a high temperature of 70°c eliminating virtually all bacteria.



13 place settings: Number of place settings.



Total Acquastop: In addition to the partial Acquastop protection present in all Smeg dishwashers, some models have an electronic device fitted to the water intake hose, which monitors water levels in the machine, detects leaks in the hose and switches off the water supply immediately when necessary.



System WaterSave ensures the best washing results with minimal water consumption depending on the model of dishwasher.



GREEN EXPRESS Washing programme with low water and energy consumption.



Quick wash cycle for normally soiled mixed loads such as dishes and pans, even with dried-on residues. Dishes are washed and dried in 60 minutes.



Dishwasher cleaning cycle. The cycle should be started with the machine empty, without dishes. It is recommended to run the program every 2-3 months, using special dishwasher detergents.





Allows you to enable additional programs when selected together with any wash cycle. After having selected the required wash cycle, press the button (



The Dry Assist + option, in addition to saving energy, ensures perfect drying of the dishes by opening the door automatically at the end of the washing cycle.



Energy efficiency class C



HYGIENE 99.9% High-temperature washing programme. The 75° rinse guarantees the removal of 99.9% of germs and bacteria.