

STU8623X





Product family Dishwashers

24" Width 86 cm Commercial height

Installation Under counter built-in

N° baskets 3, FlexiDuo EAN code 8017709303679



Programs











Number of programs 10 **Delicates** Yes Washing temperatures 38, 45, 50, 55, 65, 70, 75 °F Normal Yes Soak Crystal & China Yes Express 27' Yes Eco express Yes Mix Yes Express 60' Yes Sterilize Pots & Pans Yes Yes

Options











Dry Assist option Delay start

Yes Up to 24 hours FlexiZone half-load

Yes

option

Special programs option Yes

Baskets



Basket color Largest loadable dish in 18,0 inches Gray

upper basket Upper basket 1 foldable rack

Lower basket With 2 foldable racks Glass holder Yes

Largest loadable dish in 35,0 inches Upper basket height On 3 levels

lower basket

Sliding Guides Extra

Glide

adjustment

Yes

Colour Inner Components Blue



Cutlery basket

Yes

Technical Features





Width 23 9/16 " Depth 21 5/8 "

Display type LED display (3 digits)

Height 33 3/4 "

Display Delay start, Program

progress indicator, Time-to-

end indicator

Program symbols Symbols
Salt indicator Light
Rinse aid indicator Light

End-of-cycle indicator Acoustic signal

Washing system Orbital
Third spray arm Single

Water softener With electronic setting

Flood protection system Single Aquastop

Max water hardness 100°fH;58°dH

Drying system

Natural condenser drying, with Dry Assist automatic

with Dry Assist automatic door opening system at the

end of the cycle

Tub materialStainless steelFilterStainless steelHingesSelf-balancing with

variable hinges

4.4 - 17.6 lbs

Min. and max. frontal panel weight

Min. and max plinth

Adjustable feet

height

ight

5/8"

1186

4" - 9"

Additional gaskets Yes Back cover Yes

Depth of dishwasher with open door (mm)

Adjustable plinth

Top cover

By height and depth

2 3/4", from 33 7/8" to 36

Metal sheet

Electrical Connection

Plug (A) USA & Mexico

Connected power 1800 W
Current 13 A
Voltage 115 V

Frequency (Hz)
Connection type
Power supply cable


length

60 Hz

Single-phase

140 "



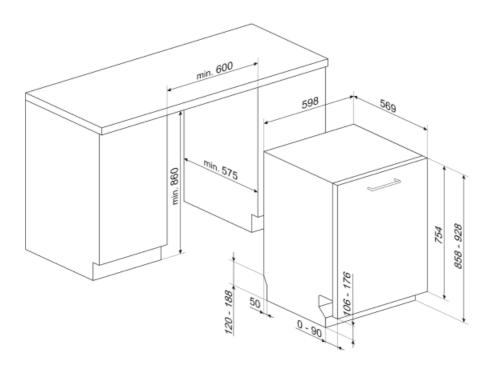



Not included accessories

KITPL60N



Toekick Kit in Black colour with adjustable height and deepness. Can be installed over all the fully integrated and underbench models with variable fulcrum or flexifit hinges.

(K.)

KITPL60X

Toekick Kit in Stainless Steel with adjustable height and deepness. Can be fitted over all the fully integrated and underbench models with variable fulcrum or flexifit hinges.


KITPL60B



Toekick Kit in White colour with adjustable height and deepness. Can be installed over all the fully integrated and underbench models with variable fulcrum or flexifit hinges.



KITPLV2



KITGH



Kit glass holder. It has to be fitted on the first basket but only if there are foldable racks



Symbols glossary (TT)



Acquastop: Some Smeg dishwashers are equipped with a simple Acquastop: float sensor in the bottom which is necesary to prevent an accidental leakage of water inside the appliance.



COMM_HEIGHT_86_72dpi



Delay Timer: The delay timer can postpone the start of the program by up to 24 hours.



Enersave: At the end of the drying cycle a special device slowly automatically opens the door a few centimeters, to ensure perfect drying and to save up to 20% of energy on some models.



FlexiDuo: The FlexiDuo 3rd cutlery basket allows you to arrange cutlery or small cups, ladles, or bulky utensils however you like: it consists of two separate and moveable modules.



FlexiZone: The ½ load flexizone allows you to wash a reduced load saving energy, water and time and there are no restrictions on where the items are placed.



The new ExtraGlide guide system, available on top of the range models, makes the second basket even smoother and softer. In fact, it facilitates the extraction of the introduction, even at full load and, for the greater excursion, the insertion of crockery is also facilitated in the rear part.



Noise Level: Excellent insulation and special devices keep noise to a minimum.



Orbital wash system distributes water evenly throughout the 60cm dishwasher cavity, directing water with precision to ensure an excellent wash.



Delicate: Delicate washing program is designed for delicate dishes which are not heavily soiled.



Normal programme: The normal programme is suitable for normal degrees of dirt for everyday



Soak programme: The soak programme provides a rinse to prevent dirt from drying.



Rapid 27 Mins: The rapid 27 mins quick program takes just 27 minutes to wash a load.



The symbols show the number of plate settings of the dishwasher.



•••



.