

STX325BLLC







Product Family Dishwashers Commercial width 60 cm Commercial height 82 cm

Installation Under counter built-in N° baskets 3, FlexiDuo with Easy Glide

Motor Inverter 2.0 **EAN** code 8017709334017



Programs

























N. of programmes 10 + 1Washing temperatures 38, 45, 50, 55, 65, 70, 75 °C Soak Express 27' Yes Crystal Yes Full express - 60 Yes minutes

ECO Yes

Auto sensor 45-65

Yes Quiet (-2 dB) Yes Intense Yes Self clean Yes Hygiene 99,9% Yes

Options









Dry Assist+ option **Delay timer option** Up to 24 hours

1/2 load FlexiZone

Yes

Yes

option

Special programs option Yes

Baskets





Basket colour Basket components

colour

Handle

Grey

Grey

In plastic on upper and

lower basket

Sliding Guides Extra Glide

Yes

Largest loadable dish in 19,0 cm

upper basket

Lower Basket

With 4 foldable racks



Upper Basket

Glass holder

Height adjustment of the upper basket

With 3 foldable racks

Yes

On three levels (5 cm)

Lower basket with anti- Yes

drip inserts

Largest loadable dish in 30,0 cm

lower basket

Colour Inner

Components

Blue

Technical Features











Width (mm) Depth (mm)

Display type

Product Height (mm) 818 mm

Controls Display

Electronic touch control Delayed start, Programme

Programme graphics On/off indicator Yes Salt light indicator Light Rinse aid indicator Light

End of cycle indicator Washing system

Third spray arm Water softener

Turbidity sensor

Aquatest

Flood protection system Total Acquastop

598 mm

545 mm

LED display (3 digit)

time indicator, Time to end

indication Symbols

ActiveLight Planetarium

Single

With electronic setting

Water supply

Single; cold/hot water max. 60°C - energysave with hot

> water up to 35% 100°fH;58°dH

Max water hardness

Drying system

Natural condenser drying, with Dry Assist + automatic

door opening system at the end of the cycle

Steam protection Metallic sheet Internal light With White led Tub material Stainless steel Filter Stainless steel

Concealed heating

element Hinges

Self balancing with variable hinges

100 - 228 mm

Yes

Min. and max plinth

height

Adjustable feet Additional gaskets 7 cm, from 820 to 890 mm Yes, with stainless steel

plate

Back cover Yes Depth of dishwasher 1146

with open door (mm) Back feet adjustable

from front Top cover

Yes

In plastic

Performance / Energy Label - Reg. 2019









Energy Efficiency Class Energy consumption 63 kWh

[per 100 cycles, based on the eco programme] Rated capacity (ps) 13

Water consumption [per 9.0 litres cycle]

Programme duration

Airborne acoustical noise emissions

Airborne acoustical noise emission class

Energy efficiency Index

В

37.9

4:25 h:min

42 dB(A) re 1 pW


(EEI)

Electrical Connection



Plug Connected power Current (F;E) Schuko 1800 W 10 A 220-240 V Frequency (Hz)
Type of connection
Power supply cable
length

50 Hz Single-phase 140 cm

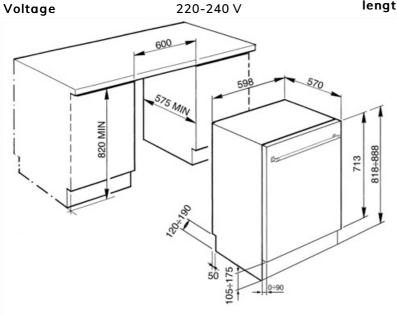



Compatible Accessories

KITGH



Kit glass holder. It has to be fitted on the first basket but only if there are foldable

KITPL60N



Toekick Kit in Black colour with adjustable height and deepness. Can be installed over all the fully integrated and underbench models with variable fulcrum or flexifit hinges.



KITPL60X

KITPL60B

Toekick Kit in Stainless Steel with adjustable height and deepness. Can be fitted over all the fully integrated and underbench models with variable fulcrum or flexifit hinges.

Toekick Kit in White colour with

be installed over all the fully integrated and underbench models with variable fulcrum or flexifit hinges.

adjustable height and deepness. Can

KITPLV2



Kit extension for dishwasher and washing machine: lenght mt. 2



Symbols glossary



Activelight is an led light which projects a red spot onto the floor beneath the dishwasher when the appliance is in use.



The Aquatest sensor is an electronic sensor that measures the degree of water transparency at the end of the initial soaking phase. ased on the values measured, the sensor sets the most suitable programme, thus obtaining the best washing results with the minimum amount of water.



To improve the drying of dishes without leaving stains.



82 cm high



Delay Timer: Option to postpone the start of the desired programme by up to 24 hours in order to programme the dishwasher to run at the desired time.



FlexiDuo: The FlexiDuo 3rd cutlery basket allows you to arrange cutlery or small cups, ladles, or bulky utensils however you like: it consists of two separate and moveable modules.



FlexiZone: The ½ load flexizone allows you to wash a reduced load saving energy, water and time and there are no restrictions on where the items are placed.



The ExtraGlide guides system makes the second basket run even smoother and softer. It facilitates movement even when fully loaded, and thanks to the increased excursion, facilitates the insertion of dishes into the basket.



Noise Level: Excellent insulation and special devices keep noise to a minimum.



The Planetarium washing system, with high rotations per minute, guarantees complete coverage of the tank, thanks to the simultaneous rotation of base and sprayers, and excellent washing results.



Auto 45°- 65°: The auto programme regulates the length of a cycle depending on the need for a pre-wash and the number of rinses required.



Crystals: The Crystals programme is dedicated to delicate dishes such as glasses and china.



Eco: Eco, this economic wash programme uses a low amount of water and energy in order to provide the most environmentally friendly cleaning option.



Mix: The Mix programme is suitable for mixed crockery and everyday pots and pans, without any particular incrustation.



Soak programme: The soak programme provides a rinse to prevent dirt from drying.



Express 27': The Express 27' programme is a quick wash cycle, at low temperatures, for lightly soiled dishes.



Ultraclean: The Ultraclean option performs a final rinse at a high temperature of 70°c eliminating virtually all bacteria.



13 place settings: Number of place settings.



Total Acquastop: In addition to the partial Acquastop protection present in all Smeg dishwashers, some models have an electronic device fitted to the water intake hose, which monitors water levels in the machine, detects leaks in the hose and switches off the water supply immediately when necessary.



Touch controls: Easy to use touch controls allow the appliance to be programmed at the touch of a button.





System WaterSave ensures the best washing results with minimal water consumption depending on the model of dishwasher.



Dishwasher cleaning cycle. The cycle should be started with the machine empty, without dishes. It is recommended to run the program every 2-3 months, using special dishwasher detergents.



Allows you to enable additional programs when selected together with any wash cycle. After having selected the required wash cycle, press the button (



Energy efficiency class B



The work aimed at continuous improvement has allowed the creation of the second generation of the Inverter motor 2.0, characterised by greater efficiency and durability over time, which allows very high performance and a lower energy consumption and noise level.



Quick wash cycle for normally soiled mixed loads such as dishes and pans, even with dried-on residues. Dishes are washed and dried in 60 minutes.



SILENT: Wash cycle suitable for normally soiled dishes, even with dried-on residues. Ensures maximum noise reduction and is therefore ideal if you wish to run it during the night.



The Dry Assist + option, in addition to saving energy, ensures perfect drying of the dishes by opening the door automatically at the end of the washing cycle.



HYGIENE 99.9% High-temperature washing programme. The 75° rinse guarantees the removal of 99.9% of germs and bacteria.



Benefit (TT)

Active Light

Maximum control thanks to the light projected on the floor that indicates when the dishwasher is running and when the cycle is complete

Smeg dishwashers equipped with ActiveLight signal the appliance's activity status by projecting a light on the floor while the cycle is running. The light goes out at the end of the cycle, signalling that the dishwasher can be unloaded.

FlexiDuo

The flexible third basket provides additional space, adapting to the load to accommodate various types of dishes, ensuring optimal organization and efficient use of interior capacity

The third FlexiDuo basket consists of two separate sections that can be handled independently of each other, stacked and/or removed, offering loading flexibility for every need. Depending on the arrangement, it allows cups, tall glasses, bulky utensils and pots and pans to be placed in the upper basket.

Planetarium Wash System

Full and deep wash coverage thanks to the advanced movement of the spray arm, an innovation patented by Smeg

Smeg's patented Planetarium Wash System guarantees impeccable cleaning. With a simultaneous double movement of the sprayer and 65 rotations per minute, it reaches every nook and cranny for extraordinary results. Dishes, glasses and utensils will be perfectly clean in no time. An intelligent system where efficiency and style meet, delivering brilliant results effortlessly.

Extra Glide Telescopic Guides

Smoother and more stable loading and unloading operations

Extra Glide telescopic guides ensure smooth and safe extraction of the upper basket, even with heavy loads. The telescopic design ensures smooth, stable and silent movement, improving ergonomics and convenience. Ideal for optimising space and ease of use, they combine durability and comfort in every washing operation.

DryAssist+

The Dry Assist+ system of automatic door opening at the end of the cycle ensures fast and energy-efficient drying