

STL324AQLH



Product Family Commercial width Commercial height Installation Kitchen panel N° baskets Motor EAN code Dishwashers 60 cm 86 cm Fully-integrated built-in Not supplied 3, FlexiDuo with Easy Glide Inverter 2.0 8017709338824



Programs

(27min 45° 60 ECO 50°	AUTO 65°		
N. of programmes	12+2	Auto sensor 45-65	Yes
Washing temperatures	38, 45, 50, 55, 65, 70, 75 °C	Mix	Yes
Soak	Yes	Quiet (-2 dB)	Yes
Express 27'	Yes	Intense	Yes
Crystal	Yes	Self clean	Yes
Full express - 60	Yes	Hygiene 99,9%	Yes
minutes		Delicate	Yes
ECO	Yes	Trays	Yes
Green express	Yes		

Options



Dry Assist+ option Delay timer option 1/2 load FlexiZone option Yes Up to 24 hours Yes Special programs option Yes Clean&Shine option Yes

Baskets



Basket colour Basket components colour Grey Grey Sliding Guides Extra Yes Glide

SMEG SPA



Handle

Upper Basket Glass holder Height adjustment of the upper basket

In plastic with stainless steel insert on upper and lower basket With 3 foldable racks Yes On three levels (5 cm)

Largest loadable dish in 19,0 cm upper basket

With 4 foldable racks Lower Basket Lower basket with anti- Yes drip inserts Largest loadable dish in 35,0 cm lower basket Colour Inner Blue Components

Technical Features

	FLEXI FIT			
Width (mm)	598 mm	Max water hardness	100°fH;58°dH	
Depth (mm)	550 mm	Drying system	Natural condenser drying,	
Display type	LED display		with Dry Assist + automatic	
Product Height (mm)	858 mm		door opening system at the end of the cycle	
	Electronic touch control	Steam protection	In plastic	
	Delayed start, Programme time indicator, Consumptions	Tub material	Stainless steel	
		Filter	Stainless steel	
Programme graphics	Symbols	Concealed heating element	Yes	
Salt light indicator	ght indicator Light			
Rinse aid indicatorLightEnd of cycle indicatorActiveLightWard bitDiamond bit	Hinges	Self balancing, Sliding, FLEXIFIT		
	•	Min. and max. frontal	2,5 - 10 kg	
Washing system	Planetarium	panel weight		
Thira spray arm Water softener	hird spray arm Single	Min. and max plinth	50 - 215 mm	
	With electronic setting	height		
Turbidity sensor Aquatest	Yes	Can be installed in- column	Yes, with siphon	
Flood protection system	Total Acquastop	Adjustable feet	7cm, from 860 to 930 mm	
Water supply	Single; cold/hot water max. 60°C - energysave with hot water up to 35%	Additional gaskets	Yes, with stainless steel plate	
		Back cover	Yes	
		Depth of dishwasher with open door (mm)	1168	
		Back feet adjustable from front	Yes	
		Top cover	In plastic	

Performance / Energy Label - Reg. 2019

000 ₩42 dB 101 A 1 Energy Efficiency Class А **Energy consumption** [per 100 cycles, based on the eco programme] Rated capacity (ps) 14 Water consumption [per 10,5 litres


54 KWh

Programme duration 4:35 h:min Airborne acoustical 42 dB(A) re 1 pW noise emissions Airborne acoustical В noise emission class **Energy efficiency Index** 31,8 (EEI)

cycle]



Electrical Connection

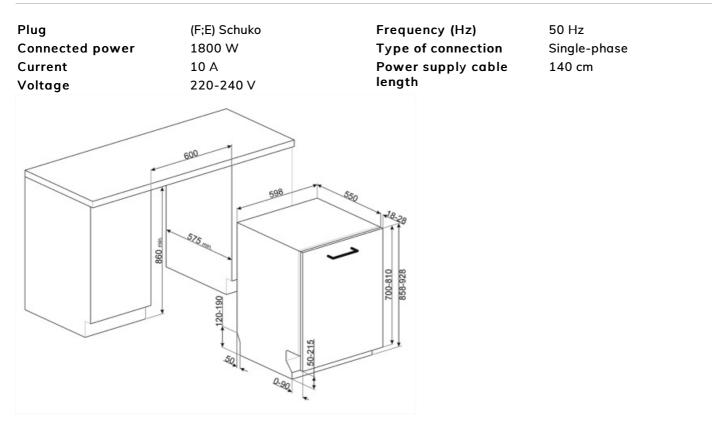



Not included accessories



KIT86CX-1

Door kit, stainless steel, Canali handle, fully integrated dishwasher h.86 cm Compatible with models with Flexifit and fixed fulcrum hinges.

Kit for 60cm dishwashers with FlexiFit

hinges for door panel weight >11 kg

Toekick Kit in White colour with

fulcrum or flexifit hinges.



KIT86PORTWH-1



KIT86PORTAN-1

KIT86PORTX-1

KITGH

Kit glass holder. It has to be fitted on the first basket but only if there are foldable racks

KITPL60N

Toekick Kit in Black colour with adjustable height and deepness. Can be installed over all the fully integrated and underbench models with variable fulcrum or flexifit hinges.

KITPLV2

Kit extension for dishwasher and washing machine: lenght mt. 2



KITFLEXI



(max 15 kg 82 cm and 13,5 kg 86 cm)



installed over all the fully integrated and underbench models with variable

KITPL60X

KITPL60B



Toekick Kit in Stainless Steel with adjustable height and deepness. Can be fitted over all the fully integrated and underbench models with variable fulcrum or flexifit hinges.

adjustable height and deepness. Can be





Symbols glossary

ACTIVE	Activelight is an led light which projects a red spot onto the floor beneath the dishwasher when the appliance is in use.	AQUAYEST	The Aquatest sensor is an electronic sensor that measures the degree of water transparency at the end of the initial soaking phase. ased on the values measured, the sensor sets the most suitable programme, thus obtaining the best washing results with the minimum amount of water.
۲	To improve the drying of dishes without leaving stains.	A A	Energy efficiency class A
li	Clean&Shine option: For perfect cleaning results, this option adds an extra rinse to the wash cycle, which also gives the dishes a higher gloss.		Installation in column: Installation in column
86 cm	86 cm high	$\overline{\mathbb{O}}$	Delay Timer: Option to postpone the start of the desired programme by up to 24 hours in order to programme the dishwasher to run at the desired time.
	The Dry Assist + option, in addition to saving energy, ensures perfect drying of the dishes by opening the door automatically at the end of the washing cycle.		FlexiDuo: The FlexiDuo 3rd cutlery basket allows you to arrange cutlery or small cups, ladles, or bulky utensils however you like: it consists of two separate and moveable modules.
FLEXI FIT	The FlexiFit hinges allow the kitchen panel to slide over the dishwasher door, allowing a minimum kitchen plinth height of 5 cm.	(ž)	FlexiZone: The ½ load flexizone allows you to wash a reduced load saving energy, water and time and there are no restrictions on where the items are placed.
VENCE OF REPRACEUTE		55°	GREEN EXPRESS Washing programme with low water and energy consumption.
	The ExtraGlide guides system makes the second basket run even smoother and softer. It facilitates movement even when fully loaded, and thanks to the increased excursion, facilitates the insertion of dishes into the basket.	NYTETES 20	The work aimed at continuous improvement has allowed the creation of the second generation of the Inverter motor 2.0, characterised by greater efficiency and durability over time, which allows very high performance and a lower energy consumption and noise level.
42dB	Noise Level: Excellent insulation and special devices keep noise to a minimum.	Þ	The Planetarium washing system, with high rotations per minute, guarantees complete coverage of the tank, thanks to the simultaneous rotation of base and sprayers, and excellent washing results.
AUTO 45°-65°	Auto 45°- 65°: The auto programme regulates the length of a cycle depending on the need for a pre-wash and the number of rinses required.	Q _{45°}	Crystals: The Crystals programme is dedicated to delicate dishes such as glasses and china.
0 	Delicate: Delicate washing program is designed for delicate dishes which are not heavily soiled.	ECO 50°	Eco: Eco, this economic wash programme uses a low amount of water and energy in order to provide the most environmentally friendly cleaning option.

•se•smeg

65))))	Mix: The Mix programme is suitable for mixed crockery and everyday pots and pans, without any particular incrustation.	<u>۳</u>	Soak programme: The soak programme provides a rinse to prevent dirt from drying.
27min	Express 27': The Express 27' programme is a quick wash cycle, at low temperatures, for lightly soiled dishes.	70°	Ultraclean: The Ultraclean option performs a final rinse at a high temperature of 70°c eliminating virtually all bacteria.
ıŌı	14 place settings: Number of place settings.	Accuration -	Total Acquastop: In addition to the partial Acquastop protection present in all Smeg dishwashers, some models have an electronic device fitted to the water intake hose, which monitors water levels in the machine, detects leaks in the hose and switches off the water supply immediately when necessary.
Ŷ	Touch controls: Easy to use touch controls allow the appliance to be programmed at the touch of a button.	000 10,5it	System WaterSave ensures the best washing results with minimal water consumption depending on the model of dishwasher.
60 min	Quick wash cycle for normally soiled mixed loads such as dishes and pans, even with dried-on residues. Dishes are washed and dried in 60 minutes.		Dishwasher cleaning cycle. The cycle should be started with the machine empty, without dishes. It is recommended to run the program every 2-3 months, using special dishwasher detergents.
ৰ্শ	SILENT: Wash cycle suitable for normally soiled dishes, even with dried-on residues. Ensures maximum noise reduction and is therefore ideal if you wish to run it during the night.	Ś	Allows you to enable additional programs when selected together with any wash cycle. After having selected the required wash cycle, press the button (
<i>.</i>	Baking tray programme: for intensive cleaning of the oven trays. Place the trays in the lower basket of the dishwasher.	1 75°	HYGIENE 99.9% High-temperature washing programme. The 75° rinse guarantees the removal of 99.9% of germs and bacteria.



Benefit (TT)

Glassy Touch Display

The easy and intuitive lexan touch display guides the user towards conscious and sustainable choices, reducing waste

The display, featuring indicators for dirt level, water usage, and energy consumption, enables users to optimise efficiency, minimise waste, and address daily needs with an eco-conscious approach. With a range of available options, it allows for customised washing and consumption settings tailored to individual preferences, consistently delivering exceptional results with minimal environmental impact.

Active Light

Maximum control thanks to the light projected on the floor that indicates when the dishwasher is running and when the cycle is complete

Smeg dishwashers equipped with ActiveLight signal the appliance's activity status by projecting a light on the floor while the cycle is running. The light goes out at the end of the cycle, signalling that the dishwasher can be unloaded.

FlexiDuo

The flexible third basket provides additional space, adapting to the load to accommodate various types of dishes, ensuring optimal organization and efficient use of interior capacity

The third FlexiDuo basket consists of two separate sections that can be handled independently of each other, stacked and/or removed, offering loading flexibility for every need. Depending on the arrangement, it allows cups, tall glasses, bulky utensils and pots and pans to be placed in the upper basket.

Planetarium Wash System

Full and deep wash coverage thanks to the advanced movement of the spray arm, an innovation patented by Smeg

Smeg's patented Planetarium Wash System guarantees impeccable cleaning. With a simultaneous double movement of the sprayer and 65 rotations per minute, it reaches every nook and cranny for extraordinary results. Dishes, glasses and utensils will be perfectly clean in no time. An intelligent system where efficiency and style meet, delivering brilliant results effortlessly.

Flexifit hinge system

Smooth-running door for optimal integration into the kitchen deisgn

The height of the plinth can vary from 5 cm to 21.5 cm, allowing it to fit perfectly into the cabinet. Thanks to this solution, the dishwasher blends harmoniously into its surroundings, with the door and plinth perfectly aligned with the other kitchen furniture.

Extra Glide Telescopic Guides

Smoother and more stable loading and unloading operations

Extra Glide telescopic guides ensure smooth and safe extraction of the upper basket, even with heavy loads. The telescopic design ensures smooth, stable and silent movement, improving ergonomics and convenience. Ideal for optimising space and ease of use, they combine durability and comfort in every washing operation.



DryAssist+

The Dry Assist+ system of automatic door opening at the end of the cycle ensures fast and energy-efficient drying